

CORTEX EBC

USER MANUAL

VERSION 6.4.5 | REVISION A

TABLE OF CONTENTS

INSTALLATION	5
Included Parts.....	6
Complete Kit.....	6
Base Kit.....	7
Wiring	8
General Wiring Guidelines	8
Wiring Harness Pinout and Signal Descriptions	9
Compatible RPM Signals.....	10
Compatible Vehicle Speed Signals	11
Compatible General-Purpose Input Signals	12
Connecting GM/Continental Flex-Fuel Sensor To GPI.....	13
Connecting External Buttons to Inputs	14
Auxiliary Output Wiring.....	20
Manifold Pressure Reference	21
Boost Control Solenoid Plumbing – Single Turbo	22
3-Port Internal Wastegate/Actuator Configuration	22
3-Port External Wastegate Configuration 1	23
3-Port External Wastegate Configuration 2	24
3-Port External Wastegate Compressed Air Configuration	25
4-Port External Wastegate Configuration	26
Boost Control Solenoid Plumbing – Twin Turbo.....	27
3-Port Internal Wastegate/Actuator Configuration	27
3-Port External Wastegate Configuration 1	28
3-Port External Wastegate Configuration 2	29
3-Port External Wastegate Compressed Air Configuration	30
4-Port External Wastegate Configuration	31
DEVICE OPERATION	32
Top Button Function Mode	33
Menu System.....	34
Changing Boost Control Profile	35
Enabling Internal Logger	36
Enabling Auxiliary Outputs.....	37
Changing Top Button Function Mode	38
Changing Gauge Data	40
Changing Boost Units	42
Changing Display Brightness	43


SOFTWARE	44
USB Connection	45
Installing the USB Drivers Manually	46
Viewing and Editing Boost Configuration Files	47
Editing Tables	48
Profile Copy/Paste.....	50
Gear-Based Dialog Copy/Paste.....	50
Apply Gear 1 Changes to All Gears.....	51
Setting Colors	51
Data Logging	52
Data Acquisition	52
Logger Views	53
Replaying a Log.....	53
Comparing Two Runs	54
Remote Control	54
Logger Keyboard Shortcuts	55
Internal Logger	56
INPUT SIGNAL CONFIGURATION.....	57
RPM Input.....	58
RPM Calibration Procedure	59
Speed Input	60
Speed Calibration Procedure	61
General-Purpose Input	64
GPI Calibration Procedure	65
Gear Detection Tab.....	66
Gear Detection Calibration Procedure	67
BOOST CONTROL.....	74
Boost Control Settings	75
Configuration	75
Open-Loop.....	82
Closed-Loop.....	88
Launch	94
Fail-Safes	99
Additional Notes for Boost by RPM	105
Additional Notes for Boost by Speed.....	105
Additional Notes for Boost by Time	105
Additional Notes for Compressed Air Boost Control	105
AUXILIARY OUTPUTS	106

Output Configuration	107
Primary Output Activation Criteria	107
Alternate Output Functions	110
PWM Configuration.....	110
SUPPORT	113

INSTALLATION

WARNING: It is strongly recommended that the Cortex EBC (Electronic Boost Controller) device be installed by an automotive professional. Improper installation can result in damage to both your vehicle and the Cortex EBC device.

WARNING: The Cortex EBC should be mounted inside the vehicle to protect it from dirt, moisture, excessive heat, and other environmental elements. The device is not waterproof, and exposure to moisture can cause damage.

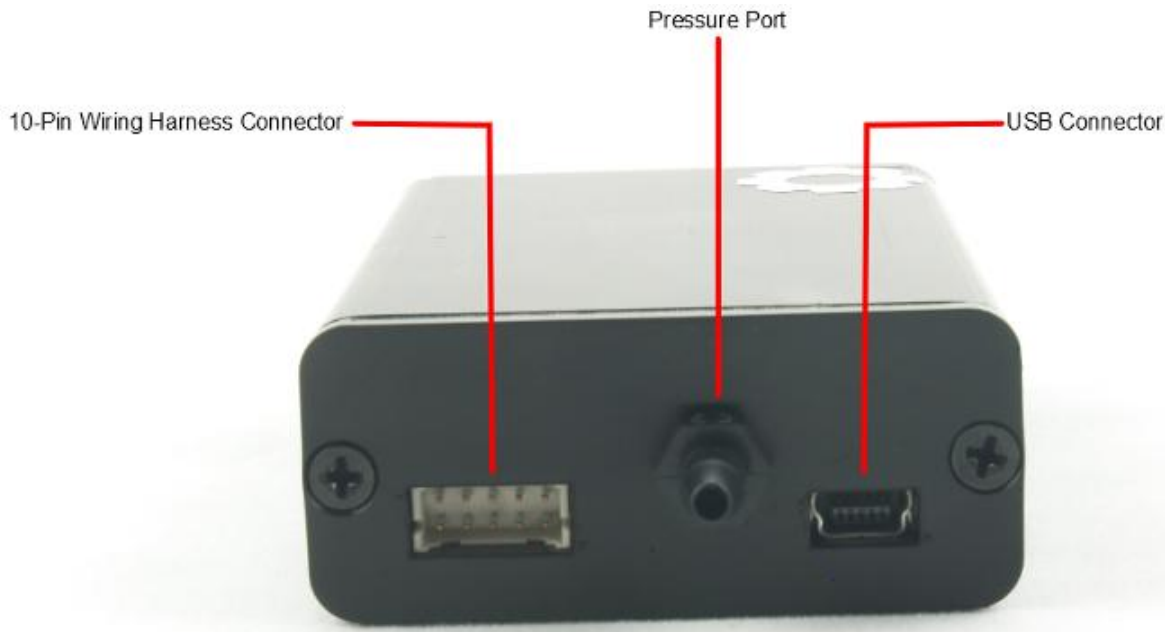

Cortex EBC installation requires the completion of the following steps:

- [Connect the Cortex EBC wiring harness to the appropriate signals in your vehicle's electrical system.](#)
- [Connect the Cortex EBC device to a suitable intake manifold pressure reference.](#)
- [Connect the boost control solenoid to your vehicle's turbocharger\(s\) and wastegate\(s\).](#)

After installation, you will need to create a vehicle configuration file for your application.

- [Using the Cortex Config Software](#)
- [RPM Input Configuration](#)
- [Speed Input Configuration](#)
- [General-Purpose Input Configuration](#)
- [Gear Detection Configuration](#)

With installation and vehicle configuration complete, you can begin adjusting boost.

- [How the Cortex EBC Controls Boost](#)
- [Profile Configuration](#)
- [Open-Loop Boost Control](#)
- [Closed-Loop Boost Control](#)
- [Boost Control Fail-Safes](#)

INCLUDED PARTS

COMPLETE KIT

			
CORTEX EBC DEVICE	3-PORT OR 4-PORT BCS		
			
USB MINI-B CABLE	CORTEX EBC WIRING HARNESS	FUSE HOLDER AND 2 AMP FUSE	ZIP TIES QTY 12
			
3/16" SILICONE VACUUM HOSE 6 FEET	1/8" SILICONE VACUUM HOSE 10 FEET	3/16" HOSE BARB QTY 3	3/16" TO 1/8" HOSE REDUCER QTY 1
			
3/16" HOSE TEE QTY 2	1/8" HOSE TEE QTY 1		



WIRING

Wiring the Cortex EBC involves connecting between two and seven electrical signals to the wiring harness, depending on your specific application. Input signals to the Cortex EBC can originate from factory wiring, signal conditioning interfaces, aftermarket sensors, or external buttons. Output signals from the Cortex EBC may connect to devices such as other control modules, solid-state relays, or indicator lights.

When splicing into existing sensor signals, it is recommended to use solder and heat shrink for secure and reliable connections. If soldering is not feasible, [Posi-Tap](#) connectors are a good alternative. The “T Tap” or “Solderless Quick Splice” connectors from local parts stores are unreliable and should not be used under any circumstances.

NOTE: For all boost-by-gear applications, engine speed and vehicle speed signals are required. The vehicle speed signal must come from a “driven” source for the gear detection to function correctly. For example, on a rear-wheel-drive (RWD) vehicle, you cannot use a front-wheel speed signal.

WARNING: Improper electrical connections can result in unpredictable behavior and damage to the Cortex EBC device or the vehicle's electrical system.

WARNING: The power input on the Cortex EBC wiring harness (Pin 3) must be connected to a fused power source with 5A or smaller fuse. Failure to use a fused power source may result in damage to the Cortex EBC device.


WARNING: Do not connect the RPM input on the Cortex EBC wiring harness (Pin 8) to the secondary / high voltage side of an ignition coil.

GENERAL WIRING GUIDELINES


1. Disconnect the negative battery terminal.
2. Place the 10-pin connector of the Cortex EBC wiring harness near the Cortex EBC device.
3. Connect a 12V switched/fused power source and chassis ground to the Cortex EBC wiring harness.
4. Connect appropriate signals to the RPM, speed, and general-purpose inputs on the Cortex EBC wiring harness.
5. If applicable, connect output 1 and output 2 on the Cortex EBC wiring harness to the devices they will be controlling.
6. Route the solenoid sub-harness into the engine bay and plug the 2-pin connector into the boost control solenoid (complete kits) or boost control solenoid pigtail (base kits).
7. Plug the 10-pin wiring harness connector into the back of the Cortex EBC device. The harness should be plugged in such that the purple, red, orange, and black wires are towards the top of the Cortex EBC device.

See [this page](#) on our website for application-specific wiring guides.

WIRING HARNESS PINOUT AND SIGNAL DESCRIPTIONS

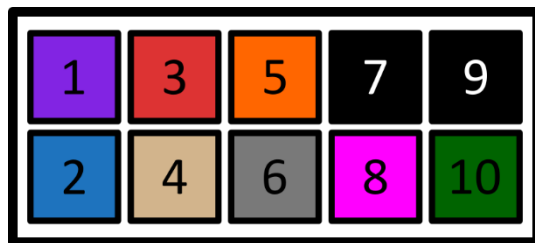

Wire Side of 10-Pin Connector with Pins Labeled

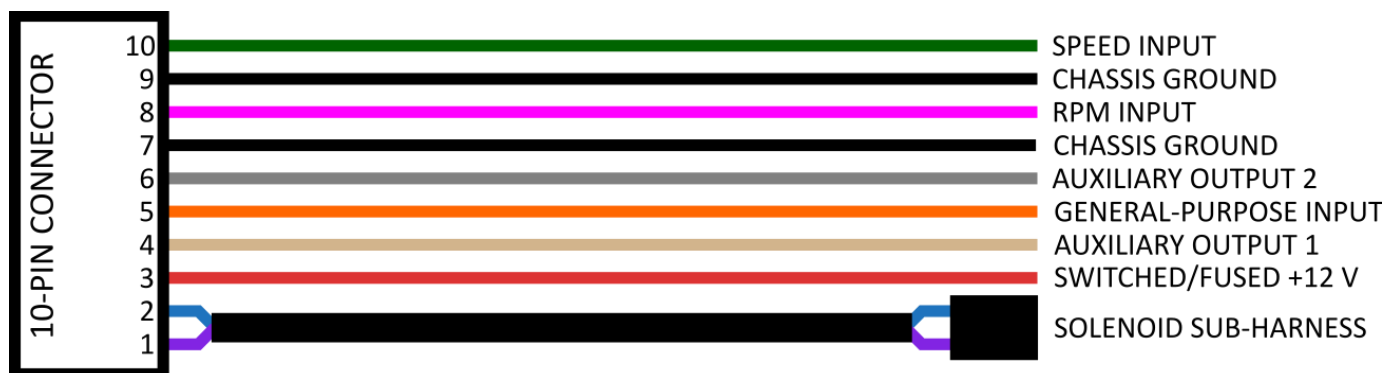

Wiring Harness Diagram

PIN	COLOR	DESCRIPTION	SIGNAL TYPE	CONNECTION DETAILS
1	PURPLE	Boost Control Solenoid Power	Power Output	Plug the 2-pin connector into the boost control solenoid or solenoid pigtail.*
2	BLUE	Boost Control Solenoid Trigger	Switch to Ground PWM Output	Plug the 2-pin connector into the boost control solenoid or solenoid pigtail.*
3	RED	Switched 12V	Power Input	Connect to switched and fused 12 V power source (fuse rating 5 A or less).
4	TAN	Output 1	Switch to Ground PWM Output	Resistive loads only. Cover end if unused. Max Current: 200 mA.
5	ORANGE	General-Purpose Input	Analog or Digital Input	Connect to an analog or digital sensor with linear output, launch button, transbrake bump button, or scramble button. Connect to chassis ground if unused. Min Voltage: 0 V. Max Voltage 16 V.
6	GRAY	Output 2	Switch to Ground PWM Output	Resistive loads only. Cover end if unused. Max Current: 200 mA.
7	BLACK	Chassis Ground	Ground Input	Connect directly to clean chassis ground (may not be present on older wiring harnesses).
8	PINK	RPM Input	Digital Input	Connect to an engine speed signal, launch button, transbrake bump button, or scramble button. Connect to chassis ground if unused.
9	BLACK	Chassis Ground	Ground Input	Connect directly to clean chassis ground.
10	GREEN	Speed Input	Digital Input	Connect to a vehicle speed signal, launch button, transbrake bump button, or scramble button. Connect to chassis ground if unused.

*Solenoids are not polarized, and either pigtail wire can be connected to either wire on the solenoid.

COMPATIBLE RPM SIGNALS

Engine speed signals compatible with the Cortex EBC are typically available in the factory wiring for most applications. However, older vehicles may require additional hardware to convert a VR sensor signal into a waveform that the Cortex EBC can detect.

The following engine speed signal types can be connected to the Cortex EBC (in order of preference):

- Tach signal from ECU/ECM/PCM or gauge cluster
- RPM output from [CAN Bus Wheel Speed and RPM Interface for Mustang / F-150](#)
- RPM output from [CB-2 CAN Bus Speed and RPM Interface](#)
- Cam or crank position sensor
 - The Cortex EBC can interpret any trigger wheel pattern with 60 teeth or less (tooth gaps will not cause any issues).
 - All 3-wire Hall sensors can be connected to the controller. An external pull-up resistor may be required if the sensor is connected to the Cortex EBC only.
 - Some 2-wire VR sensors can be connected directly to the controller without any additional hardware, but using a VR sensor interface such as the [Speed Sensor Adapter V2](#) or [VR To Hall Sensor Converter](#) is strongly recommended.
- Ignition coil trigger signal from ECU/ECM/PCM or ground (-) terminal on the primary (low voltage) side of an ignition coil
 - Electrical noise on some applications may prevent the Cortex EBC from accurately calculating RPM.
- Port fuel injector trigger signal from ECU/ECM/PCM (not compatible with gasoline direct injection)
 - Electrical noise on some applications may prevent the Cortex EBC from accurately calculating RPM.

See [this section](#) to learn how to configure the RPM input on the Cortex EBC.

COMPATIBLE VEHICLE SPEED SIGNALS

The Cortex EBC is compatible with vehicle speed signals that generate up to 192,000 pulses per mile. In most vehicles manufactured between 1988 and 2007, compatible signals can typically be found at the transmission, differential, ECU/ECM/PCM, or gauge cluster. However, older vehicles may require additional hardware to convert a VR sensor signal into a waveform that the Cortex EBC can detect.

For many vehicles manufactured after 2007, additional hardware is necessary to extract a vehicle speed signal from the CAN bus system or an ABS wheel speed sensor.

For optimal performance in boost-by-speed applications, the vehicle speed signal should come from an "undriven" source, e.g., the front wheels on a rear-wheel-drive (RWD) vehicle or the rear wheels on a front-wheel-drive (FWD) vehicle.


The following vehicle speed signal types can be connected to the Cortex EBC:

- Speed pulse output from ECU/ECM/PCM or gauge cluster
- Speed pulse output from [CAN Bus Wheel Speed and RPM Interface for Mustang / F-150](#)
- Speed pulse output from [CB-2 CAN Bus Speed and RPM Interface](#)
- Transmission output shaft speed sensor or differential speed sensor
 - All 3-wire Hall sensors can be connected to the controller. An external pull-up resistor may be required if the sensor is connected to the Cortex EBC only.
 - Some 2-wire VR sensors can be connected directly to the controller without any additional hardware, but using a VR sensor interface such as the [Speed Sensor Adapter V2](#) or [VR To Hall Sensor Converter](#) is strongly recommended.
- Wheel speed sensors
 - Active (2-wire Hall) ABS wheel speed sensors require the use of the [Speed Sensor Adapter V2](#). Most active sensors are compatible with this device. 2011+ Ford Mustang and F-150 applications can alternatively use the [Wheel Speed Sensor Adapter for Mustang / F-150](#).
 - Some passive (VR) ABS wheel speed sensors can be connected directly to the controller without any additional hardware, but using a VR sensor interface such as the [Speed Sensor Adapter V2](#) or [VR To Hall Sensor Converter](#) is strongly recommended.
 - If you have installed an aftermarket 3-wire Hall sensor to read wheel speed no additional modules are required, but your sensor may require an external "pull-up resistor" to generate a signal. Consult your sensor manufacturer for more information.

See [this section](#) to learn how to configure the speed input on the Cortex EBC.

COMPATIBLE GENERAL-PURPOSE INPUT SIGNALS

The general-purpose input is compatible with a wide range of analog (voltage) and digital (frequency) sensors that provide a linear output. A linear output means that when you plot the raw sensor output (volts or Hz) against the scaled sensor output, the result is a straight line, as illustrated in the chart below.

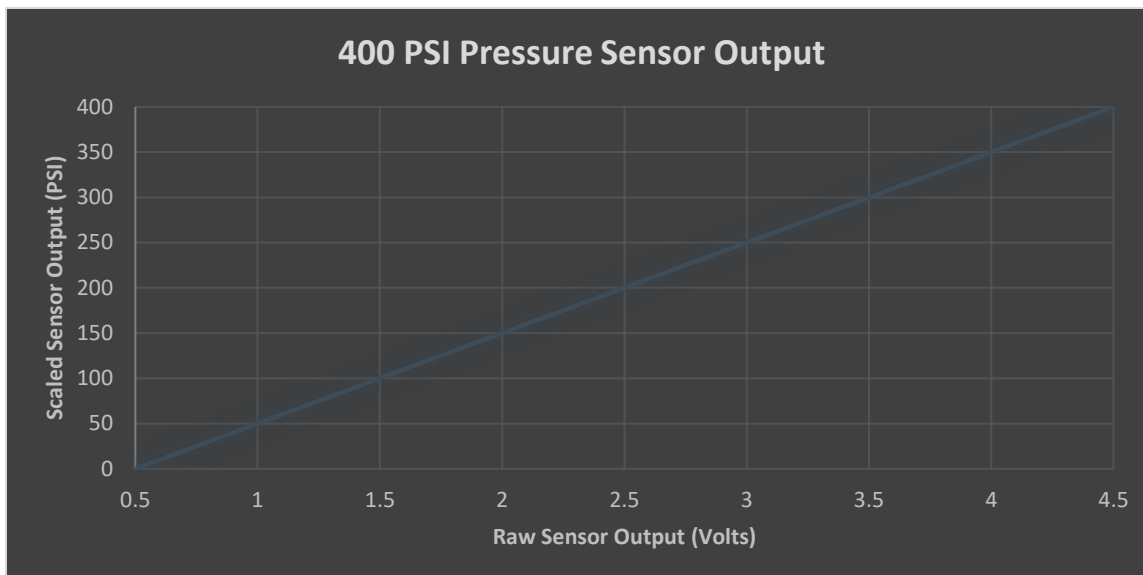

The general-purpose input can be used for various applications, such as monitoring throttle position, ethanol content, air-fuel ratio from a WBO2 controller, turbo speed, or water/methanol injection pressure or flow. Most temperature sensors produce a nonlinear output and cannot be interpreted by the Cortex EBC.

Min Voltage: 0 V

Max Voltage: 16 V

Max Frequency: 5,000 Hz


Logic Threshold: 2.5 V

See [this section](#) to learn how to configure the general-purpose input on the Cortex EBC.

CONNECTING GM/CONTINENTAL FLEX-FUEL SENSOR TO GPI

The output from GM/Continental flex-fuel sensors can be connected directly to the general-purpose input on the Cortex EBC wiring harness if your vehicle came equipped with a factory sensor, or if your sensor is already wired to your ECU/ECM/PCM or another device.

If the Cortex EBC will be the only device connected to the flex-fuel sensor, use the diagram below when installing your sensor. In this configuration, the Cortex EBC requires a pull-up resistor between the sensor's power and output wires to properly detect the sensor signal.

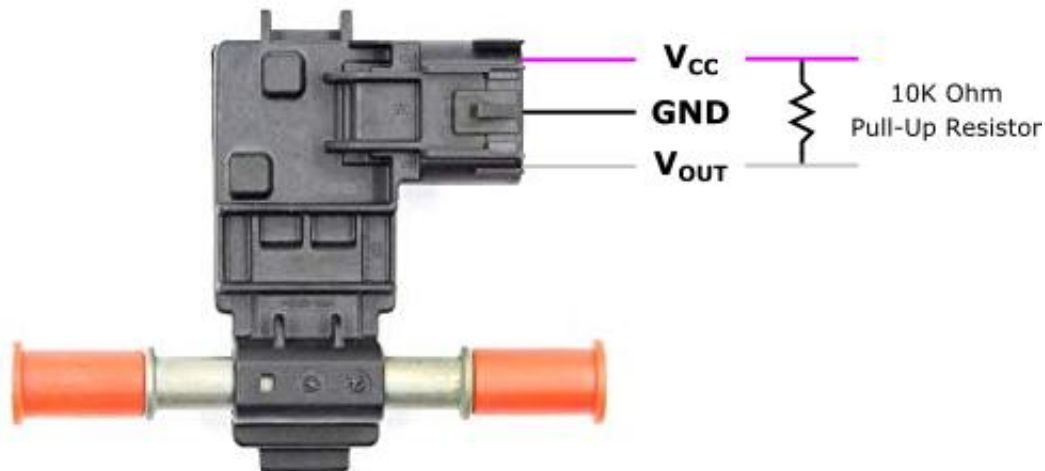


See [this section](#) to learn how to configure the general-purpose input on the Cortex EBC.


CONNECTING EXTERNAL BUTTONS TO INPUTS


In general, connecting an external button to the Cortex EBC will require the implementation of a simple “pull-up circuit” that requires an external resistor. This circuit is typically used for boost scramble control or transbrake bump control activation.


GENERAL-PURPOSE INPUT WARNING: When using the general-purpose input for launch boost control activation, the signal cannot come directly from a transbrake solenoid unless the transbrake bump function is being utilized in conjunction with a [Transbrake Bump Driver](#). If you do not plan to use the transbrake bump functionality available on the Cortex EBC, then a few additional components or a diode-protected relay will be required. See the diagrams on the following pages for additional information.


BOOST SCRAMBLE OR TRANSBRAKE BUMP INPUT FROM EXTERNAL BUTTON

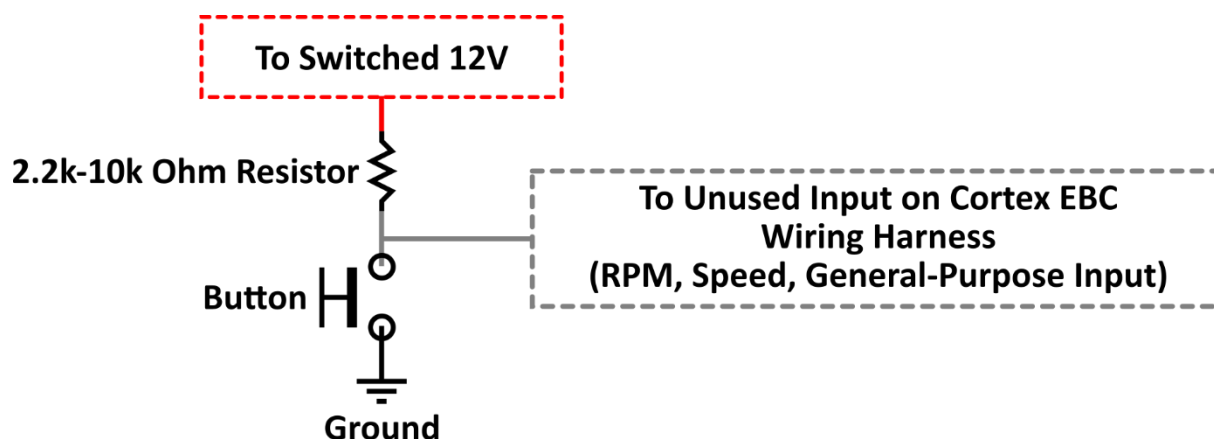


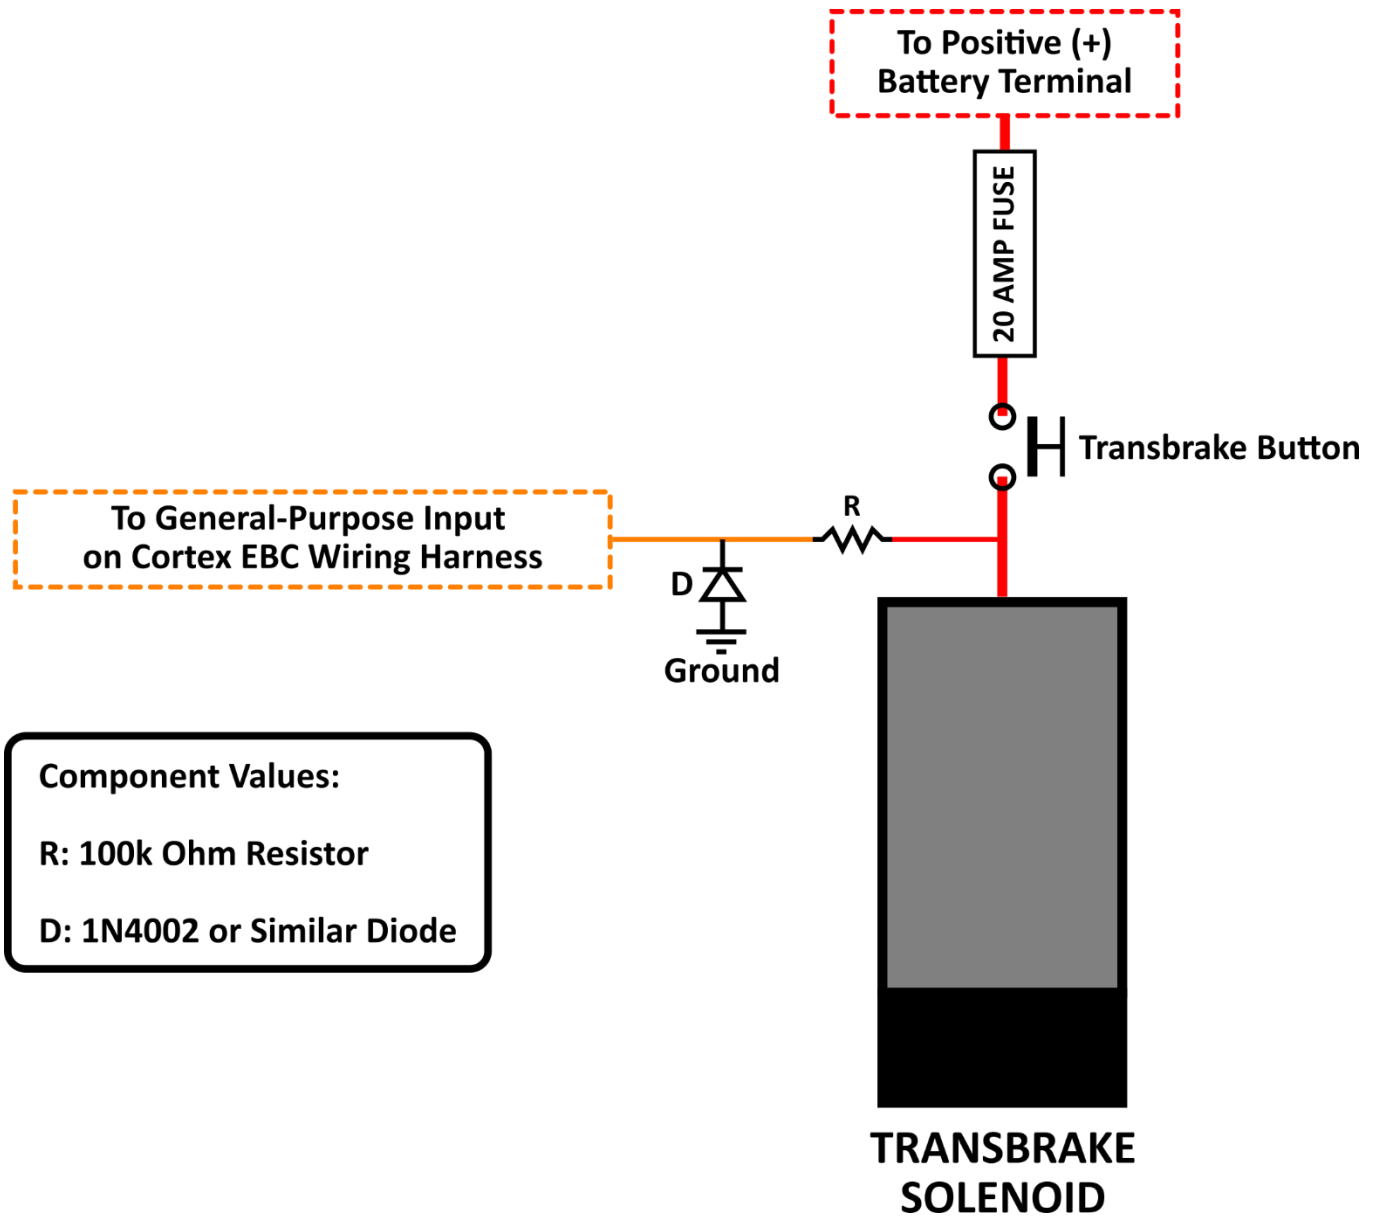

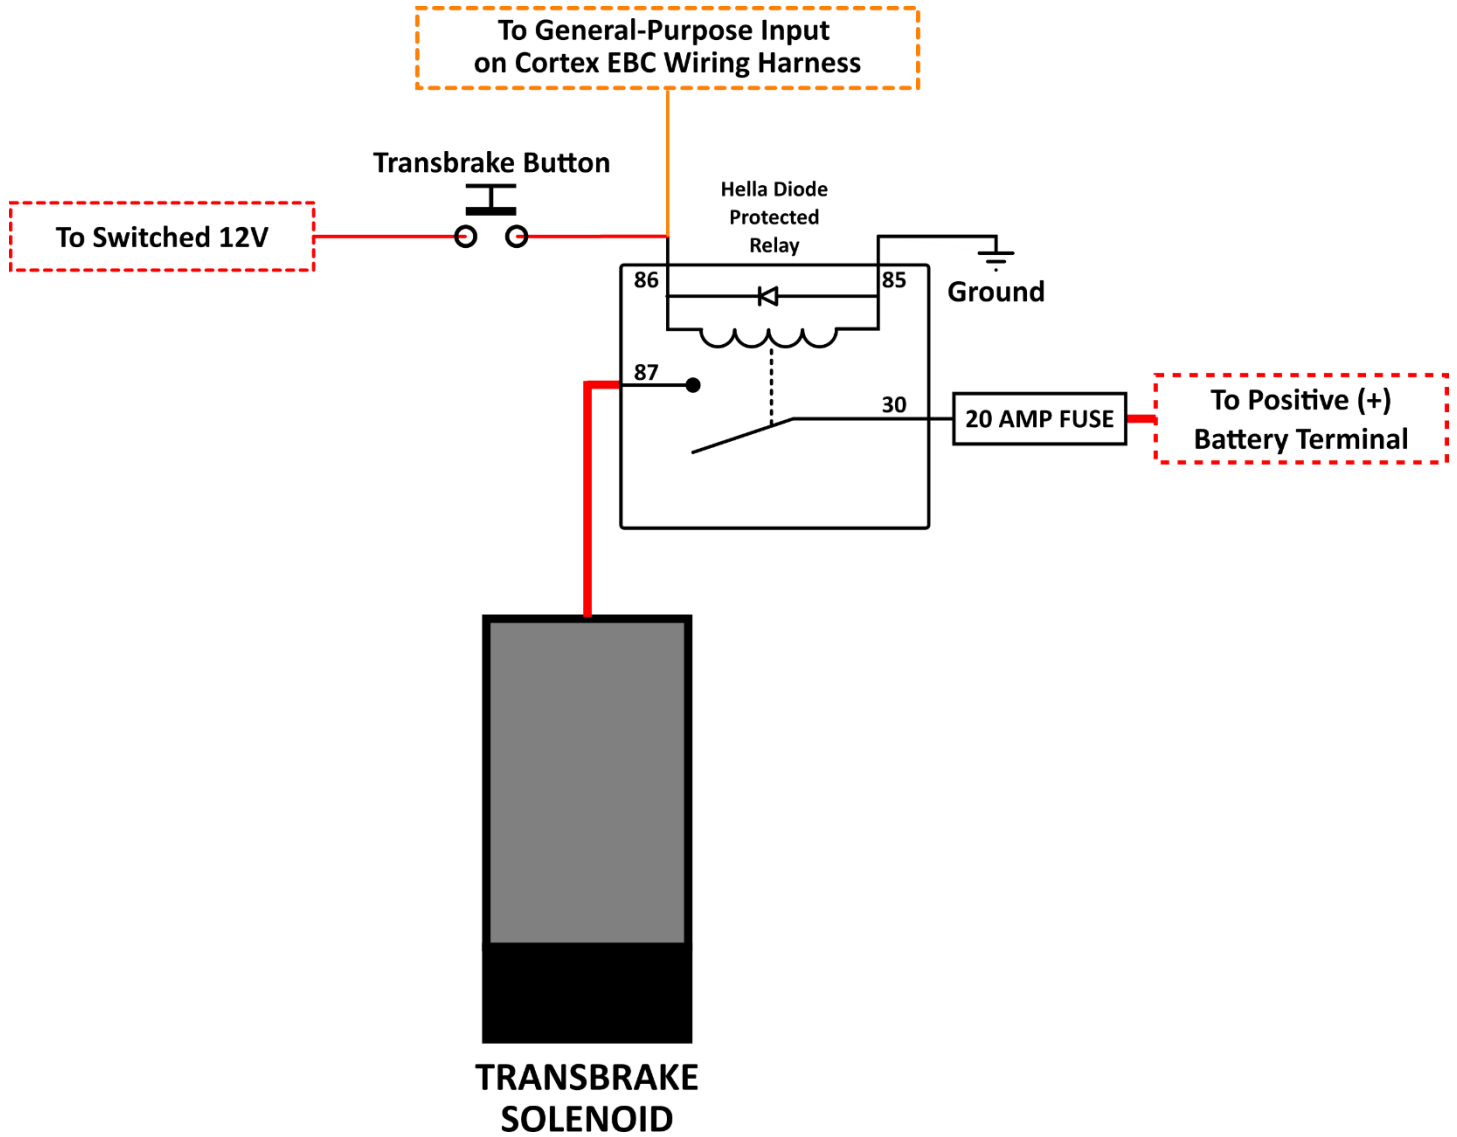

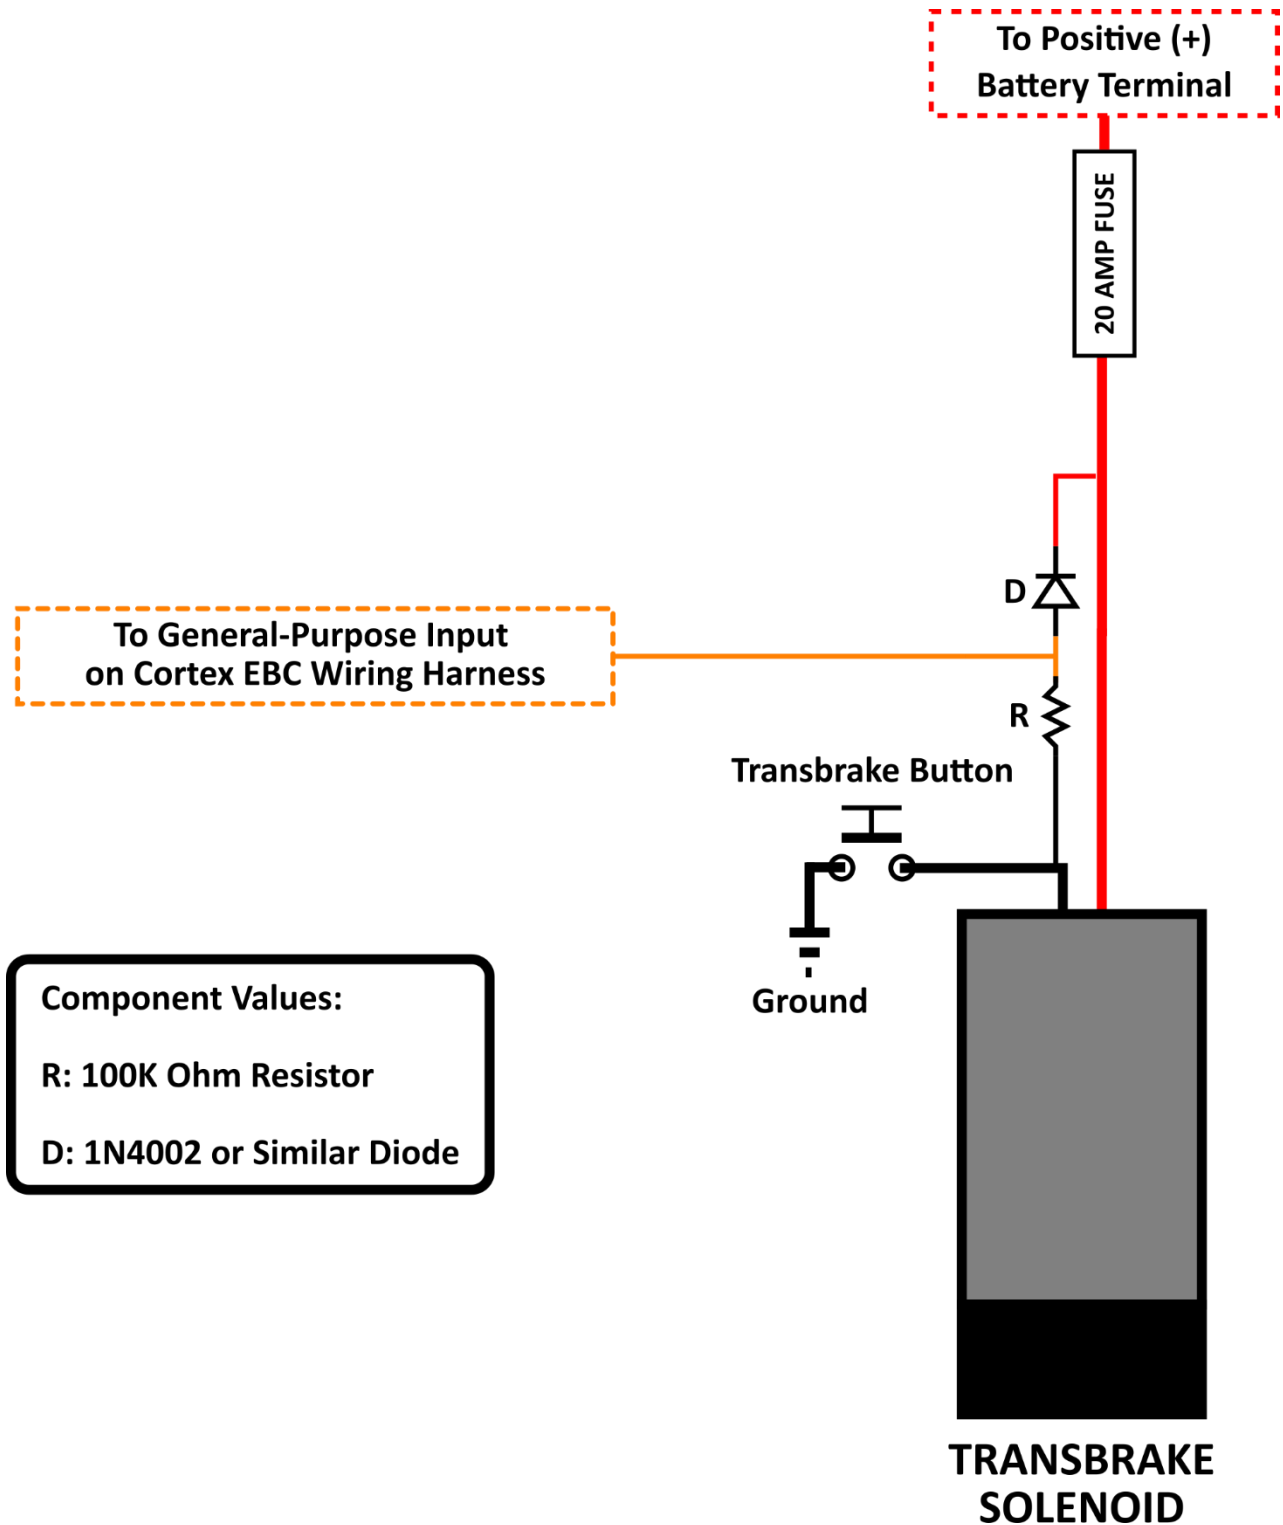

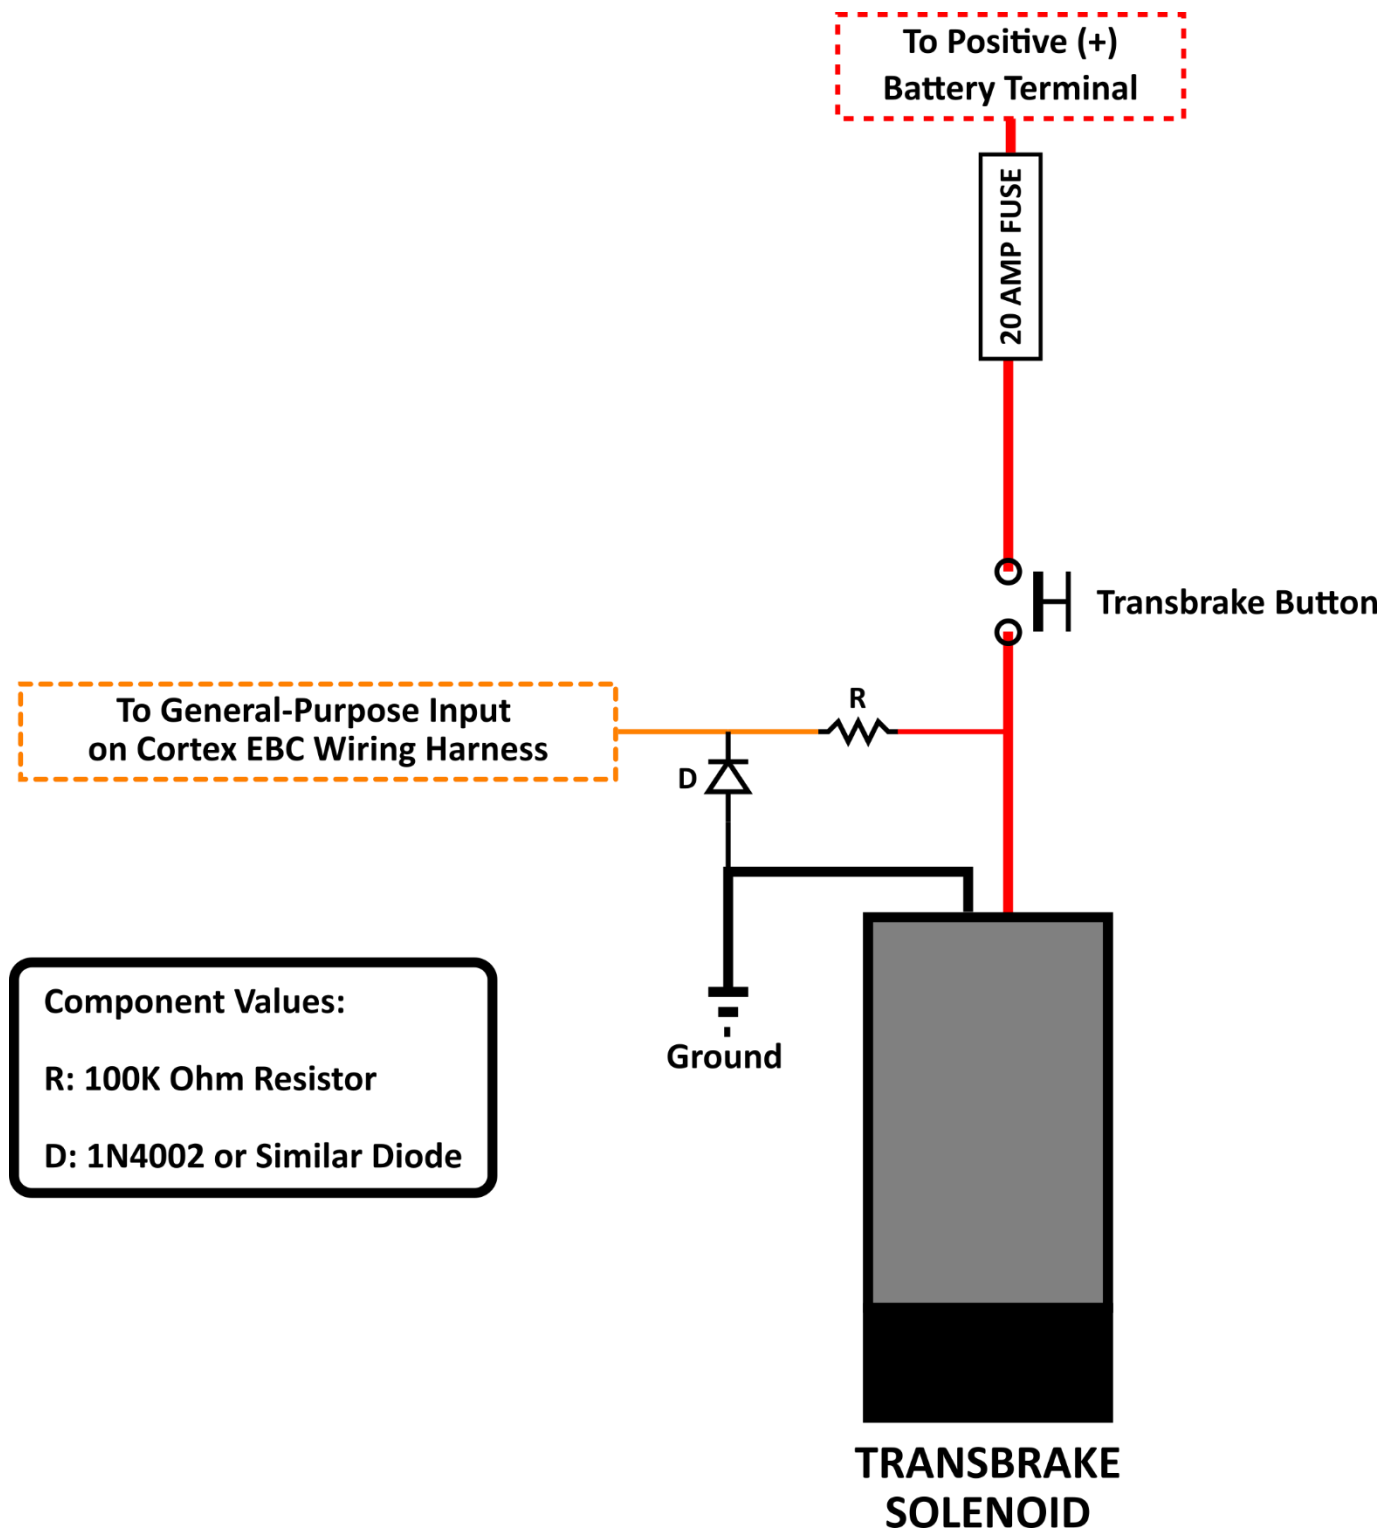

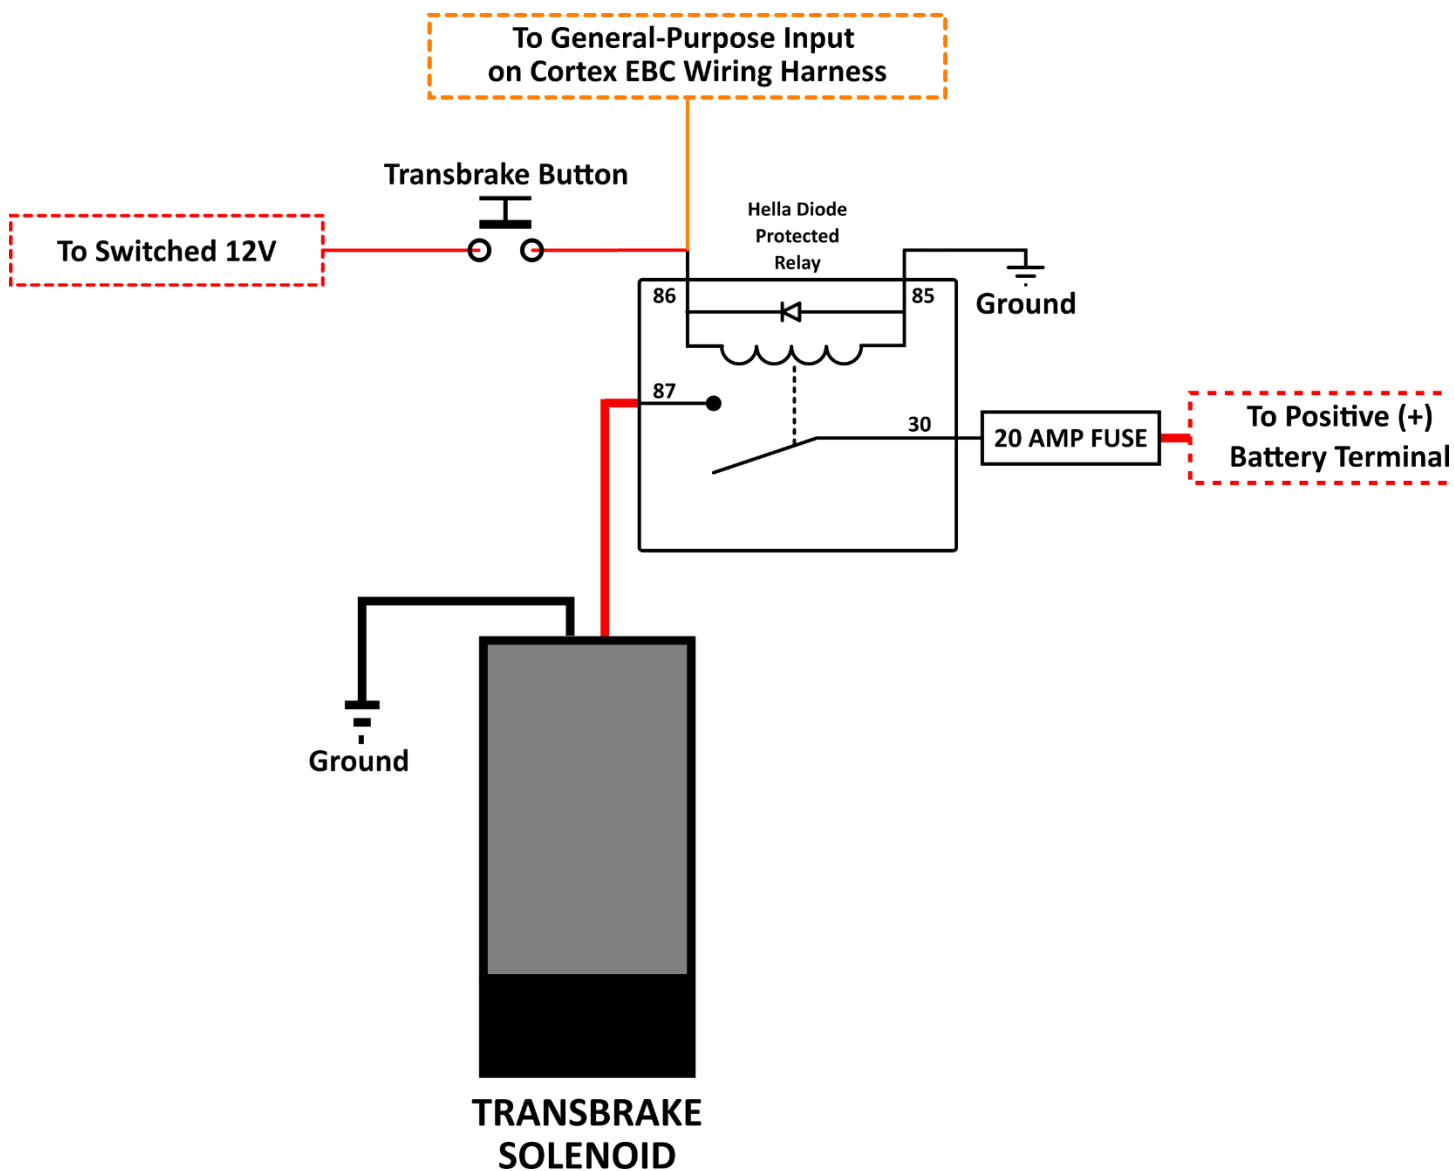

The outputs are ground-side switches. When an output is activated, it will switch from an open circuit (floating state) to ground.

The outputs can control resistive loads with a current draw of 200 mA or less (LEDs, inputs on SSRs, or inputs on other control devices).

The outputs cannot control standard electromechanical relays, solenoids, pumps, or motors without the use of additional electrical components to protect the Cortex EBC device.

The auxiliary outputs are known to be compatible with the following devices:

- Digital inputs on other control devices.
- Ground terminal on 12V compatible LED or incandescent bulb.
- Terminal 85 of Hella 933791091 or 007494041 Diode-Protected Relays
- Terminal 86 of Hella H41773001 / 931773987 Solid-State Relay
- Trigger wire of NOS 15620NOS Solid State Relay
- The control input (purple wire) on any SIRHC Labs Output Driver


Other diode-protected and solid-state relays may be compatible with the Cortex EBC. Please contact info@sirhclabs.com to find out if your relay can be controlled by the Cortex EBC.

See [this section](#) to learn how to enable the auxiliary outputs.


See [this section](#) for information on auxiliary output configuration.

MANIFOLD PRESSURE REFERENCE

To monitor and control boost pressure effectively, the pressure port on the back of the Cortex EBC device must be connected to a pressure reference on the intake manifold, located downstream of the throttle body. While the Cortex EBC cannot precisely measure vacuum pressure, it can detect the presence of engine vacuum. Using a pressure reference that is not located on the intake manifold may lead to unpredictable boost control performance.

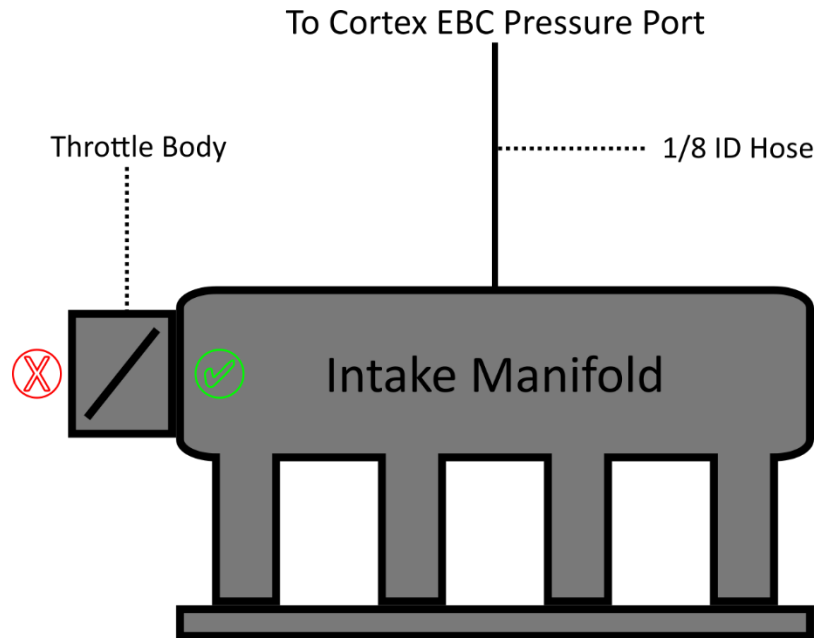


3-PORT INTERNAL WASTEGATE/ACTUATOR CONFIGURATION

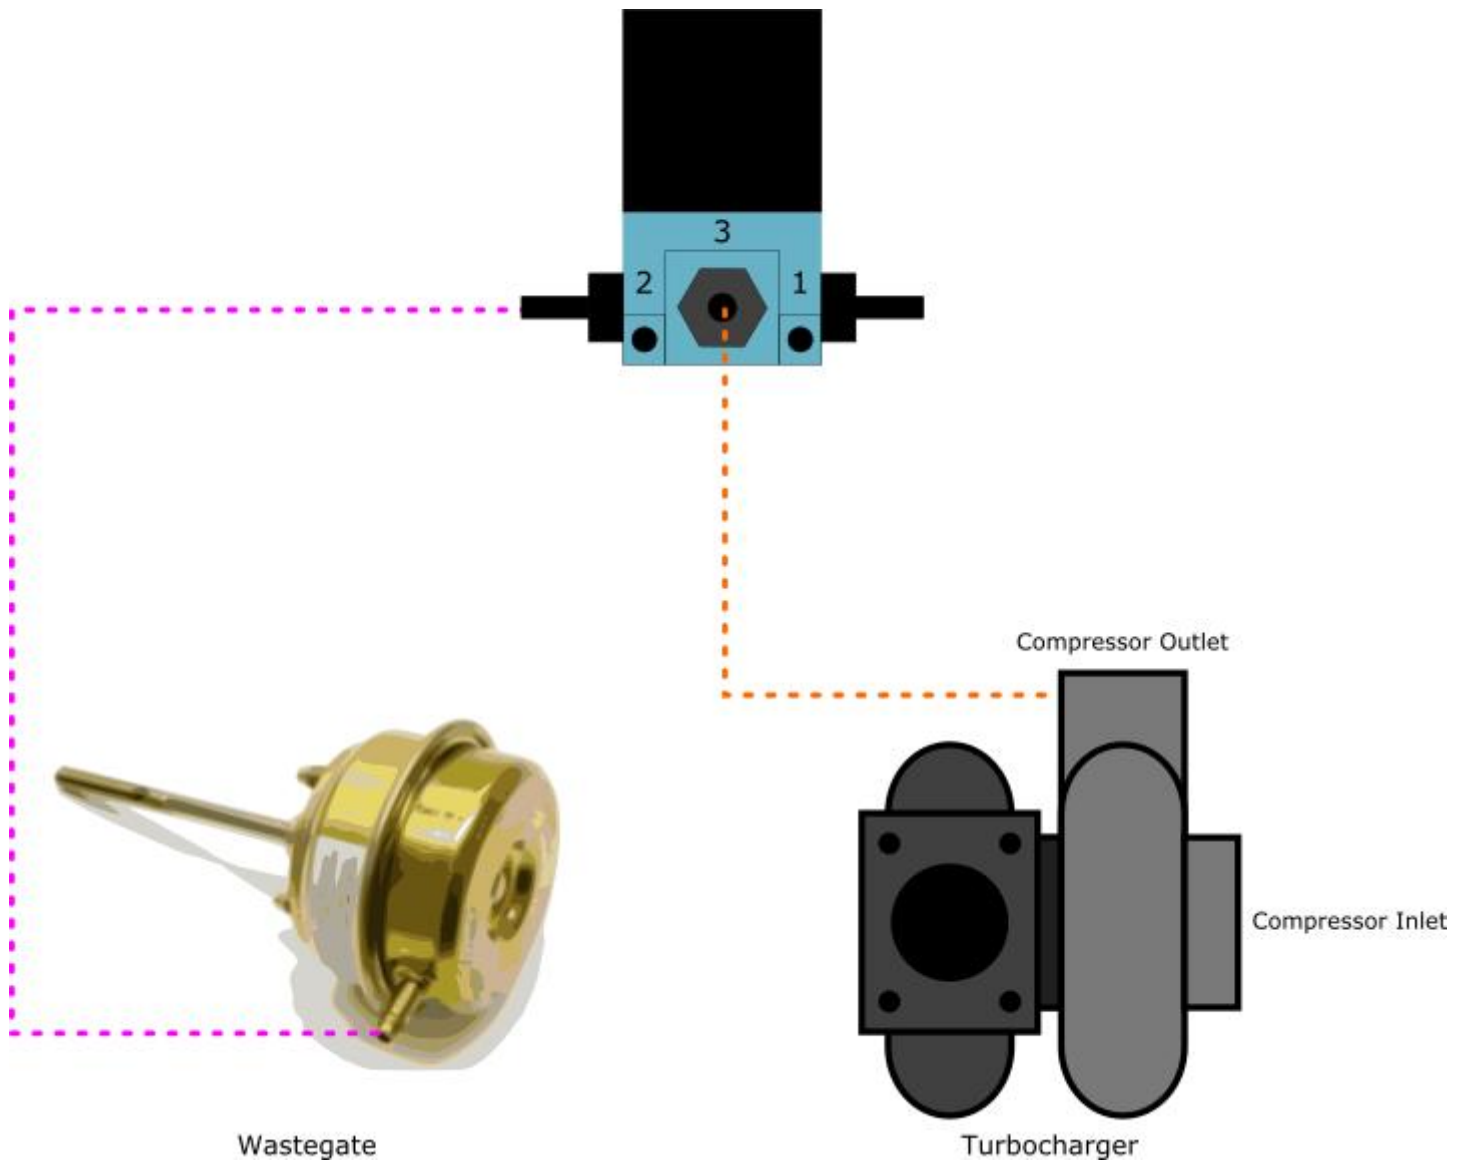


BCS Port 1	Leave open to the atmosphere.
BCS Port 2	Connect to the pressure port on the wastegate actuator.
BCS Port 3	Connect to a <u>dedicated</u> pressure reference that is as close to the compressor outlet on the turbo as possible. DO NOT connect to a pressure reference on the intake manifold.

3-PORT EXTERNAL WASTEGATE CONFIGURATION 1

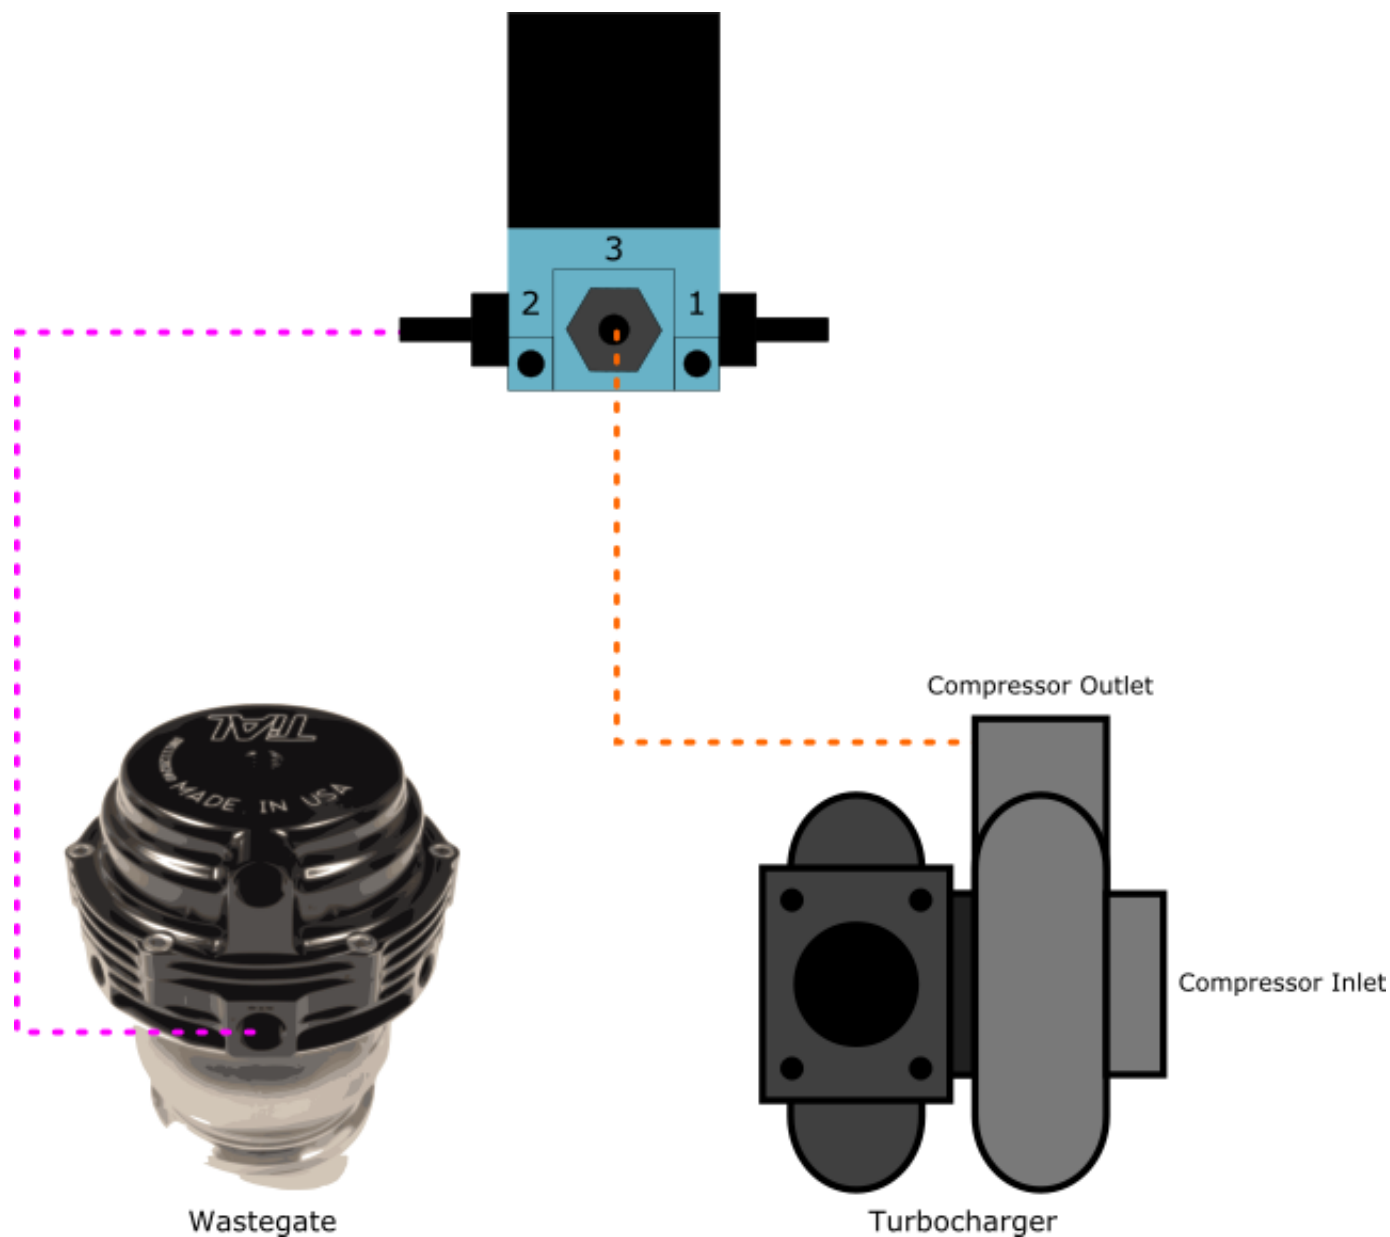


BCS Port 1	Leave open to the atmosphere.
BCS Port 2	Connect to a pressure port on the bottom wastegate chamber. Plug any additional pressure ports on the bottom wastegate chamber. NOTE: Leave pressure ports on the top wastegate chamber open to the atmosphere.
BCS Port 3	Connect to a dedicated pressure reference that is as close to the compressor outlet on the turbo as possible. DO NOT connect to a pressure reference on the intake manifold.

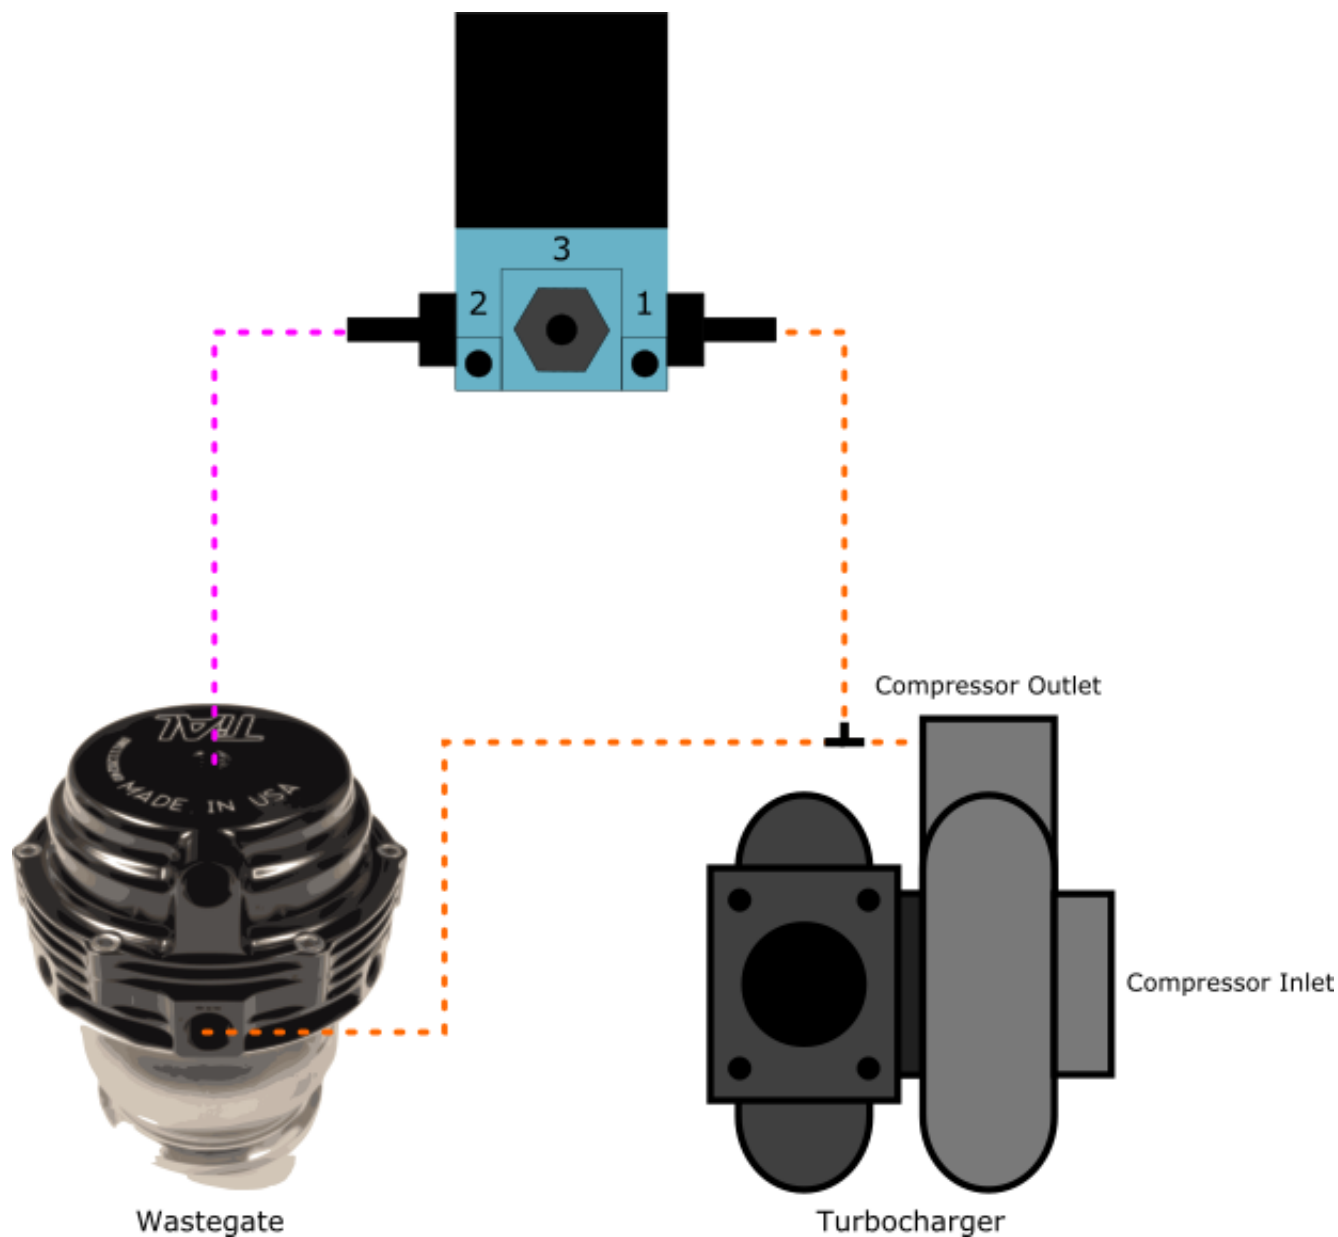


BCS Port 1	Using a hose tee fitting, connect to a <u>dedicated</u> pressure reference that is as close to the compressor outlet on the turbo as possible AND connect to a pressure port on the bottom wastegate chamber. Plug any remaining pressure ports on the bottom wastegate chamber. DO NOT connect to a pressure reference on the intake manifold.
BCS Port 2	Connect to a pressure port on the top wastegate chamber. Plug any remaining pressure ports on the top wastegate chamber.
BCS Port 3	Leave open to the atmosphere.

3-PORT EXTERNAL WASTEGATE COMPRESSED AIR CONFIGURATION

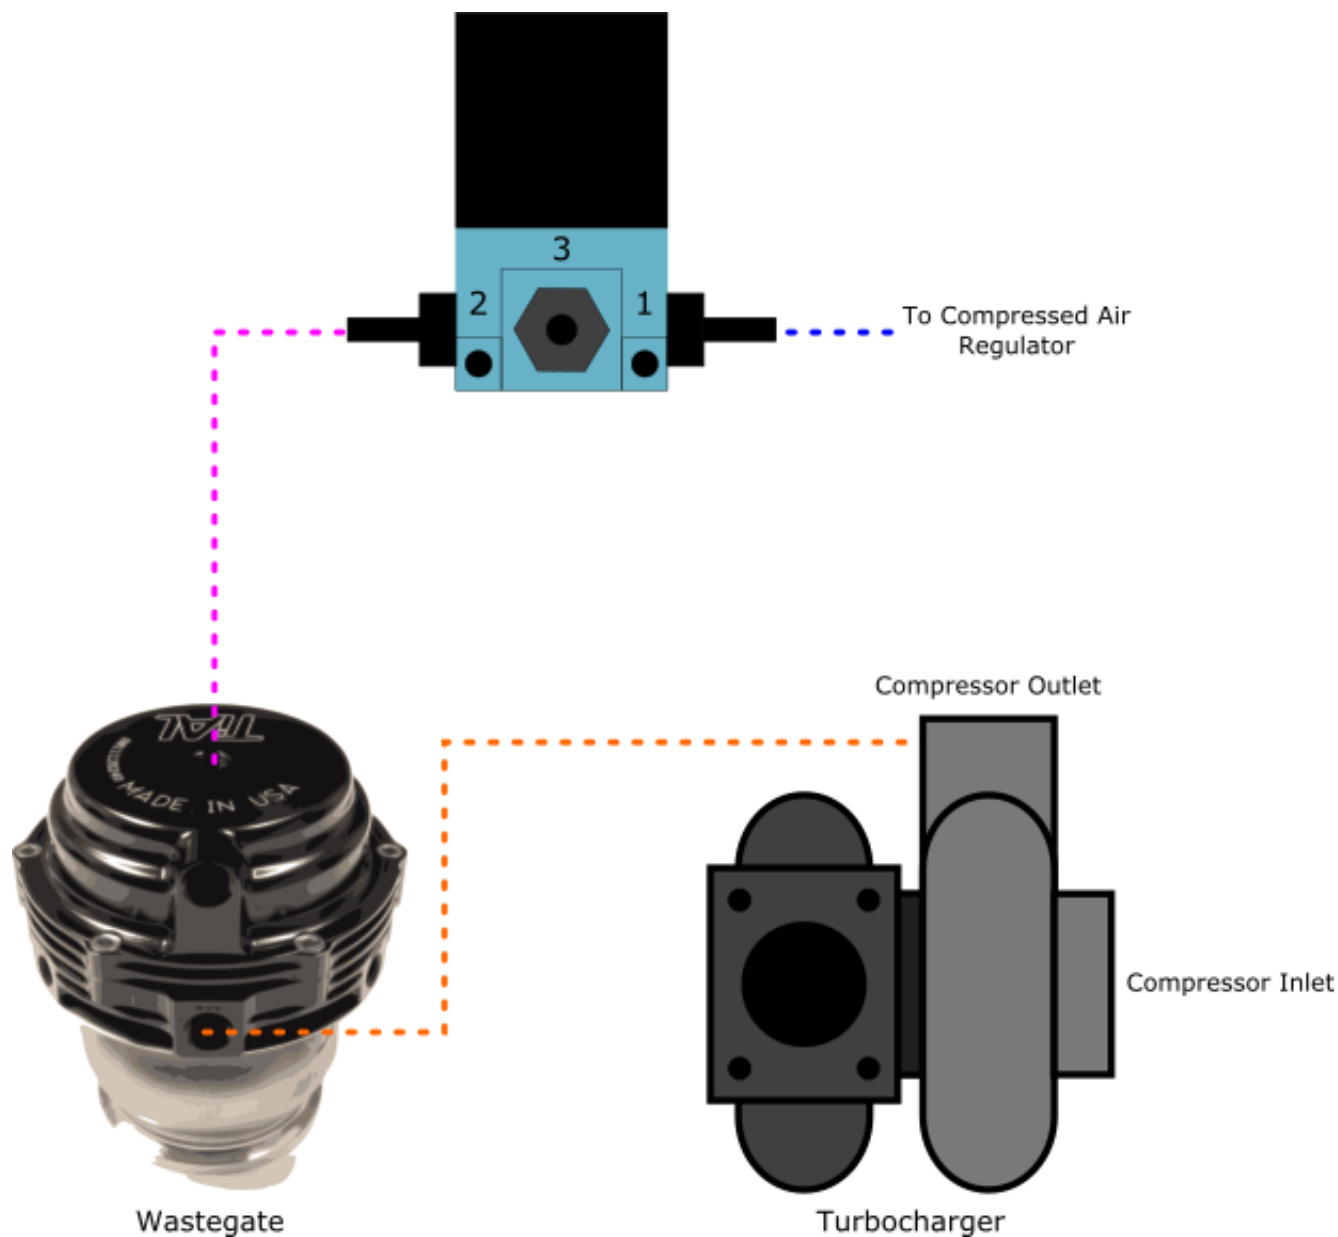


BCS Port 1	Connect to compressed air regulator.
BCS Port 2	Connect to a pressure port on the top wastegate chamber. Plug any remaining pressure ports on the top wastegate chamber.
BCS Port 3	Leave open to the atmosphere.
Additional Connections	Connect a pressure port on the bottom wastegate chamber to a <u>dedicated</u> pressure reference that is as close to the compressor outlet on the turbo as possible. Plug any remaining pressure ports on the bottom wastegate chamber. DO NOT connect to a pressure reference on the intake manifold.

4-PORT EXTERNAL WASTEGATE CONFIGURATION

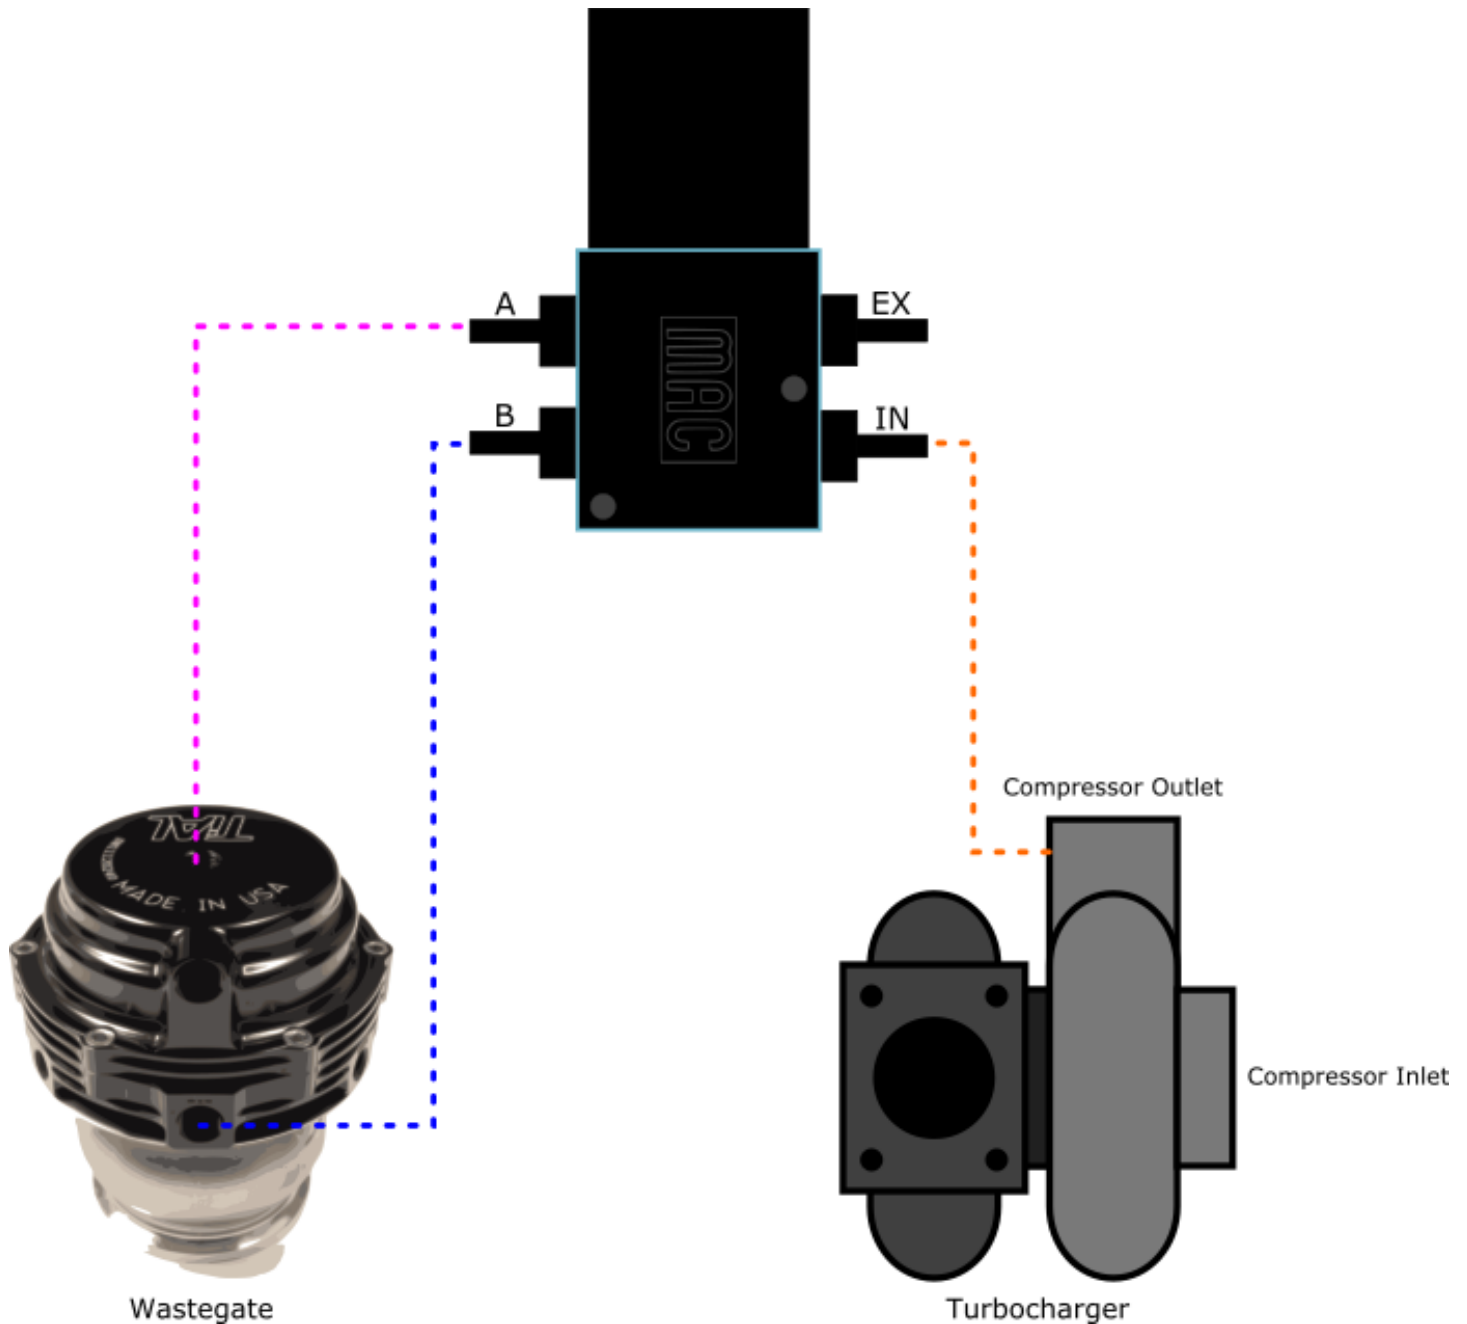


BCS Port IN	Connect to a dedicated pressure reference that is as close to the compressor outlet on the turbo as possible. DO NOT connect to a pressure reference on the intake manifold.
BCS Port B	Connect to a pressure port on the lower wastegate chamber. Plug any remaining pressure ports on the lower wastegate chamber.
BCS Port EX	Leave open to the atmosphere.
BCS Port A	Connect to a pressure port on the top wastegate chamber. Plug any remaining pressure ports on the top wastegate chamber.

3-PORT INTERNAL WASTEGATE/ACTUATOR CONFIGURATION

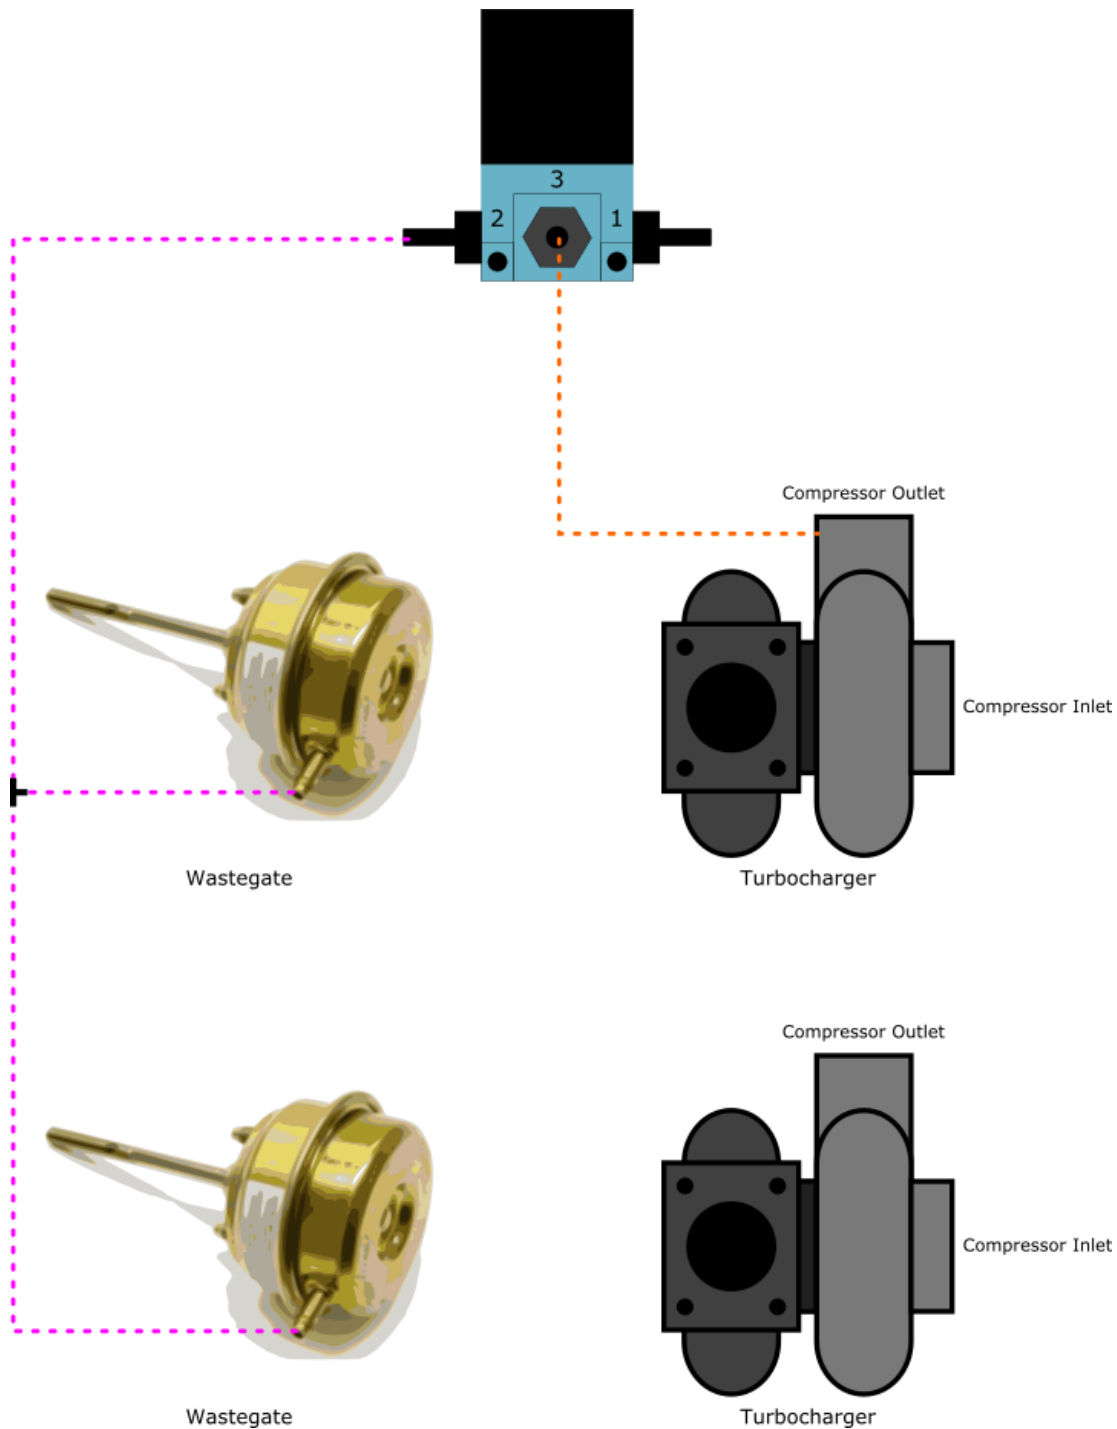


BCS Port 1	Leave open to the atmosphere.
BCS Port 2	Use a hose tee fitting to connect to the pressure ports on both wastegates.
BCS Port 3	Connect to a dedicated pressure reference that is as close to the compressor outlet of one of the turbos as possible. Plug the pressure port on the compressor outlet of the remaining turbo (if present). DO NOT connect to a pressure reference on the intake manifold.

3-PORT EXTERNAL WASTEGATE CONFIGURATION 1

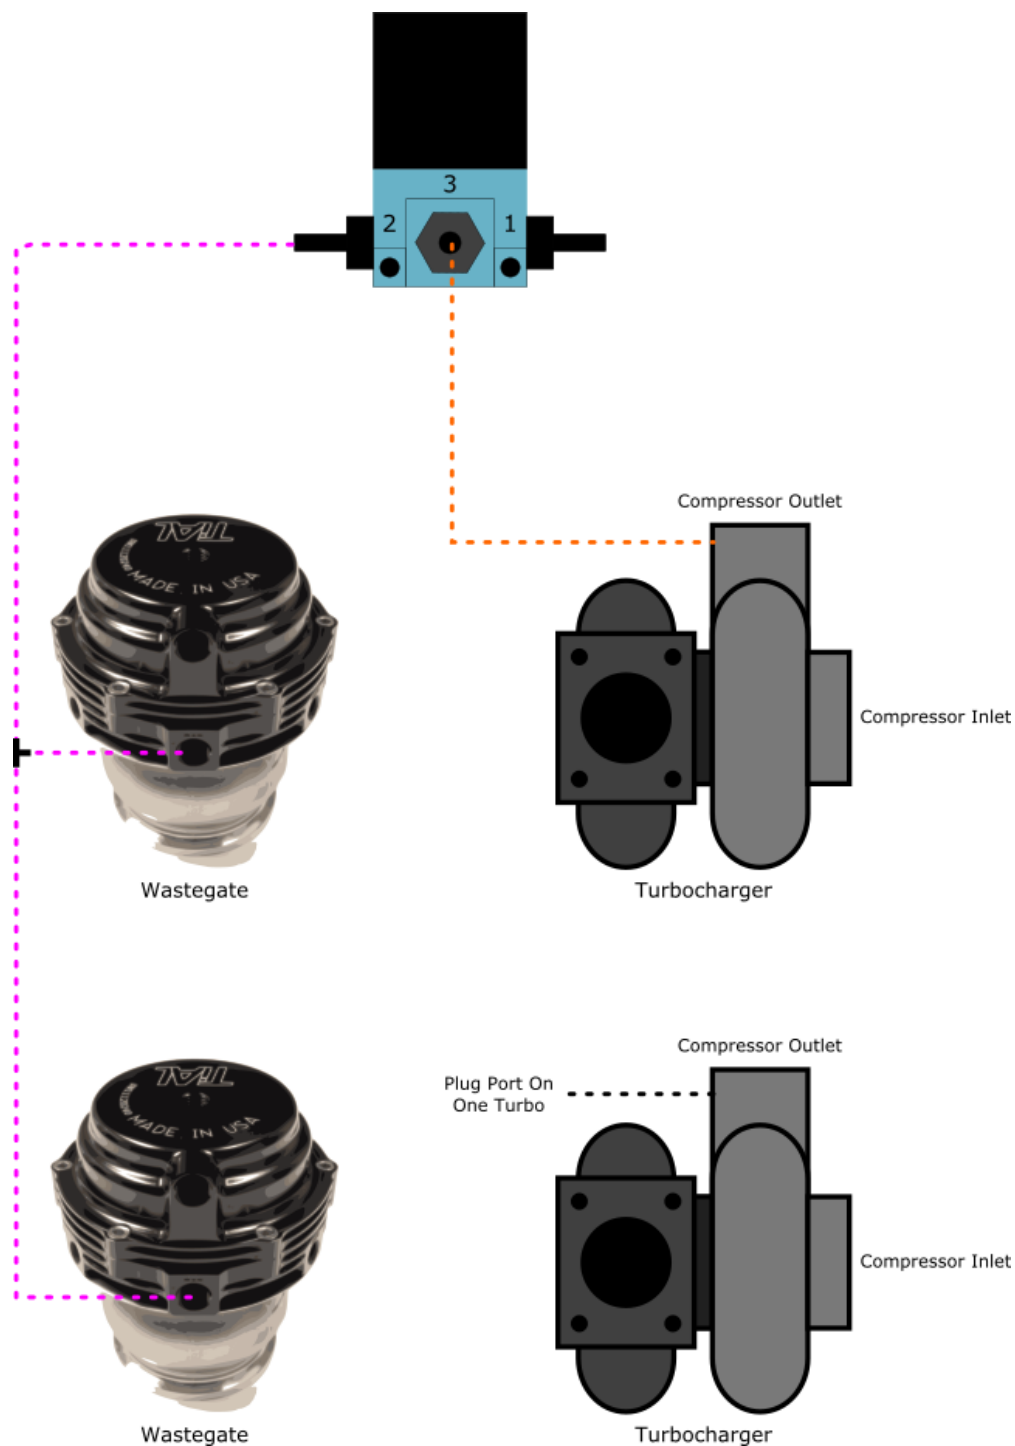


BCS Port 1	Leave open to the atmosphere.
BCS Port 2	Use a hose tee fitting to connect to a pressure port on both bottom wastegate chambers. Plug any additional pressure ports on the bottom wastegate chambers. NOTE: Leave pressure ports on the top wastegate chambers open to the atmosphere.
BCS Port 3	Connect to a dedicated pressure reference that is as close to the compressor outlet of one of the turbos as possible. Plug the pressure port on the compressor outlet of the remaining turbo (if present). DO NOT connect to a pressure reference on the intake manifold.

3-PORT EXTERNAL WASTEGATE CONFIGURATION 2

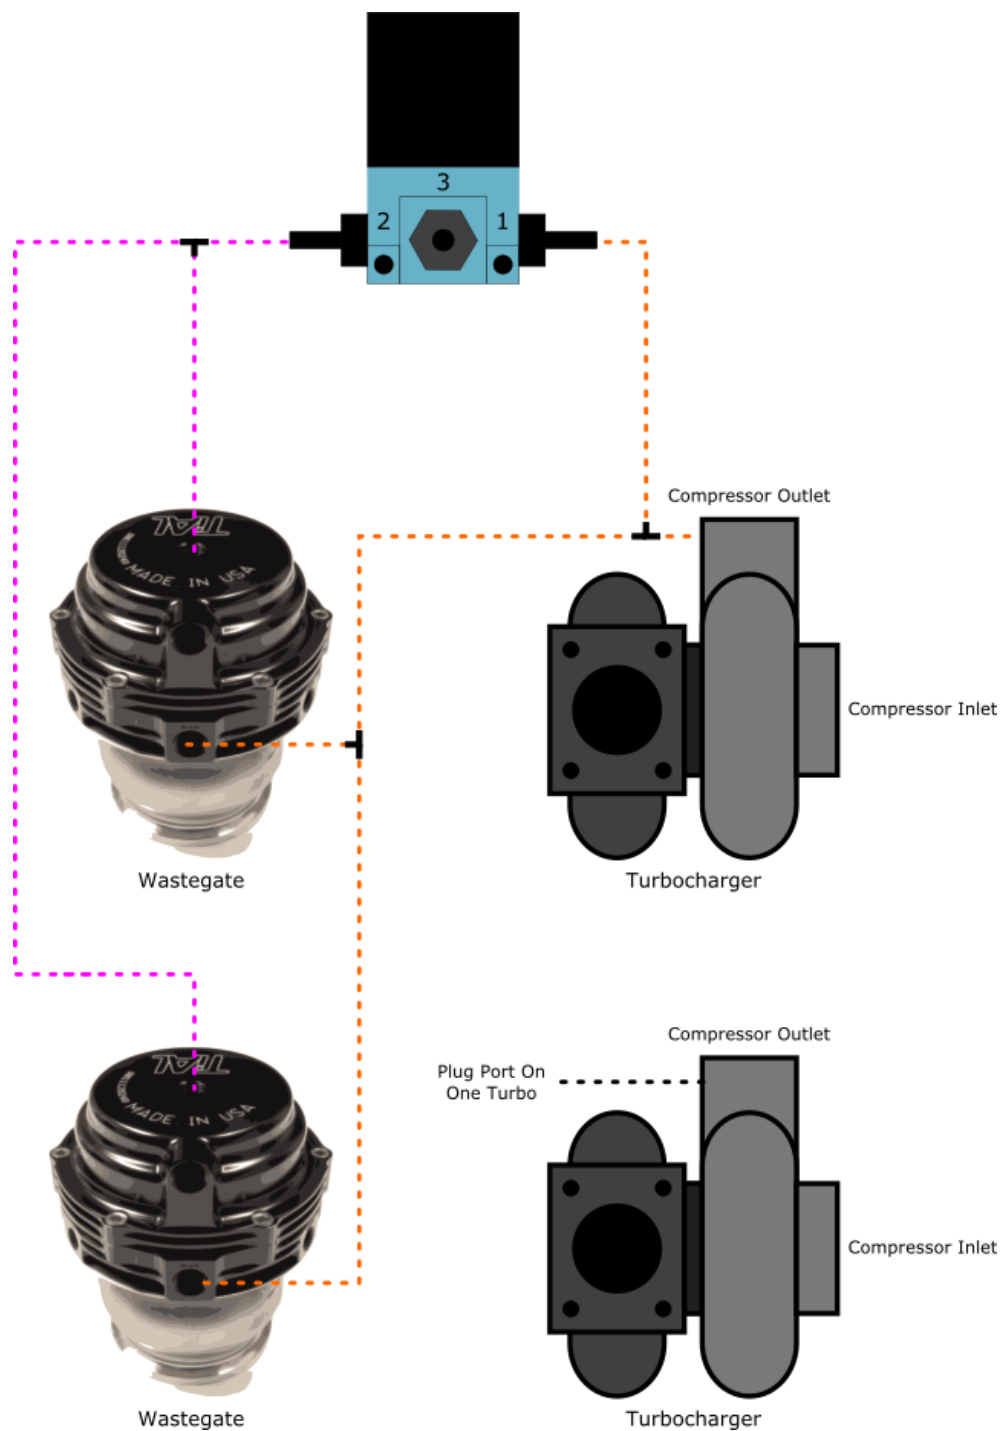


BCS Port 1	<p>Use two hose tee fittings to connect to a dedicated pressure reference that is as close to the compressor outlet of one of the turbos as possible AND connect to a pressure port on both bottom wastegate chambers. Plug the pressure port on the compressor outlet of the remaining turbo (if present). Plug any remaining pressure ports on the bottom wastegate chambers.</p> <p>DO NOT connect to a pressure reference on the intake manifold.</p>
BCS Port 2	<p>Use a hose tee fitting to connect to a pressure port on both top wastegate chambers. Plug any remaining pressure ports on the top wastegate chambers.</p>
BCS Port 3	<p>Leave open to the atmosphere.</p>

3-PORT EXTERNAL WASTEGATE COMPRESSED AIR CONFIGURATION

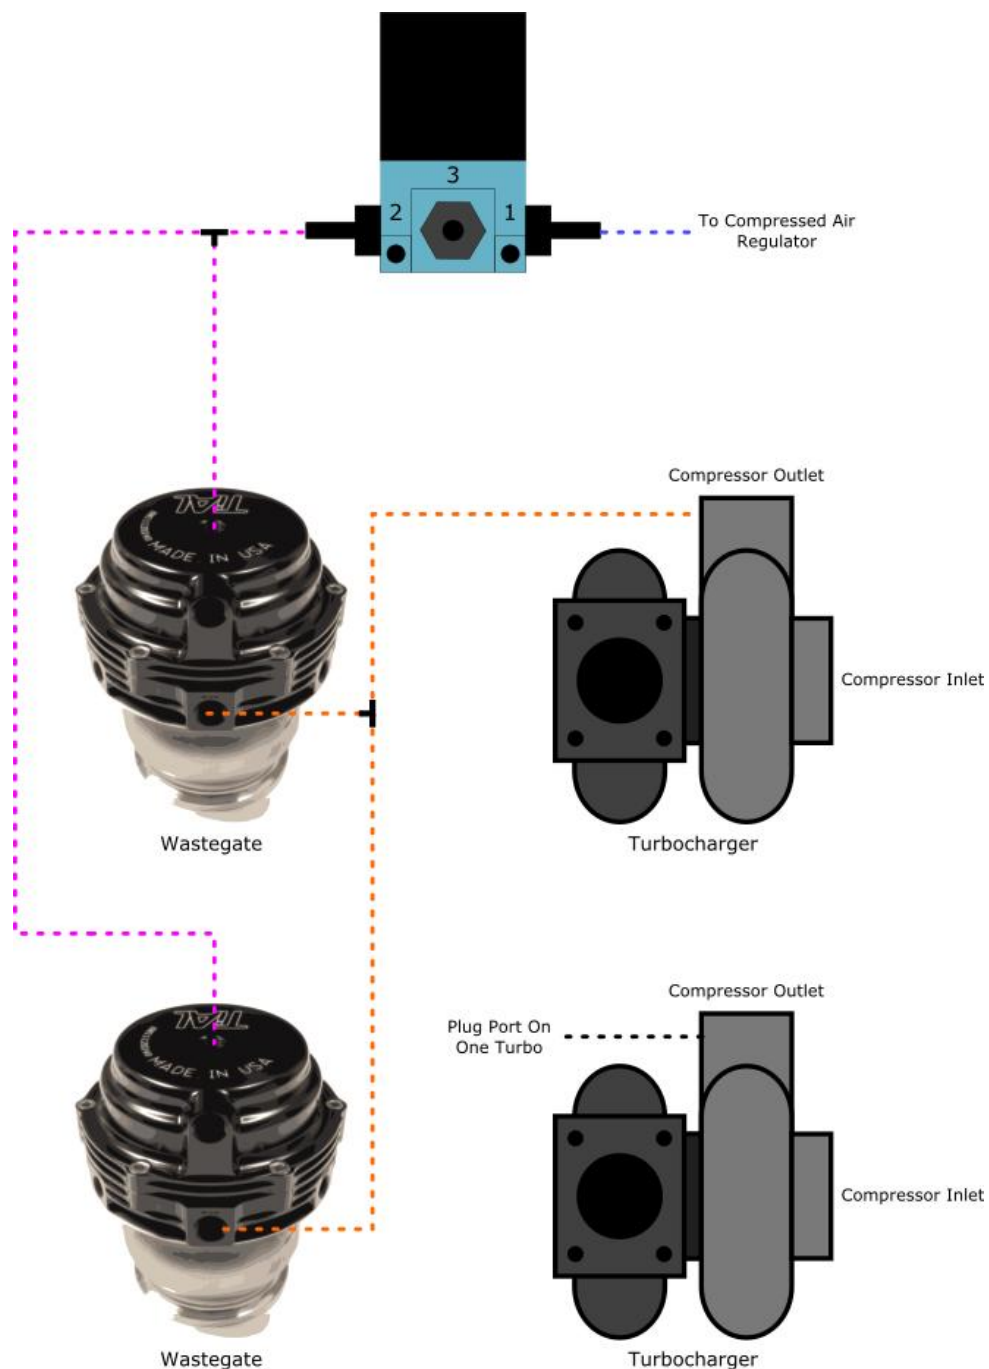

BCS Port 1	Connect to compressed air regulator.
BCS Port 2	Use a hose tee fitting to connect to a pressure port on both top wastegate chambers. Plug any remaining pressure ports on the top wastegate chambers.
BCS Port 3	Leave open to the atmosphere.
Additional Connections	<p>Use a hose tee fitting to connect a pressure port on both bottom wastegate chambers to a dedicated pressure reference that is as close to the compressor outlet on one of the turbos as possible. Plug the pressure port on the compressor outlet of the remaining turbo (if present). Plug any remaining pressure ports on the bottom wastegate chambers.</p> <p>DO NOT connect to a pressure reference on the intake manifold.</p>


4-PORT EXTERNAL WASTEGATE CONFIGURATION

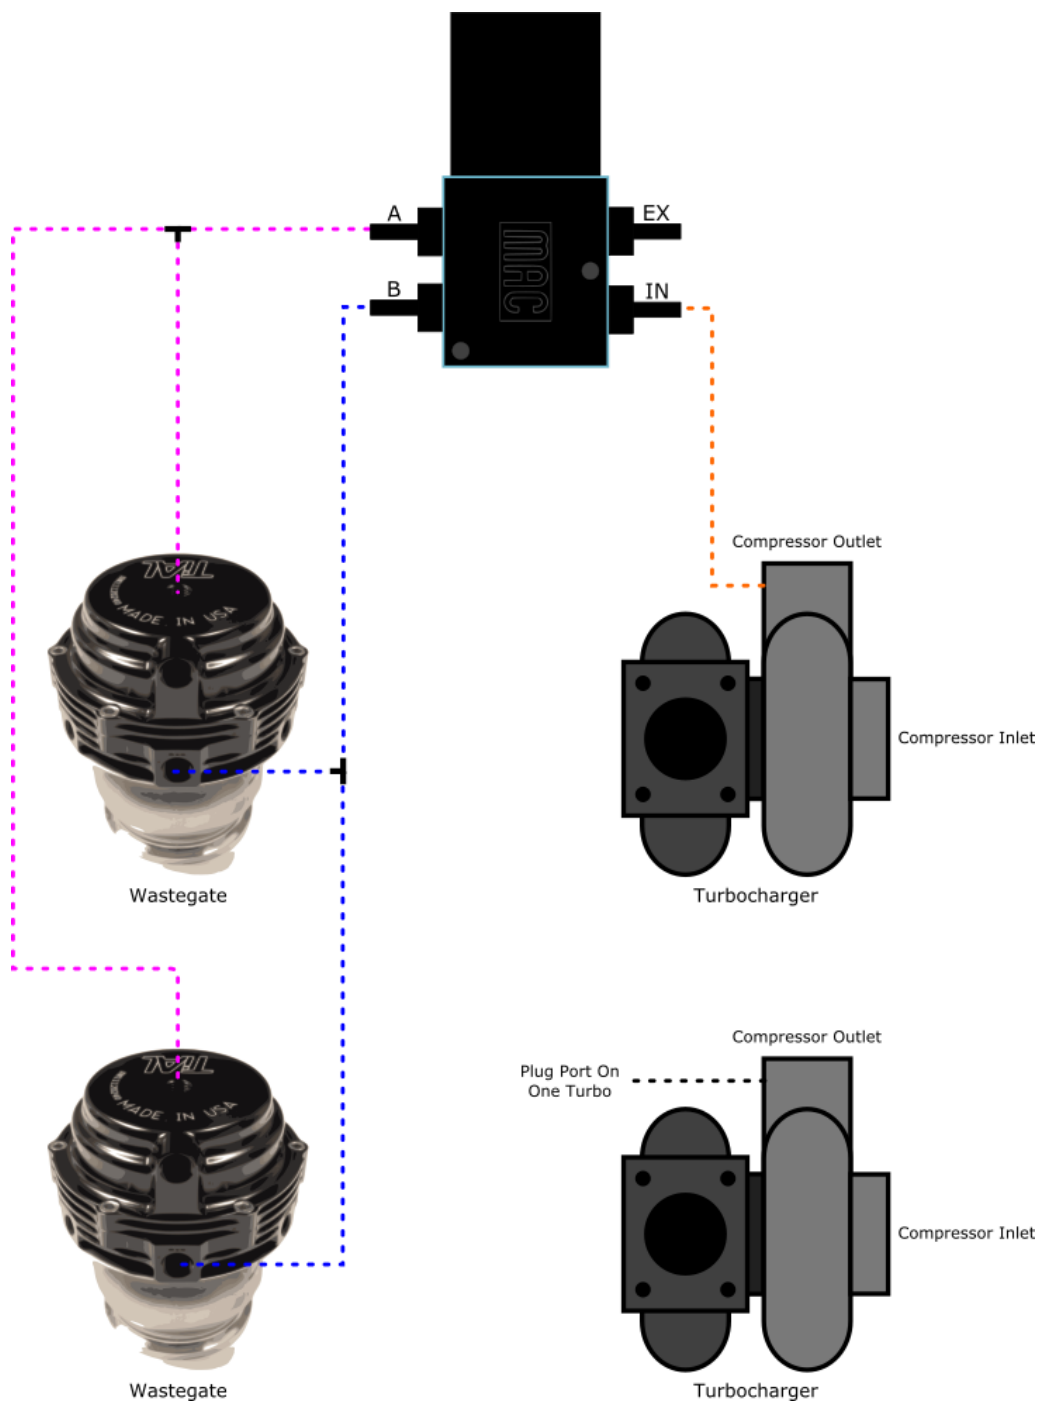

BCS Port IN	Use a hose tee fitting to connect to a dedicated pressure reference that is as close to the compressor outlet on one of the turbos as possible. Plug the pressure port on the compressor outlet of the remaining turbo (if present). DO NOT connect to a pressure reference on the intake manifold.
BCS Port B	Connect to a pressure port on both bottom wastegate chambers using a hose tee fitting. Plug any remaining pressure ports on the bottom wastegate chamber.
BCS Port EX	Leave open to the atmosphere.
BCS Port A	Use a hose tee fitting to connect to a pressure port on both top wastegate chambers. Plug any remaining pressure ports on the top wastegate chambers.

DEVICE OPERATION

The two buttons and the 7-segment LED display on the front of the Cortex EBC are used to manage the controller's basic operations. Typically, the LED display functions as a configurable gauge that can show various parameters, such as boost pressure and solenoid duty cycle. Pressing the top button activates a user-selectable function, while pressing the bottom button opens the controller's menu system.

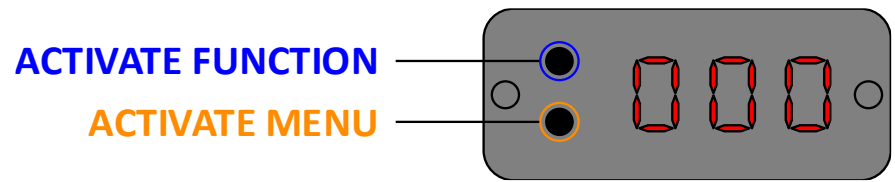


While the Cortex EBC is primarily configured using the Cortex Config software, the following actions can only be carried out using the buttons on the front of the controller:

- Changing the active boost control profile.
- Enabling the internal logging function.
- Enabling the auxiliary outputs (the activation is determined by software settings).
- Changing the top button function mode.
- Changing the gauge data shown on the LED display (boost, solenoid duty cycle, engine speed, etc.).
- Changing the units used for boost data shown on the LED display (PSI or Bar).
- Changing the brightness of the LED display.

In general, the actions listed above are carried out through the following five steps:


1. Press the **bottom** button on the front of the Cortex EBC to activate the menu system.
2. Use the **scroll** button (top) to scroll through the menu options.
3. Press the **select** button (bottom) to enter the submenu for the currently selected option.
4. Use the **scroll** button to scroll through the submenu options.
5. Press the **select** button to finalize the selection and exit the menu system.

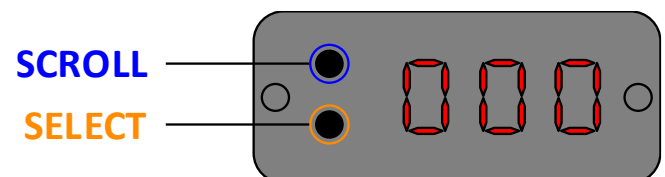

TOP BUTTON FUNCTION MODE

The top button on the front of the Cortex EBC can be configured to activate one of four available functions.

ACTIVATE FUNCTION

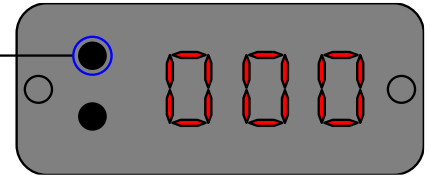

Peak boost recall mode – Pressing the top button will recall the highest boost pressure reached since the controller was powered on. This value can be reset by pressing/holding the top button for 2 seconds.

Transbrake bump control mode – Pressing the top button will activate the transbrake bump function. Each time the top button is pressed the transbrake will be interrupted for the time specified in the output configuration file programmed to the controller.

Boost scramble control mode – Pressing the top button once will activate the boost scramble control function. The boost scramble control will remain activated until the top button is pressed for a second time.


Auxiliary output test mode – Pressing/holding the top button for 2 seconds will activate any enabled auxiliary outputs at 100% duty cycle (fully on). The output(s) will remain activated until the top button is pressed again or until 30 seconds have passed.

See [this section](#) to learn how to change the top button function mode.

MENU SYSTEM

The menu system can be activated at any time by pressing the **bottom** button on the front of the Cortex EBC.


ACTIVATE MENU

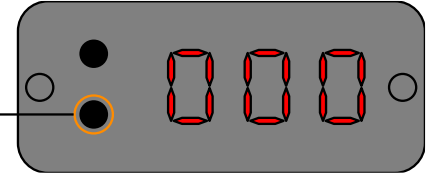

After activating the menu system, pressing the **top** button will allow you to navigate through the various submenu options. Pressing the **bottom** button will enter the submenu corresponding to the text that is being scrolled across the LED display.

SCROLL THROUGH SUBMENU OPTIONS

ENTER SELECTED SUBMENU

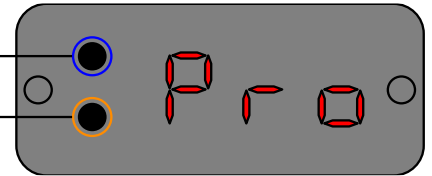


MAIN MENU OPTION	ACTION
ProFILE (profile)	Enter the boost control profile submenu.
IntErnAL Logging (internal logging)	Enter the internal logger submenu.
outPut 1 (output 1)	Enter the output 1 submenu.
outPut 2 (output 2)	Enter the output 2 submenu.
toP button Function (top button function)	Enter the top button function submenu.
gAugE dAtA (gauge data)	Enter the gauge data submenu.
boost unItS (boost units)	Enter the boost units submenu.
disPLAy brighTnESS (display brightness)	Enter the display brightness submenu.
done (done)	Exit the menu system.

CHANGING BOOST CONTROL PROFILE


To change the active boost control profile, begin by pressing the **bottom** button on the front of the Cortex EBC to activate the menu system.

ACTIVATE MENU

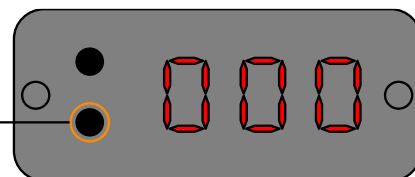


When the menu system is activated, **P r o F I L E** (profile) will scroll across the LED display. Press the **top** button to enter the boost control profile submenu.

ENTER BOOST CONTROL PROFILE SUBMENU

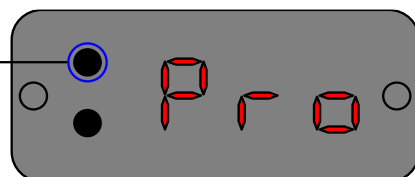


Repeatedly press the **top** button to navigate through the available profiles (profile 3 shown below).

SCROLL THROUGH PROFILE OPTIONS

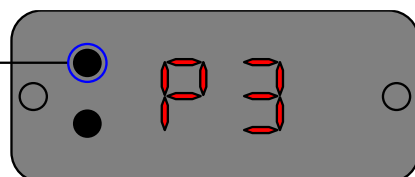


To disable boost control, navigate to the **O F F** (off) profile.

SCROLL THROUGH PROFILE OPTIONS

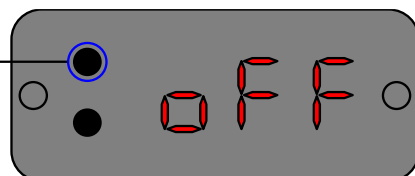

Press the **bottom** button to activate the selected profile and exit the menu system.


SELECT PROFILE AND EXIT MENU SYSTEM

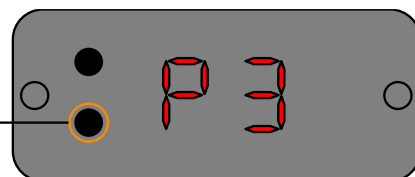

ENABLING INTERNAL LOGGER


To enable or disable the internal logging function, begin by pressing the **bottom** button on the front of the Cortex EBC to activate the menu system.

ACTIVATE MENU

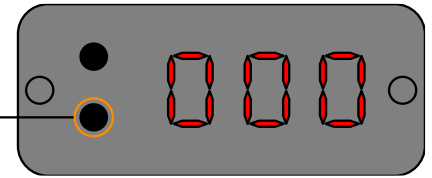


Repeatedly press the **top** button until **intErnAL Logging** (internal logging) scrolls across the LED display.

SCROLL THROUGH MAIN MENU OPTIONS

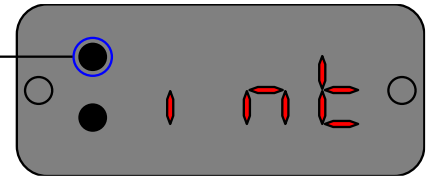


Press the **bottom** button to enter the internal logging submenu.

ENTER INTERNAL LOGGING SUBMENU

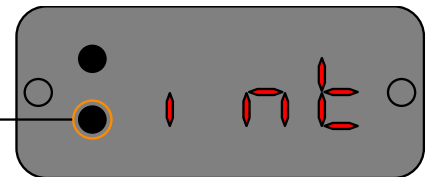


Repeatedly press the **top** button to navigate through the boost thresholds (in PSI) over which the internal logger will start recording data. Logging can be activated at 0.5, 1.0, 1.5, 2.0, or 2.5 PSI (2.5 PSI shown below). To disable the internal logger, navigate to **OFF** (off).

SCROLL THROUGH LOGGER ACTIVATION OPTIONS

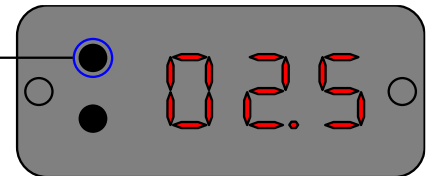

Press the **bottom** button to save the internal logger settings and exit the menu system.

SAVE SELECTION AND EXIT MENU SYSTEM

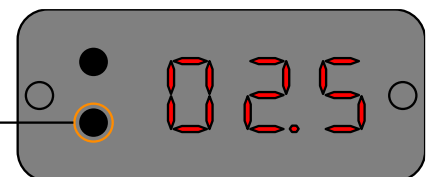


See [this section](#) to learn more about the internal logging function.

ENABLING AUXILIARY OUTPUTS


To enable or disable the auxiliary outputs, begin by pressing the **bottom** button on the front of the Cortex EBC to activate the menu system.

ACTIVATE MENU

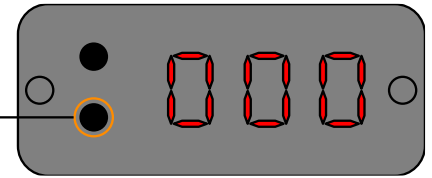


Repeatedly press the **top** button until **outPut 1** (output 1) or **outPut 2** (output 2) scrolls across the LED display.

SCROLL THROUGH MAIN MENU OPTIONS

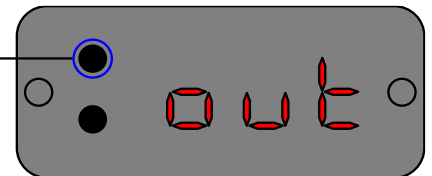


Press the **bottom** button to enter the output 1 or output 2 submenu.

ENTER OUTPUT 1 OR 2 SUBMENU

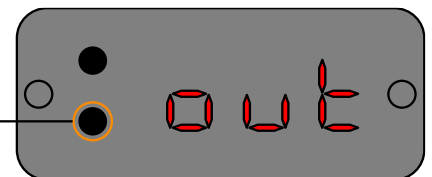


Repeatedly press the **top** button to navigate through the operating modes for the corresponding output. Navigate to **OFF** (off) to disable the corresponding output. Navigate to **Auto** (auto) to enable the corresponding output.

SCROLL THROUGH OUTPUT OPERATING MODES

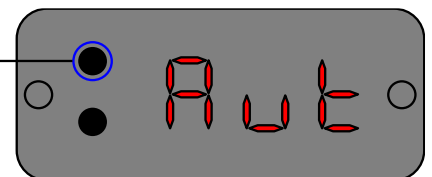

Press the **bottom** button to save the operating mode for the corresponding output and exit the menu system.

SAVE SELECTION AND EXIT MENU SYSTEM

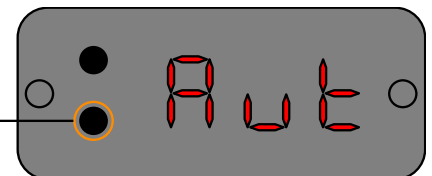


See [this section](#) for information on auxiliary output wiring.

See [this section](#) for information on auxiliary output configuration.

CHANGING TOP BUTTON FUNCTION MODE


To change the top button function mode, begin by pressing the **bottom** button on the front of the Cortex EBC to activate the menu system.

ACTIVATE MENU

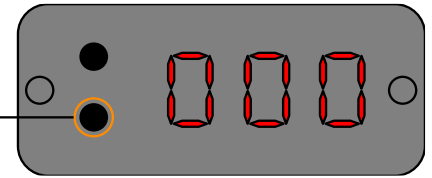


Repeatedly press the **top** button until **toP button Function** (top button function) scrolls across the LED display.

SCROLL THROUGH MAIN MENU OPTIONS

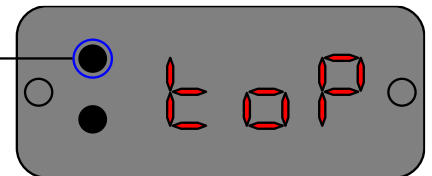


Press the **bottom** button to enter the top button function mode menu.

ENTER TOP BUTTON FUNCTION MODE SUBMENU

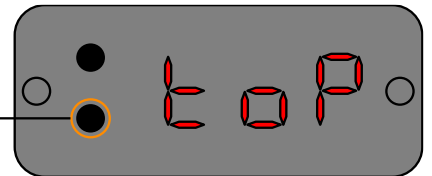


Repeatedly press the **top** button to navigate through the operating modes for the top button function. See the table on the following page for a complete list of the available operating modes.

SCROLL THROUGH TOP BUTTON FUNCTION MODES

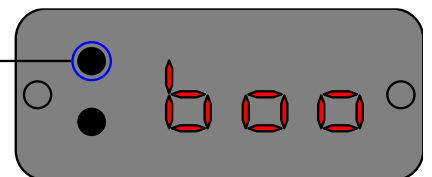

Press the **bottom** button to save the operating mode for the top button function and exit the menu system.

SAVE SELECTION AND EXIT MENU SYSTEM

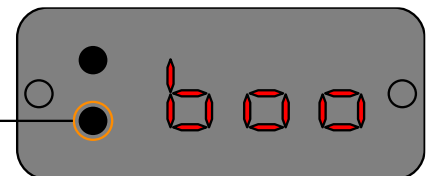


SUBMENU OPTION	TOP BUTTON FUNCTION
b o o S t r E c A L L (boost recall)	Peak boost recall mode
t r A n S t A g E (trans stage)	Transbrake bump control mode
b o o S t S c r A b L E (boost scrable)	Boost scramble control mode
t E S t o u t P u t s (test outputs)	Auxiliary output test mode

See [this section](#) to learn more about the top button function modes.

CHANGING GAUGE DATA


To change the type of data that is shown on the gauge, begin by pressing the **bottom** button on the front of the Cortex EBC to activate the menu system.

ACTIVATE MENU

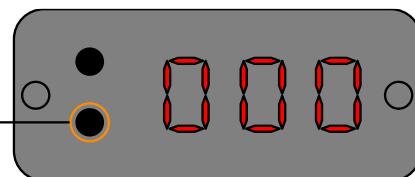


Repeatedly press the **top** button until **gA u g E d A t A** (gauge data) scrolls across the LED display.

SCROLL THROUGH MAIN MENU OPTIONS

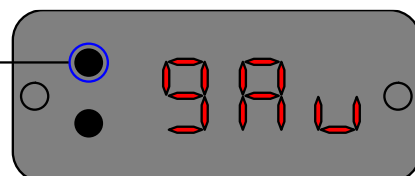


Press the **bottom** button to enter the gauge data submenu.

ENTER GAUGE DATA SUBMENU

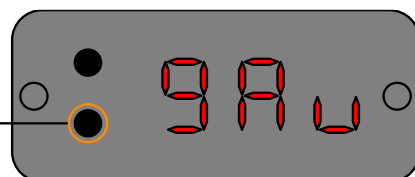


Repeatedly press the **top** button to navigate through the data types that can be shown by the gauge. See the table on the following page for the complete list of the available data types.

SCROLL THROUGH DATA TYPES

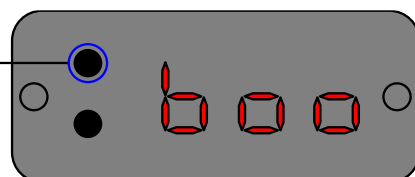

Press the bottom **bottom** button to save the data type to be shown by the gauge and exit the menu system.

SAVE SELECTION AND EXIT MENU SYSTEM

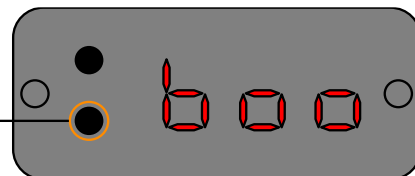


SUBMENU OPTION	LED DISPLAY WILL SHOW
b o o St (boost)	Boost pressure (positive pressure only)
d u t y c y c l E (duty cycle)	Boost control solenoid duty cycle
E n g i n E S p E E d (engine speed)	Calculated engine speed in RPM
S P E E d (speed)	Calculated vehicle speed in MPH
g P i (GPI)	Scaled data from the analog or digital sensor connected to the general-purpose input
g E A r (gear)	Gear (11 shown if boost scramble control function is activated)
E V S r A t i o (EVS Ratio)	EVS ratio for gear detection
S P E E d u n S c A L E d (speed unscaled)	Raw speed signal frequency in Hz
g P i u n S c A L E d (GPI unscaled)	Raw voltage or frequency from the analog or digital sensor connected to the general-purpose input.

CHANGING BOOST UNITS


To change the units used for boost data shown on the LED display, begin by pressing the **bottom** button on the front of the Cortex EBC to activate the menu system.

ACTIVATE MENU

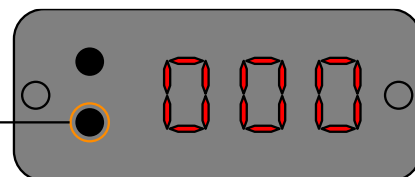


Repeatedly press the **top** button until **b o o S t u n i t S** (boost units) scrolls across the LED display.

SCROLL THROUGH MAIN MENU OPTIONS

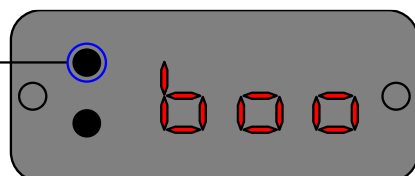


Press the **bottom** button to enter the boost units submenu.

ENTER BOOST UNITS SUBMENU

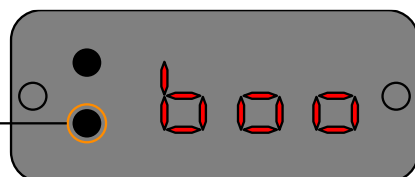


Repeatedly press the **top** button to navigate through the boost units options. To display boost in PSI units, navigate to **P S i** (PSI). To display boost in Bar units, navigate to **B A r** (Bar).

SCROLL THROUGH BOOST UNITS OPTIONS

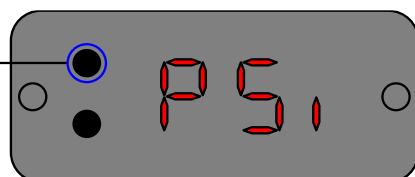

Press the **bottom** button to save the boost units selection and exit the menu system.


SAVE SELECTION AND EXIT MENU SYSTEM

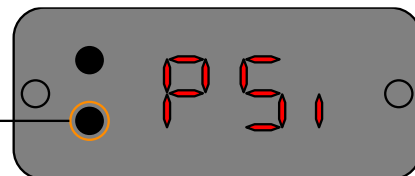

CHANGING DISPLAY BRIGHTNESS


To change the brightness of the LED display, begin by pressing the **bottom** button on the front of the Cortex EBC to activate the menu system.

ACTIVATE MENU

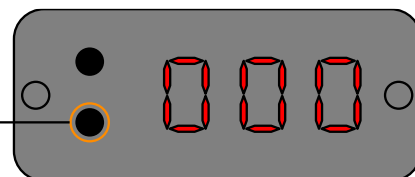


Repeatedly press the **top** button until **d i S P L A y b r i g h t n E S S** (display brightness) scrolls across the LED display.

SCROLL THROUGH MAIN MENU OPTIONS

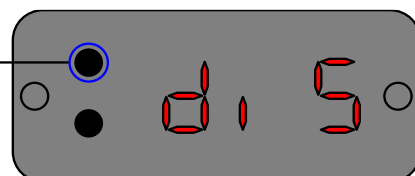


Press the **bottom** button to enter the display brightness submenu.

ENTER THE DISPLAY BRIGHTNESS SUBMENU

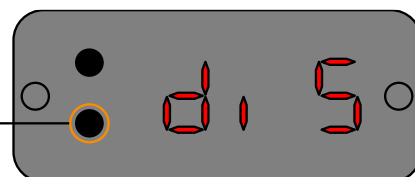


Repeatedly press the **top** button to navigate through the display brightness levels (1-5 with 5 being the brightest).

SCROLL THROUGH DISPLAY BRIGHTNESS LEVELS

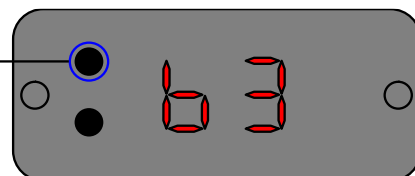


Press the **bottom** button to save the brightness selection and exit the menu system.

SAVE SELECTION AND EXIT MENU SYSTEM

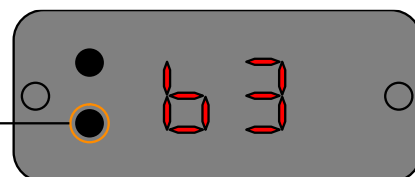

SOFTWARE

The main window for the Cortex Config software is shown below. Most actions can be performed using the toolbar at the top of the main software window.

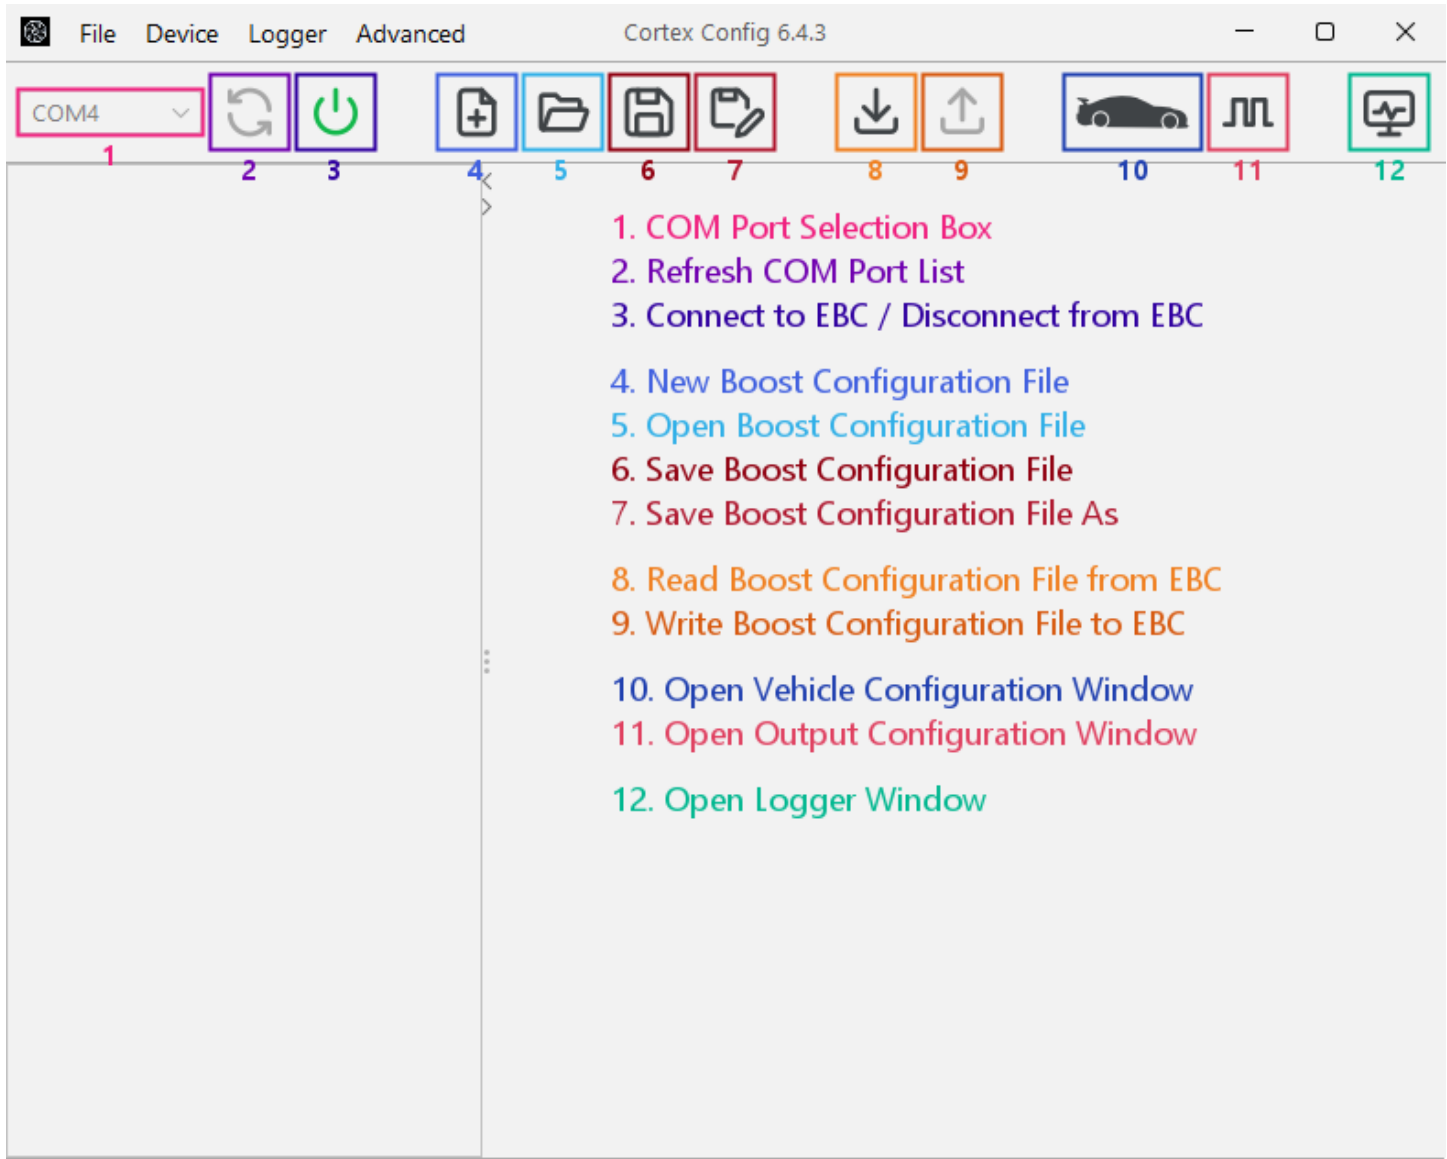


USB CONNECTION

Before establishing a USB connection with the Cortex EBC, the device must be powered by 12 Volts through the wiring harness. Your computer will detect the Cortex EBC if the device is not powered through the wiring harness, but you will not be able to communicate with it.

NOTE: Windows installs the USB drivers automatically the first time the Cortex EBC is connected to a computer. The computer must be connected to the internet, and it may take Windows a few minutes to finish installing the drivers. The Cortex EBC will not appear in the COM Port list until the drivers have been installed. If it does not appear, make sure the computer is online, then unplug the USB cable, plug it back in, and click the refresh button next to the COM Port selection box.

Click the button next to the COM Port selection box if the software has been opened before the USB cable is connected to the computer.

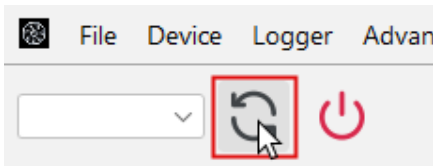

Select your Cortex EBC's COM port.



Click the Connect button to establish a USB connection with the Cortex EBC.



INSTALLING THE USB DRIVERS MANUALLY

In some cases Windows does not install the USB drivers correctly, and the Cortex EBC will not appear in the COM Port list even though the computer is connected to the internet. If this happens, the drivers can be downloaded from FTDI, the manufacturer of the USB chip used in the Cortex EBC, and installed manually using the steps below.

1. Go to <https://ftdichip.com/drivers/vcp-drivers/> and scroll down to the table named **Currently Supported VCP Drivers**. In the **Windows (Desktop)** row, click the version number in the **X64 (64-Bit)** column to download the driver. The download is a ZIP file.

Currently Supported VCP Drivers:

Operating System	Release Date	Processor Architecture							Comments
		X86 (32-Bit)	X64 (64-Bit)	PPC	ARM	MIPSII	MIPSIV	SH4	
Windows (Desktop)*	2025-03-04	2.12.36.20	2.12.36.20	–	2.12.36.20A****	–	–	–	WHQL Certified. Includes VCP and D2XX. Please read the Release Notes and Installation Guides .

2. Right-click the downloaded ZIP file, select **Extract All...**, and extract it to a folder that is easy to find (the Desktop, for example).
3. Power the Cortex EBC with 12 Volts through the wiring harness and plug in the USB cable.
4. Right-click the Windows Start button and select **Device Manager**.
5. Find the Cortex EBC in the list of devices. If the drivers are not installed, it is listed under **Other devices** as **FT230X Basic UART** with a yellow warning symbol.
6. Right-click **FT230X Basic UART** and select **Update driver**, then **Browse my computer for drivers**. Click **Browse...**, select the folder that was extracted in step 2, make sure **Include subfolders** is checked, and click **Next**. Windows will report that the driver for the **USB Serial Converter** has been installed.
7. If a new device named **USB Serial Port** now appears under **Other devices**, repeat step 6 for that device.
8. The Cortex EBC is now listed under **Ports (COM & LPT)** as **USB Serial Port (COMx)**. Open the Cortex Config software and click the refresh button next to the COM Port selection box.

VIEWING AND EDITING BOOST CONFIGURATION FILES

After loading a boost configuration file into the Cortex Config software, the control settings can be accessed using the navigation tree on the left side of the window (blue shaded area in the image below). Start Duty Cycle and Target Boost tables will be displayed on the right side of the main window (red shaded area in the image below). All other boost control settings are viewed and edited through pop-up dialog boxes.

NOTE: Changes are not automatically transferred to the controller's memory. For any new changes to take effect, you must first write the new settings to the Cortex EBC device.

The screenshot shows the Cortex Config 6.4.3 software interface. The left sidebar (blue) contains a navigation tree with the following structure:

- Boost Configuration File
 - Profile 1 - Basic Strategy
 - Configuration
 - Fail-Safes
 - Launch
 - Open-Loop
 - Start Duty Cycle**
 - Spool Boost Control
 - Gear Change Overboost
 - Closed-Loop
 - Profile 2 - Basic Strategy
 - Profile 3 - Basic Strategy
 - Profile 4 - Basic Strategy
 - Profile 5 - Basic Strategy
 - Profile 6 - Basic Strategy

The main area (red) displays the 'PROFILE: 1 | START DUTY CYCLE [%]' settings. It includes a table of Start Duty Cycle values for various gears and a Scramble state. The table is as follows:

	Start Duty Cycle (%)
Scramble	0.0
Gear 10	0.0
Gear 9	0.0
Gear 8	0.0
Gear 7	0.0
Gear 6	0.0
Gear 5	0.0
Gear 4	0.0
Gear 3	0.0
Gear 2	0.0
Gear 1	0.0

Below the table, there are controls for adjusting the duty cycle, including a value input field set to 1.00, and buttons for Copy, Paste, and Interpolate.

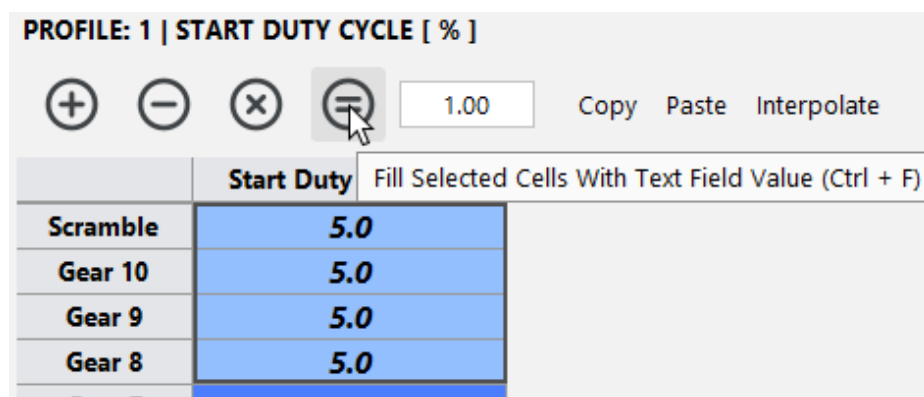


Table cells can either be set to a specified value or mathematically manipulated by a specified value (add, subtract, multiply).

To edit a table, first select the cells to be modified with the mouse. Once one or more cells have been selected, the cell modifier value can be set by typing the desired value. As you type, the modifier value will appear in the text field of the table's toolbar.

After entering the modifier value, the cells can be updated by using the buttons in the table

toolbar or with keyboard shortcuts. The table shown below outlines the possible cell operations and their associated keyboard shortcuts.

OPERATION	DESCRIPTION	KEYBOARD SHORTCUT
Add	Add the modifier value to selected table cells	CTRL + I
Subtract	Subtract the modifier value from the selected table cells.	CTRL + D
Multiply	Multiply the selected cells by the modifier value.	CTRL + M
Fill	Set the selected cells to the modifier value.	CTRL + F or ENTER
Copy	Copy the selected cells to the system clipboard (spreadsheet compatible).	CTRL + C
Paste	Paste the contents of the system clipboard to the selected cell range.	CTRL + V
Interpolate	Interpolate the selected cell range.	CTRL + P
Add 0.1*	Add 0.1 to all selected cells.	+ or =
Subtract 0.1	Subtract 0.1 from all selected cells.	-
Select All	Select every value cell in the table.	CTRL + A

* In the Output Configuration and Water/Methanol tables, the + and - keys change the selected cells by 1

STRATEGY CHART

Tables for the Basic and 2D strategies are shown with a chart beside them. For the Basic strategy the chart has a bar for each gear; for the 2D strategies it shows the table as a curve. The bars and points use the same colors as the table cells, and the cells selected in the table are highlighted in the chart. The chart is hidden when there is not enough room beside the table: make the window wider, or drag the divider next to the navigation tree, to show it.


Cells can be selected in the chart as well as in the table:

- **Click** a bar or point to select its cell.
- **Shift + click** to select every cell from the last selected one.
- **Drag** across the chart to select every cell the pointer crosses.

The cells selected in the chart are also selected in the table, so all of the table operations and keyboard shortcuts above can be used on them. In these tables the Left and Right arrow keys move the selection along the chart, the same as Down and Up; hold Shift to extend the selection.


To change values in the chart, drag a selected bar or point up or down. All selected cells change by the same amount, which is shown next to the pointer while dragging. Values stay between 0 and the table's maximum, and the table is updated when the mouse button is released.

PROFILE: 1 | START DUTY CYCLE [%]

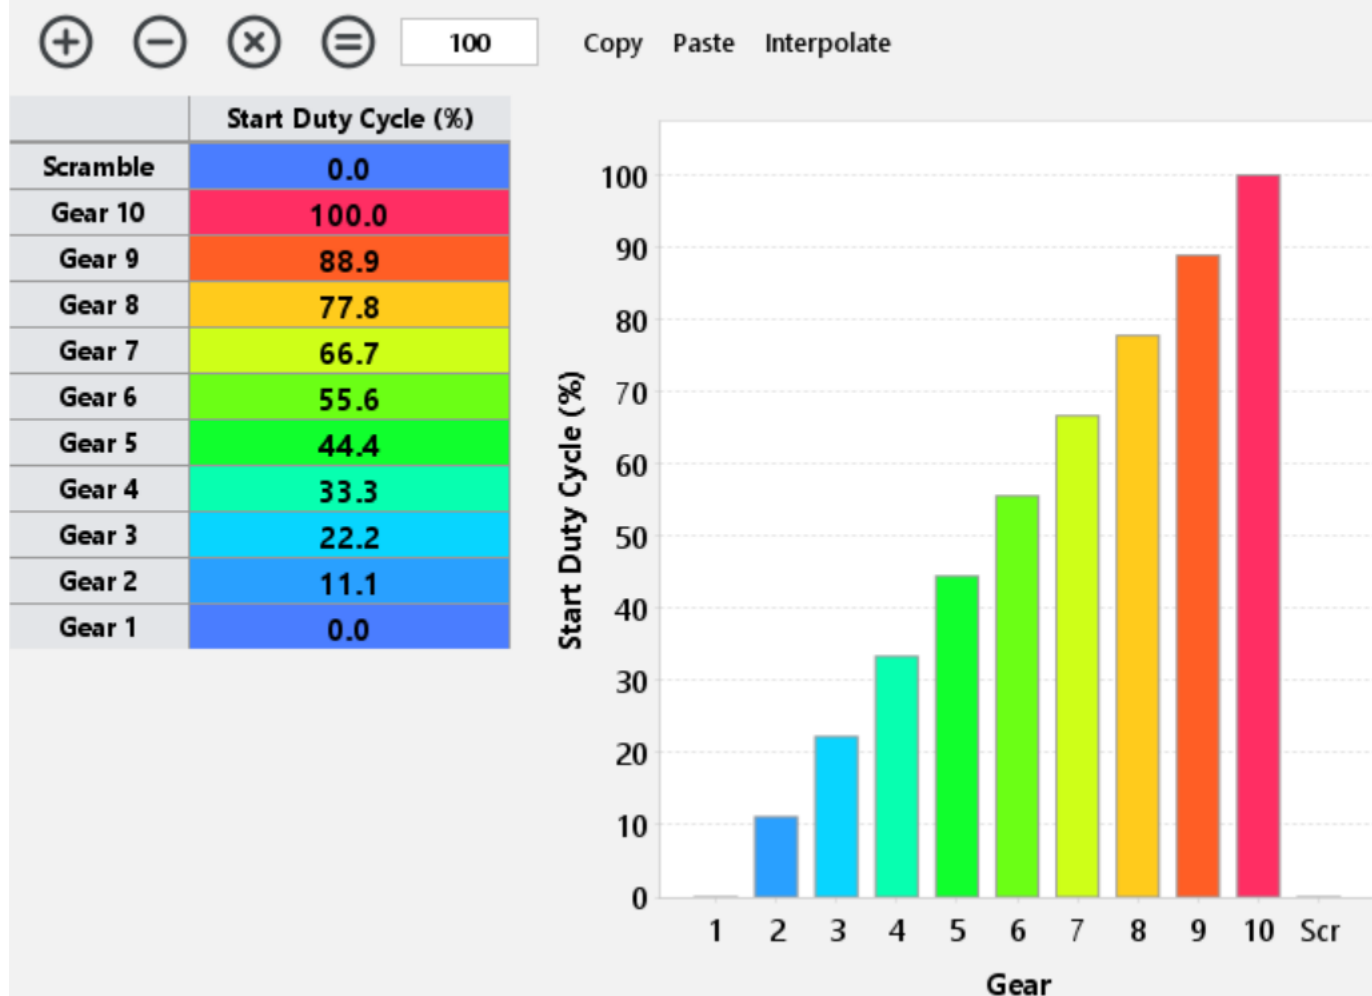


PROFILE COPY/PASTE

The profile copy feature allows all boost control settings to be copied from a source profile to a destination profile. To use the profile copy feature, simply right-click on any setting from the source profile in the navigation pane.

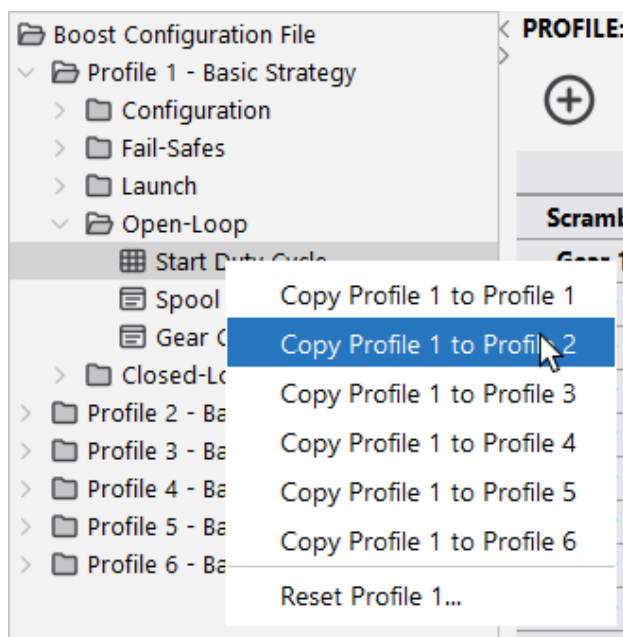

GEAR-BASED DIALOG COPY/PASTE


When editing settings in gear-based dialogue boxes, the settings for the gear that is currently selected can be copied to a destination gear. To use this feature, simply right-click anywhere in the dialogue box.

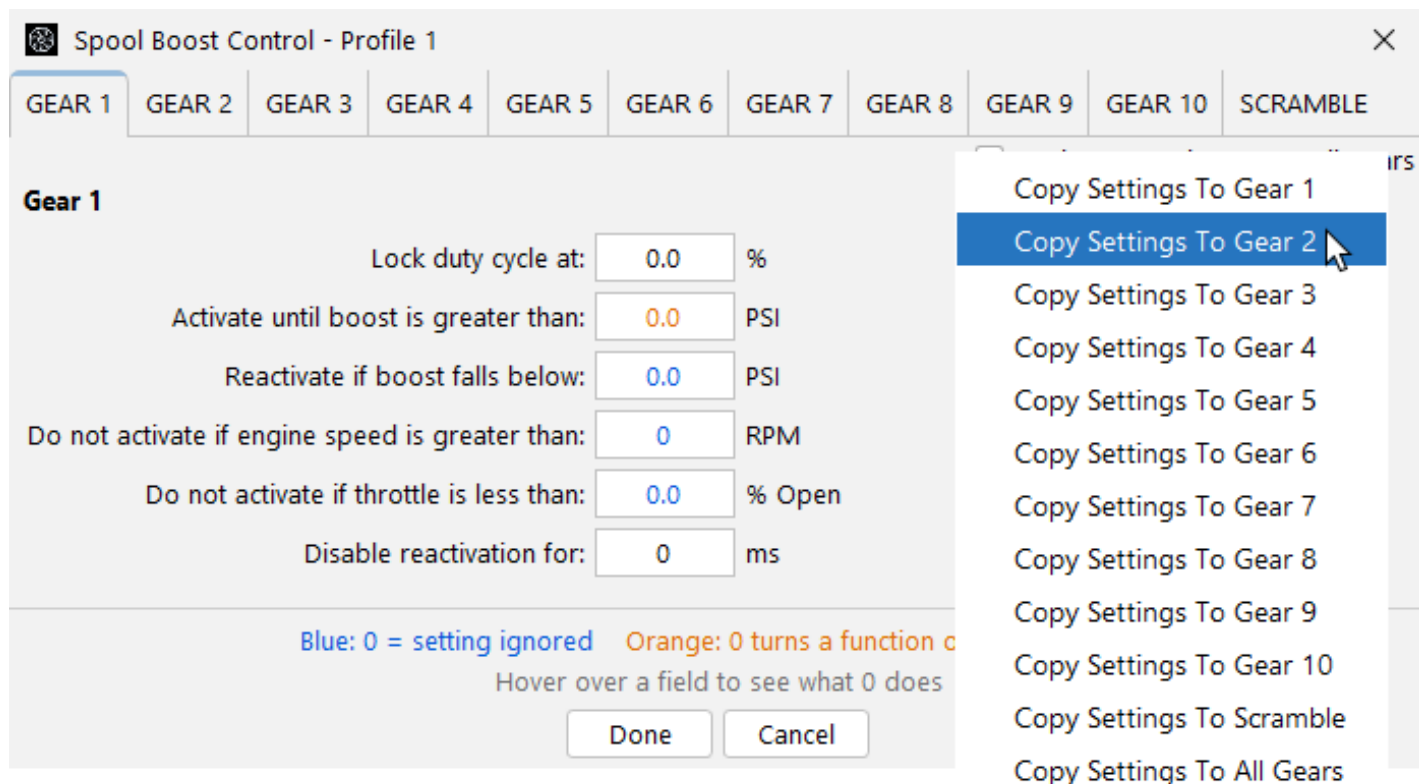


APPLY GEAR 1 CHANGES TO ALL GEARS

The **Apply Gear 1 changes to all gears** checkbox copies the Gear 1 settings to Gears 2-10, so only Gear 1 needs to be edited. The Scramble settings are never changed. The checkbox is set separately for each profile and is saved in the boost configuration file.

Tables - For profiles that use a table for each gear (2D by RPM, speed or GPI, and 3D strategies), the checkbox is at the right end of the toolbar of the Gear 1 Start Duty Cycle and Target Boost tables. While it is ticked, every change made to a Gear 1 table is also made to Gears 2-10, and the Gear 2-10 tables are grayed out in the navigation tree. The checkbox applies to both the Start Duty Cycle and the Target Boost tables of the profile.

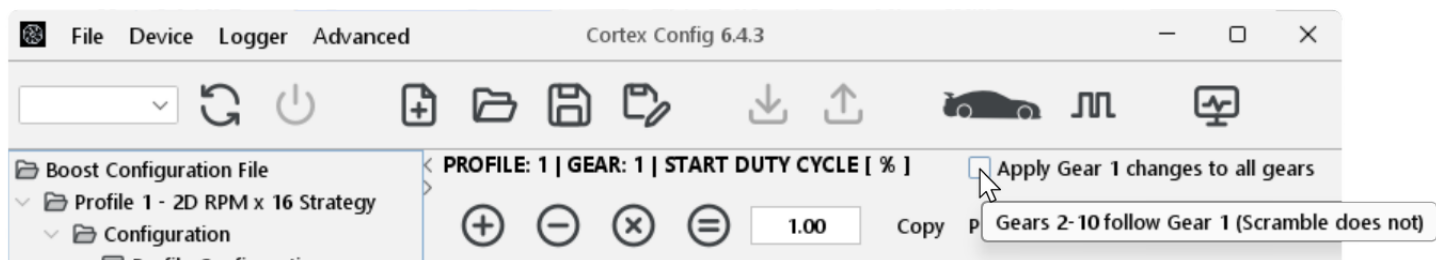

Settings windows - The PID Configuration, Spool Boost Control, Gear Change Overboost Control and Overboost Fail-Safe windows have the same checkbox at the top right of the Gear 1 tab. While it is ticked, the other gear tabs show the Gear 1 settings grayed out, and the settings are copied when Done is clicked. Gear Change Overboost Control copies Gear 1 to Gears 2-9.

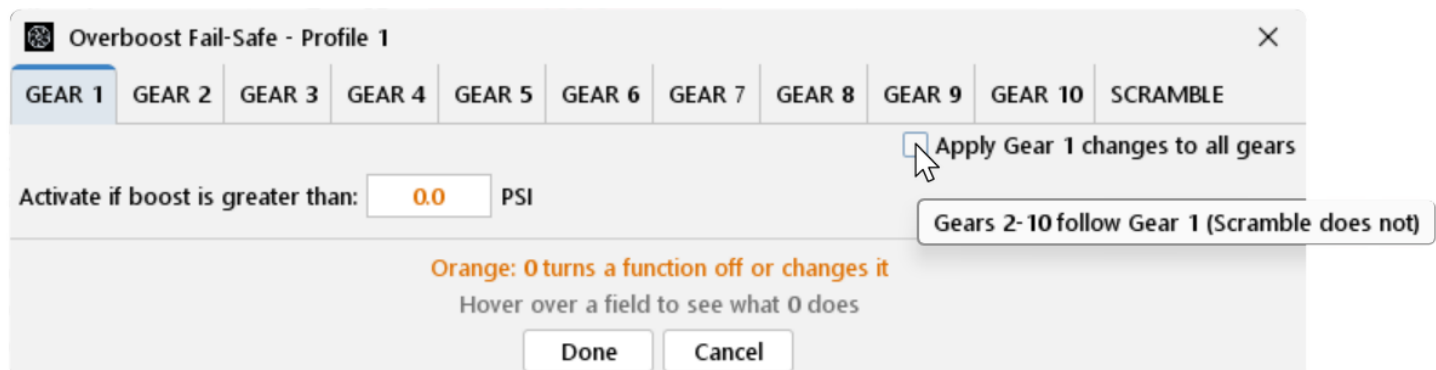

NOTE: Ticking the checkbox replaces the settings of Gears 2-10 with the Gear 1 settings. A warning is shown first.

SETTING COLORS

In the settings windows, some values are shown in color to show what happens when the setting is 0. A legend at the bottom of each window explains the colors:


- **Blue** - a setting of 0 is ignored.
- **Orange** - a setting of 0 turns a function off or changes how it works.

Hover the mouse over a field to see what a setting of 0 does for that field.

DATA LOGGING

The Cortex Config software includes a built-in data logger that can be used to collect and display real-time data from the Cortex EBC. This data assists in making informed adjustments to control and output settings. When data is collected, the Boost Configuration, Vehicle Configuration, and Output Configuration settings from the Cortex EBC are stored with the data set. If the data set is saved to a computer, these device settings are also stored in the log file and can be loaded into the software for later review or analysis.

The logger window for the Cortex Config software is shown below. Most actions can be performed using the toolbar at the top of the logger window.

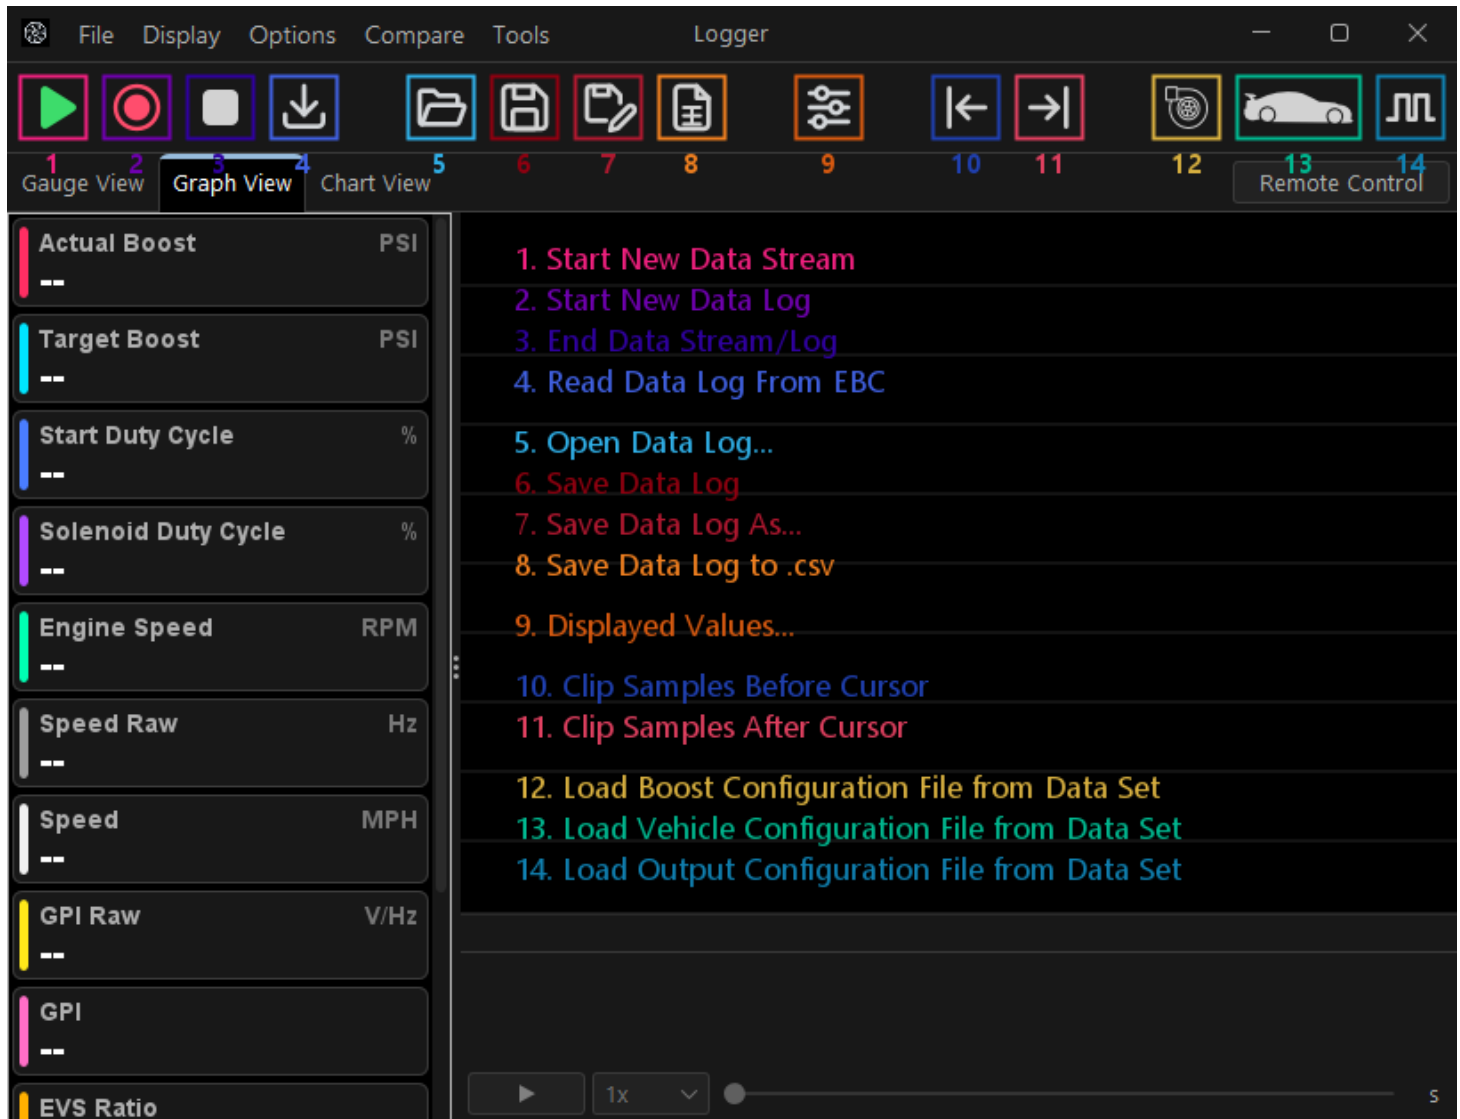

DATA ACQUISITION


Data from the Cortex EBC can be collected in two modes:

- **Data Stream** – Data is collected but not automatically saved to a file.
- **Data Log** – Data is collected and automatically saved to a file on your computer. Each file is assigned a unique name based on the creation time, formatted as: **Run_MM_DD_YYYY_HH_MM_SS**.


LOGGER VIEWS

The logger window has three views, selected with the tabs under the toolbar:

- **Gauge View** - a live dashboard. Right-click a gauge or tile to choose what it shows; double-click it to reset its peak value.
- **Graph View** - the logged values as lines over time, with value tiles on the left that show the values at the cursor. Click or drag in the graph, or use the arrow keys, Page Up/Page Down and Home/End, to move the cursor. The mouse wheel zooms in and out. Hovering over a value tile highlights its line and shows its scale. The overview graph under the main graph shows the whole log: click or drag in it to jump to any point, right-click in it to change the value.
- **Chart View** - one value plotted against another (for example boost against engine speed): choose the X data and up to three Y data values, shown as points or lines.

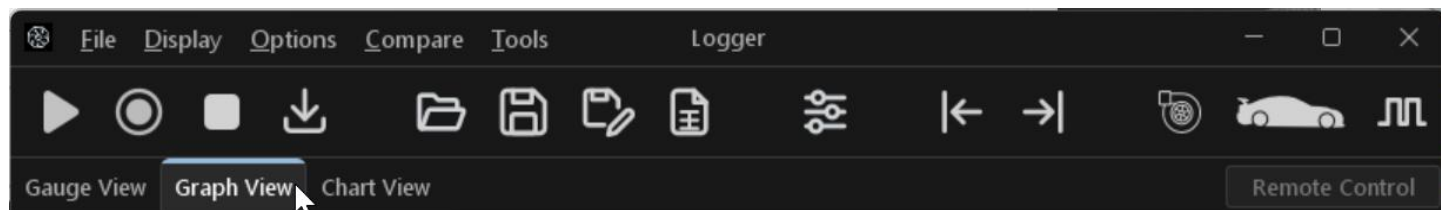


Right-click a value tile to change its color, range, line width or units, or to hide its line. **Displayed Values...** in the Display menu sets which values are shown and their order.

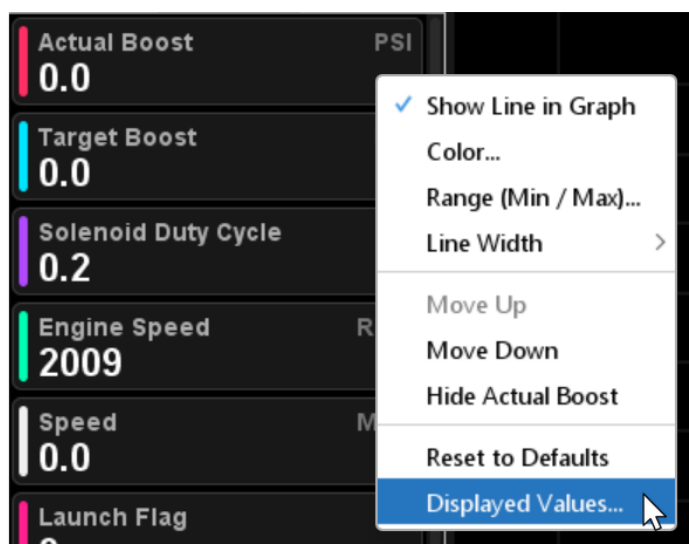


REPLAYING A LOG

 A saved log can be played back at its real speed in Gauge View and Graph View. Press the play button under the graph, or the Space bar, to start or stop the replay. The replay speed can be set from 0.25x to 4x, and the replay starts from the cursor.



COMPARING TWO RUNS



A second log can be shown on top of the current one to compare two runs, for example before and after a tuning change. Open it with **Compare > Open Comparison Log...**. The comparison run is drawn with dashed lines in the same colors, and the value tiles show the comparison run's value and the difference from the current run.

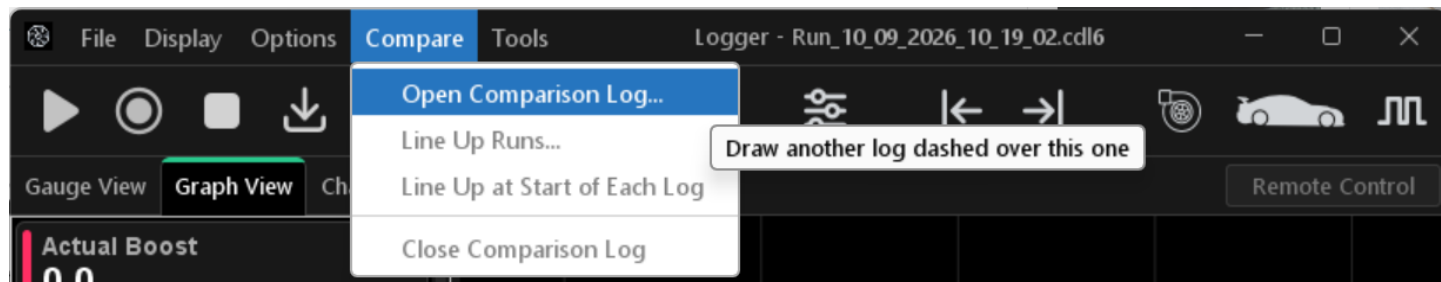

To line up the runs, use **Compare > Line Up Runs...** to line them up on an event in each run (for example the moment the launch flag turns off), or **Compare > Line Up at Start of Each Log**. A run can also be moved by hand by holding Ctrl and dragging in the graph. **Compare > Close Comparison Log** removes the comparison run.

REMOTE CONTROL

With firmware 6.4.3 or later, the **Remote Control** button at the right end of the logger's tab row opens a window for changing the boost profile and the modes of both outputs from the computer, the same as pressing the buttons on the display. It also works while data is being logged, and changes made on the display are shown in the window. Clicking Done or closing the window saves the changes on the Cortex EBC, so they are kept after it is turned off.

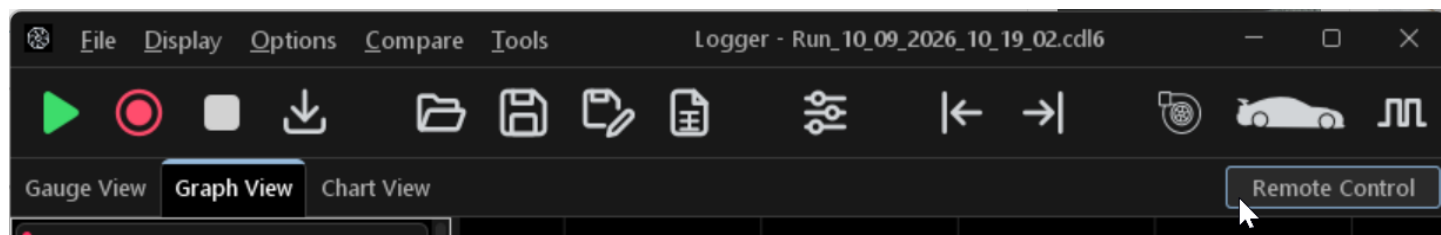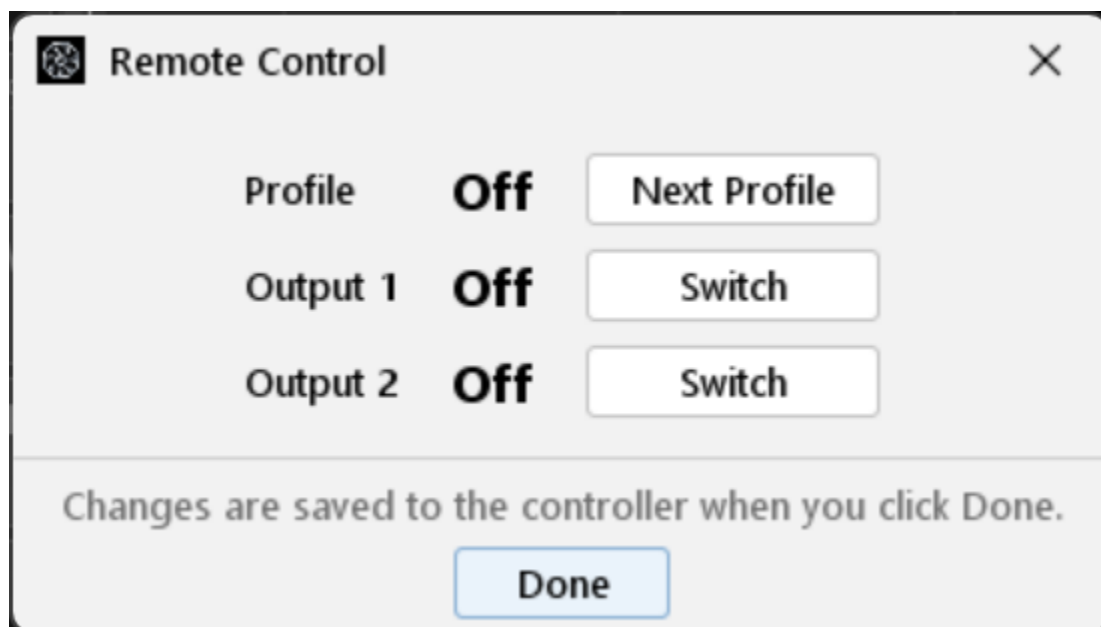

LOGGER KEYBOARD SHORTCUTS


The logger window has the keyboard shortcuts shown below. The Graph View keys work when a log is shown in Graph View.

OPERATION	DESCRIPTION	KEYBOARD SHORTCUT
Start data stream	Start a new data stream.	F7
Start data log	Start a new data log.	F8
End	End the data stream or log.	F9
Read device log	Read the data log from the Cortex EBC.	F10
Clip to start	Clip the stream or log so it starts at the cursor.	F11
Clip to end	Clip the stream or log so it ends at the cursor.	F12
Open	Open a saved data log.	CTRL + O
Save	Save the data log.	CTRL + S
Replay	Start or stop the replay of a saved log.	SPACE
Move cursor	Graph View: move the cursor one sample.	LEFT or RIGHT
Move cursor x10	Graph View: move the cursor 10 samples.	SHIFT + LEFT or RIGHT
Move one screen	Graph View: move the cursor one screen.	PAGE UP or PAGE DOWN
First / last sample	Graph View: jump to the start or end of the log.	HOME or END
Zoom	Graph View: zoom in or out.	+ or -, or the mouse wheel
Slide comparison run	Graph View: move the comparison run one sample.	CTRL + LEFT or RIGHT
Slide comparison run x10	Graph View: move the comparison run 10 samples.	CTRL + SHIFT + LEFT or RIGHT
Drag comparison run	Graph View: move the comparison run with the mouse.	CTRL + drag

INTERNAL LOGGER

The internal logging function can be used to record data from the Cortex EBC without having a laptop in the car. The internal logger records a smaller data set compared to logs that are captured directly through the Cortex Config software, but there is still plenty of information to make educated changes to your boost control settings.

The logger is triggered by boost pressure and automatically stops after collecting 500 data samples, which equals 20 seconds of data at a 25 Hz boost control solenoid frequency. The activation boost threshold can be set to 0.5, 1.0, 1.5, 2.0, or 2.5 PSI. While the logger is collecting data, the decimal point after the third digit on the LED display will be on.

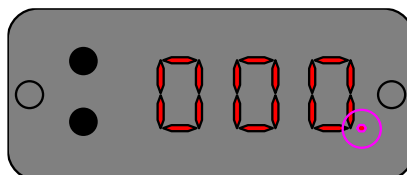

The Cortex EBC has memory space for a single log file, meaning any existing log data will be overwritten each time the logging function is activated. To prevent accidental data loss, it is crucial to disable the logging function after capturing a log or ensure that boost pressure remains below the activation threshold.

INTERNAL LOGGER PARAMETER	DIFFERENCES FROM LOGS CAPTURED IN SOFTWARE
Actual Boost	None
Target Boost	None
Start Duty Cycle	None
Solenoid Duty Cycle	None
Engine Speed	None
Speed	Whole MPH only, limited to 255 MPH
GPI	None
Output 1	Integer value only (no decimal values)
Output 2	Integer value only (no decimal values)
Overboost Flag	None
GPI Fail-Safe Flag	None
Spool Flag	None
Transbrake Flag	None
Launch Flag	None
Scramble Flag	None
Bump Flag	None


See [this section](#) to learn how to enable the internal logging function.

INPUT SIGNAL CONFIGURATION

The configuration settings for the Cortex EBC inputs are stored in a vehicle configuration file. Before adjusting boost with the Cortex EBC, you must first create a vehicle configuration file for your specific application.

Vehicle configuration files can only be modified using the Cortex Config software. For any changes to take effect, you must transfer the updated settings to the device by clicking the "Write" button at the bottom of the Vehicle Configuration window. Since some configuration settings depend on one another, you may need to transfer new settings multiple times to complete the process. In general, you should calibrate the RPM detection first, gear detection second, speed detection third, and the general-purpose input last.

To ensure accurate sensor readings, use the logger feature in the software to verify that the vehicle configuration file has been properly configured.

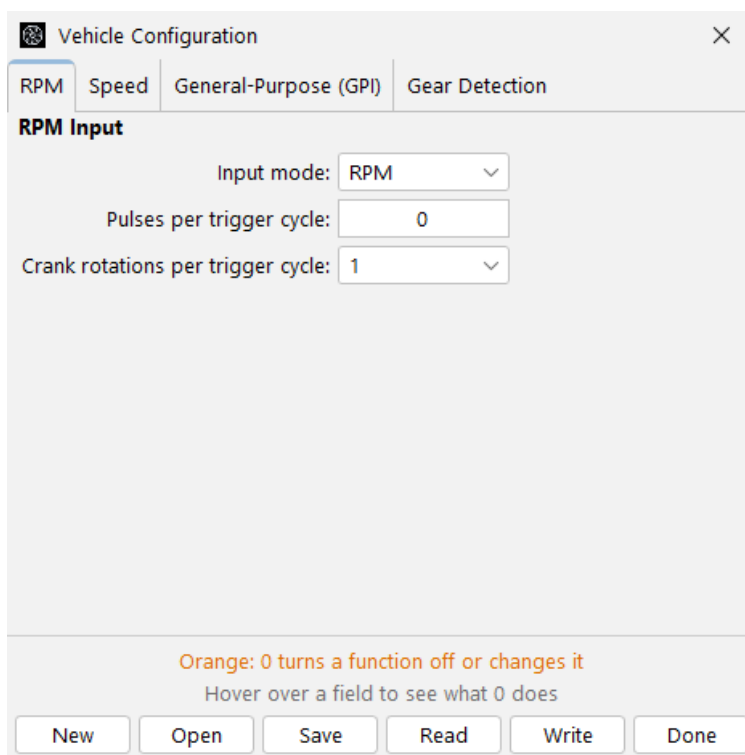


The screenshot shows the "Vehicle Configuration" window with the "RPM" tab selected. The "RPM Input" section contains three fields: "Input mode" set to "RPM", "Pulses per trigger cycle" set to "0", and "Crank rotations per trigger cycle" set to "1". A note at the bottom states: "Orange: 0 turns a function off or changes it. Hover over a field to see what 0 does". At the bottom of the window are buttons for "New", "Open", "Save", "Read", "Write", and "Done".

Tab	Input mode	Pulses per trigger cycle	Crank rotations per trigger cycle
RPM	RPM	0	1
Speed			
General-Purpose (GPI)			
Gear Detection			

Orange: 0 turns a function off or changes it
Hover over a field to see what 0 does

New Open Save Read Write Done

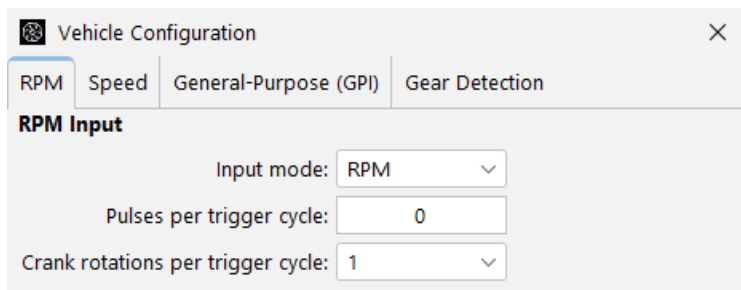

Vehicle Configuration

RPM Speed General-Purpose (GPI) Gear Detection

RPM Input

Input mode: RPM

Pulses per trigger cycle: 0

Crank rotations per trigger cycle: 1

Input mode: RPM

The **Input mode** field determines the operating mode for the RPM input.

- **RPM** – Use RPM input for engine speed detection.
- **Launch Low** – Use RPM input for launch boost control activation by switching to ground.
- **Launch High** – Use RPM input for launch boost control activation by switching to 12V.
- **Bump Box** – Use RPM input for transbrake bump control activation by switching to ground.
- **Scramble** – Use RPM input for boost scramble control activation. Scramble is active while the input is switched to ground.

Pulses per trigger cycle: 0

Crank rotations per trigger cycle: 1

The **Pulses per trigger cycle** and **Crank rotations per trigger cycle** fields are used to calibrate engine speed calculations. Engine speed signals generate a specific sequence of trigger pulses during each trigger cycle. Depending on the signal type, a complete cycle of trigger pulses will be produced each time the crank makes one or two full revolutions. The Cortex EBC calculates engine speed by measuring the time required for a complete trigger cycle to be produced.

Pulses per trigger cycle – The number of pulses produced by the engine speed signal during each trigger cycle.

Crank rotations per trigger cycle – The number of crank rotations that occur during each trigger cycle (1 or 2).

Use the table on the following page to help determine the correct settings for your application.

RPM CALIBRATION PROCEDURE


Use the table below to determine the appropriate values for the **Pulses per trigger cycle** and **Crank rotations per trigger cycle** fields based on the source of your engine speed signal. After entering these values, write the new Vehicle Configuration settings to the controller, and then use the logger to verify that the engine speed calculated by the Cortex EBC matches the actual engine speed.

RPM SIGNAL TYPE	PULSES PER TRIGGER CYCLE	CRANK ROTATIONS PER TRIGGER CYCLE
Tach Signal	Number of cylinders in engine *	2
CB-2 CAN Bus Interface	2 **	1
Mustang / F-150 CAN Bus Interface	4	1
Crank Position Sensor	Number of teeth on trigger wheel	1
Cam Position Sensor	Number of teeth on trigger wheel	2
Fuel Injector Trigger ***	1	2
Distributor Trigger	Number of cylinders in engine	2
Waste-Spark Coil Trigger	1	1
Coil-on-Plug Trigger	1	2

* Set to 4 for all GM applications

** 2018+ Fords: Set to 1 if calculated RPM is half of actual RPM

*** Port fuel injectors only

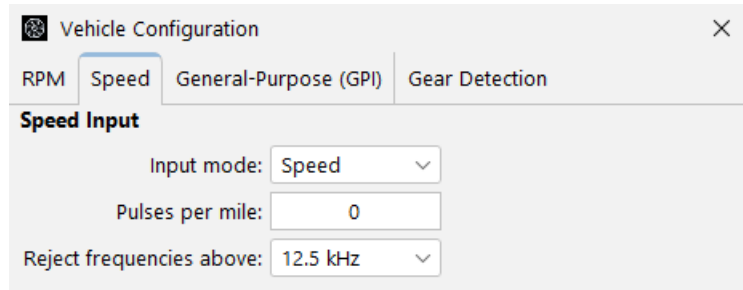

Vehicle Configuration

RPM Speed General-Purpose (GPI) Gear Detection

Speed Input

Input mode: Speed

Pulses per mile: 0

Reject frequencies above: 12.5 kHz

Input mode: Speed

Input mode – Determines the operating mode for the speed input.

- **Speed** – Use speed input for vehicle speed detection.
- **Launch Low** – Use speed input for launch boost control activation by switching to ground.
- **Launch High** – Use speed input for launch boost control activation by switching to 12V.
- **Bump Box** – Use speed input for transbrake bump control activation by switching to ground.
- **Scramble** – Use speed input for boost scramble control activation. Scramble is active while the input is switched to ground.

Pulses per mile: 0

The **Pulses per mile** field is used to calibrate vehicle speed calculations. For the Cortex EBC to accurately calculate vehicle speed this parameter needs to be set to match the number of pulses produced by your speed signal when the vehicle is driven for one mile. Common values include 2,000, 4,000, 6,000, and 8,000. Set to 3,600 for CB-2 Can Bus Interface.

An easy way to determine the pulses per mile produced by your vehicle speed signal is to drive at 30 MPH and monitor the raw speed value (Hz) on the device display or in the logger portion of the Cortex Config software. Multiply the speed signal frequency at 30 MPH by 120 to determine the correct pulses per mile setting for your application.

- If the calculated speed is lower than the actual speed: decrease pulses per mile
- If the calculated speed is higher than the actual speed: increase pulses per mile



Reject frequencies above: 12.5 kHz

The **Reject frequencies above** field is used to help smooth noisy speed signals by ignoring incoming pulses that exceed a certain frequency. This parameter can be left at 12.5 kHz for most applications and should only be reduced from 12.5 kHz if speed signal noise is causing issues with gear detection or boost control.

NOTE: With firmware 6.4.3 and later, the Cortex EBC measures vehicle speed in tenths of MPH. The logger shows speed with one decimal place, and boost tables by speed, launch control and the output speed settings use the full resolution. Speed settings are still entered in whole MPH, and the device display shows whole MPH.

SPEED CALIBRATION PROCEDURE

Before attempting to calibrate vehicle speed, verify that the **Input mode** field is set to 'Speed' and the **Reject frequencies above** field is set to '12.5 kHz' in the Speed tab of the Vehicle Configuration file.

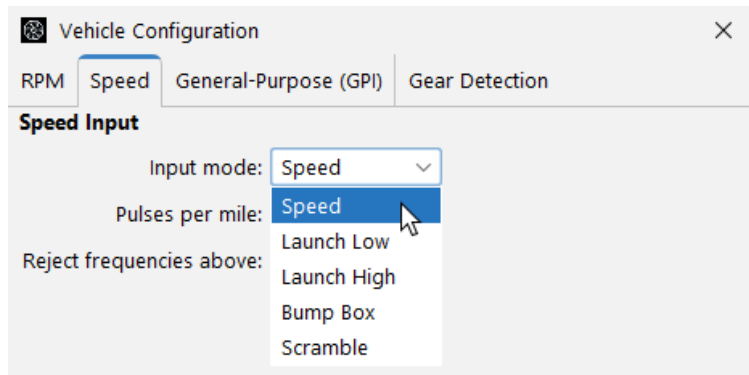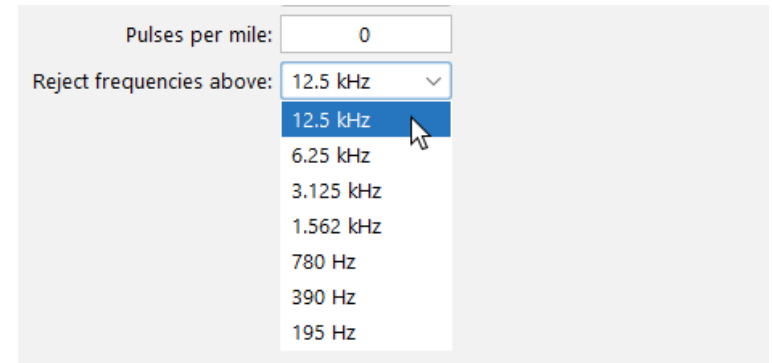

To determine the correct pulses per mile setting, monitor the value of the **Speed Raw** parameter in the logger while driving at 30 MPH and then multiply this number by 120. For example, the speed signal in the example log below outputs 133 Hz at 30 MPH. Therefore:

$$\text{Pulses per mile} = 133 \times 120 = 15960$$



Input mode:


Pulses per mile:

Reject frequencies above:

Enter the calculated value into the **Pulses per mile** field in the Speed tab of the Vehicle Configuration window.

Write the new Vehicle Configuration settings to the controller and then use the logger to verify that the vehicle speed calculated by the Cortex EBC matches the actual vehicle speed.



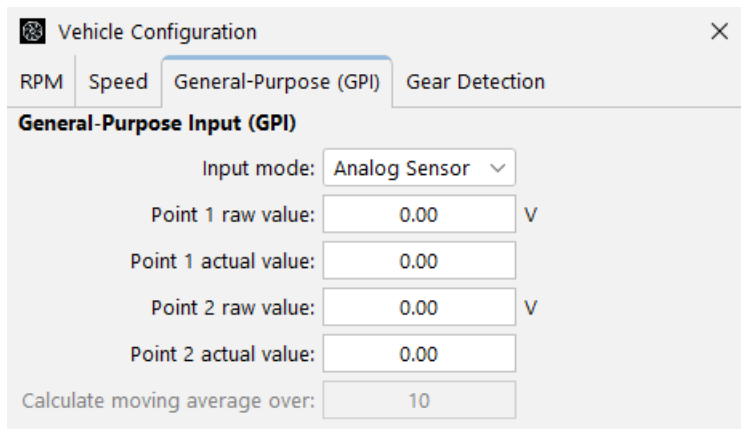

Vehicle Configuration

RPM Speed General-Purpose (GPI) Gear Detection

General-Purpose Input (GPI)

Input mode: Analog Sensor

Point 1 raw value: 0.00 V

Point 1 actual value: 0.00

Point 2 raw value: 0.00 V

Point 2 actual value: 0.00

Calculate moving average over: 10

Input mode: Analog Sensor

The **Input mode** field determines the operating mode for the general-purpose input.

- **Analog Sensor** – Use GPI for analog sensor input.
- **Digital Sensor** – Use GPI for digital sensor input.
- **Launch Low** – Use GPI for launch boost control activation by switching to ground.
- **Launch High** – Use GPI for launch boost control activation by switching to 12V.
- **Bump Box** – Use GPI for transbrake bump control activation by switching to ground.
- **Scramble** – Use GPI for boost scramble control activation. Scramble is active while the input is switched to ground.

Point 1 raw value: 0.00 V

Point 1 actual value: 0.00

Point 2 raw value: 0.00 V

Point 2 actual value: 0.00

The **Point 1 raw value**, **Point 1 actual value**, **Point 2 raw value**, and **Point 2 actual value** fields are used to calibrate analog and digital sensor readings from the general-purpose input. To calibrate a sensor, simply input the raw sensor value (V or Hz) and the corresponding scaled value (AFR, PSI, cc/min, etc.) from two separate data points. The min sensor output and max sensor output are typically used for the two data points. Field resolution is 0.01 for analog sensors and 1 for digital sensors.

Calculate moving average over: 10

The **Calculate moving average over** field sets the smoothing factor for readings from digital sensors. Setting this parameter to 1 will result in no smoothing. Setting this parameter to zero will prevent the Cortex EBC from calculating frequency on the general-purpose input.

GPI CALIBRATION PROCEDURE

The table below provides calibration information for commonly used sensors.


SENSOR TYPE	INPUT MODE	POINT 1 RAW	POINT 1 ACTUAL	POINT 2 RAW	POINT 2 ACTUAL	MOVING AVERAGE
THROTTLE POSITION	Analog Sensor	Use Logger*	0.00	Use Logger*	100.00	N/A
ETHANOL CONTENT	Digital Sensor	50	0	150	100	100
100 PSI PRESSURE	Analog Sensor	0.50**	0.00	4.50**	100.00	N/A
300 PSI PRESSURE	Analog Sensor	0.50**	0.00	4.50**	300.00	N/A
AQUAMIST FLOW	Digital Sensor	0	0	400	2500	10
VISION FLOW***	Digital Sensor	0	0	880	2400	20
INNOVATE WBO2	Analog Sensor	0.00	7.35 AFR 0.5 λ	5.00	22.39 AFR 1.52 λ	N/A
ZEITRONIX WBO2	Analog Sensor	0.00	9.60 AFR 0.65 λ	5.00	19.60 AFR 1.33 λ	N/A
AEM WBO2	Analog Sensor	0.00	10.00 AFR 0.68 λ	5.00	19.98 AFR 1.36 λ	N/A
AEM X-SERIES WBO2****	Analog Sensor	0.50	8.50 AFR 0.58 λ	4.50	18.00 AFR 1.23 λ	N/A
TSG-1 TURBO SPEED GAUGE	Analog Sensor	0.00	0.00	5.00	200.00	N/A

*Monitor the **GPI Raw** value in the logger with the throttle fully open and fully closed to obtain these values.

**The output range of most pressure sensors is 0.50V-4.50V.

***Vision Part Numbers BV1000TRN025A or BV1000TRN025B

****Brown wire on WBO2 (Analog Negative -) must be connected to chassis ground for accurate readings.

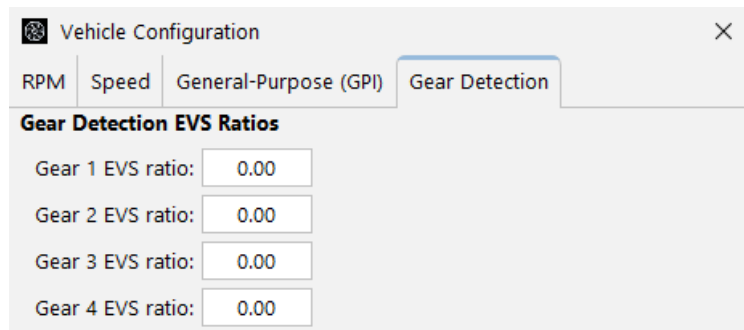

Vehicle Configuration

RPM Speed General-Purpose (GPI) Gear Detection

Gear Detection EVS Ratios

Gear 1 EVS ratio: 0.00

Gear 2 EVS ratio: 0.00

Gear 3 EVS ratio: 0.00

Gear 4 EVS ratio: 0.00

Gear 1 EVS ratio: 0.00

The **Gear X EVS ratio** fields set the comparison thresholds for the gear detection algorithm. The engine-to-vehicle speed (EVS) ratio is calculated by dividing engine speed (RPM) by raw speed sensor frequency (Hz).

The **Gear 1-10 EVS ratio** parameters should be set to match the EVS ratio calculated by the Cortex EBC while driving in each gear. This value can be viewed on the device display or in the logger portion of the Cortex Config software.

On vehicles with manual transmissions, the EVS ratio will be constant in each gear if the clutch is fully engaged.

On vehicles with automatic transmissions, the EVS ratio may have some variation in each gear depending on torque converter configuration, and the EVS ratios should be determined while accelerating with some boost pressure. Automatics utilizing a lock-up converter should determine EVS ratios while the lock-up clutch is engaged.

The gear detection works by comparing the EVS ratio settings for each gear to the real-time EVS ratio that is calculated as the vehicle moves down the road. The gear whose EVS ratio setting is closest to the real-time EVS will be deemed the active gear. For example, consider a 4-speed transmission with the following settings programmed to the Cortex EBC:

- Gear 1 EVS ratio setting: 200.00
- Gear 2 EVS ratio setting: 100.00
- Gear 3 EVS ratio setting: 50.00
- Gear 4 EVS ratio setting: 30.00


In this case the midpoint between gears 1 and 2 is 150.00, the midpoint between gears 2 and 3 is 75.00, and the midpoint between gears 3 and 4 is 40.00. Therefore, the controller will use the following EVS ratio ranges for each gear:

- Gear 1 EVS range: 150.01 and higher
- Gear 2 EVS range: 75.01-150.00
- Gear 3 EVS range: 40.01-75.00
- Gear 4 EVS range: 40.00 and lower


WARNING: Engine speed detection must be correctly calibrated before attempting to determine the EVS ratios settings for gear detection.

GEAR DETECTION CALIBRATION PROCEDURE

For most applications, the easiest way to calibrate the gear detection is to start a data log while the vehicle is stationary. Then slowly accelerate, ensuring that you spend several seconds in each gear before ending the log. After capturing this data, arrange the main software window and the logger window so they are side by side on your screen.

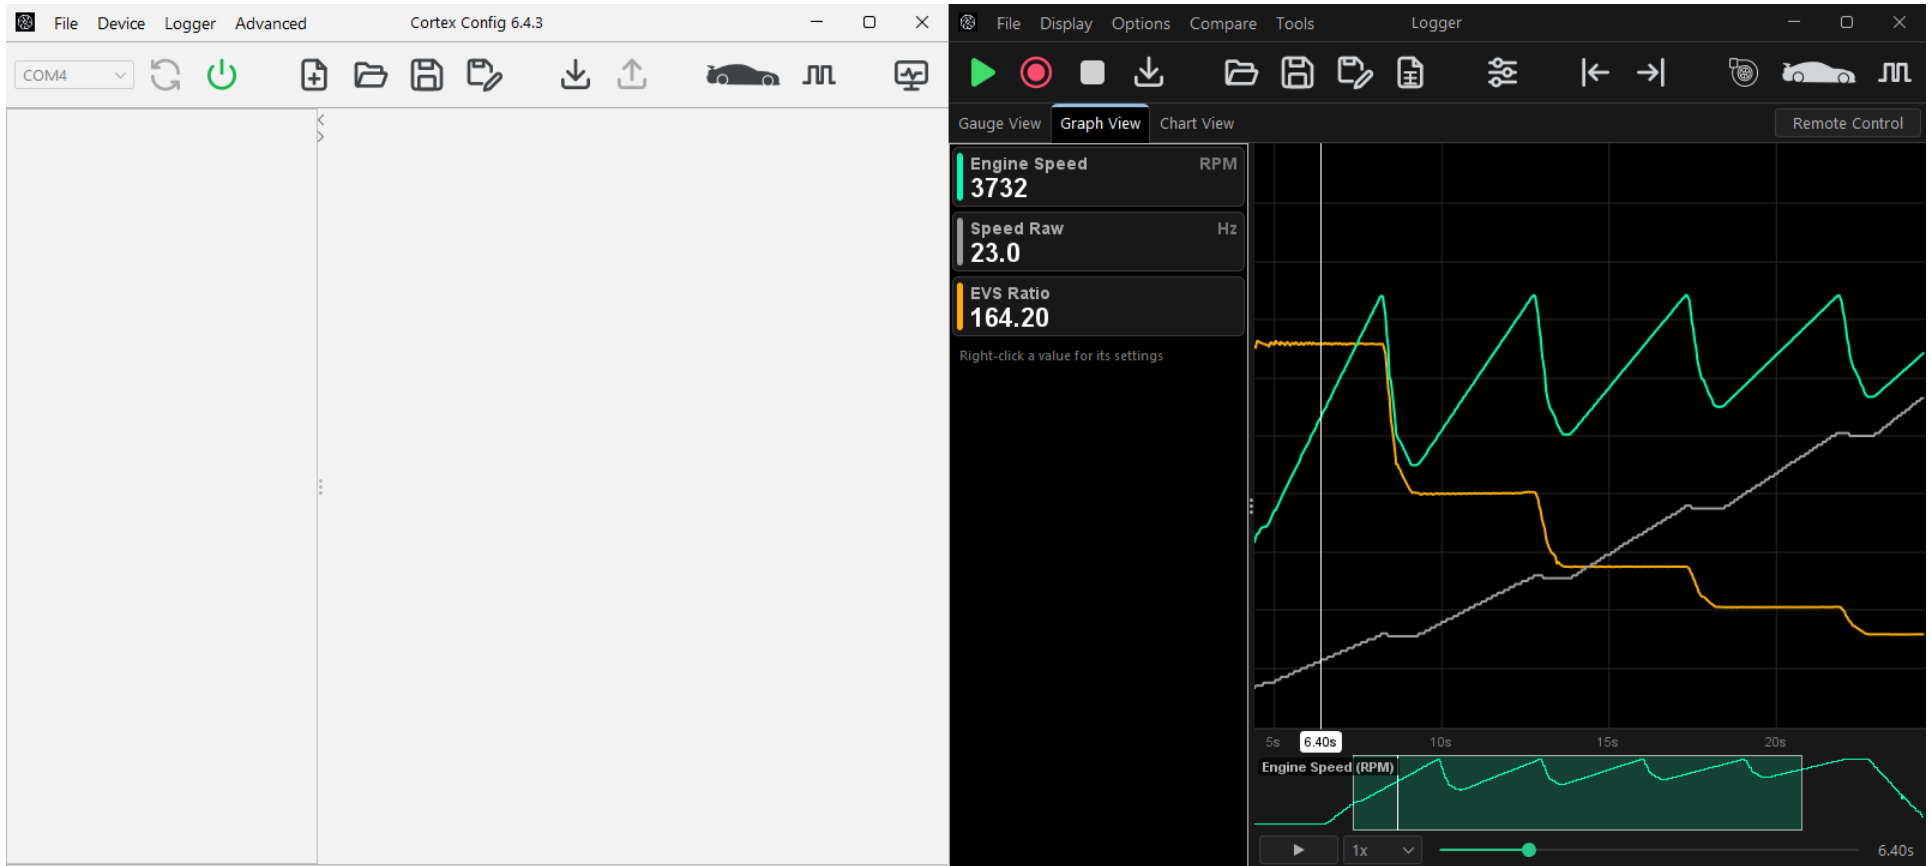


Open the Vehicle Configuration window and select the **Gear Detection** tab. Then, use the scroll bar in the lower portion of the logger window to move the sample cursor (white vertical line) to a point where you were driving in first gear. Enter the EVS Ratio value displayed by the logger at this point into the **Gear 1 EVS ratio** field in the Vehicle Configuration window (164.64 in this example). Ensure the point you pick is after the clutch has fully engaged and the EVS Ratio has flattened out.

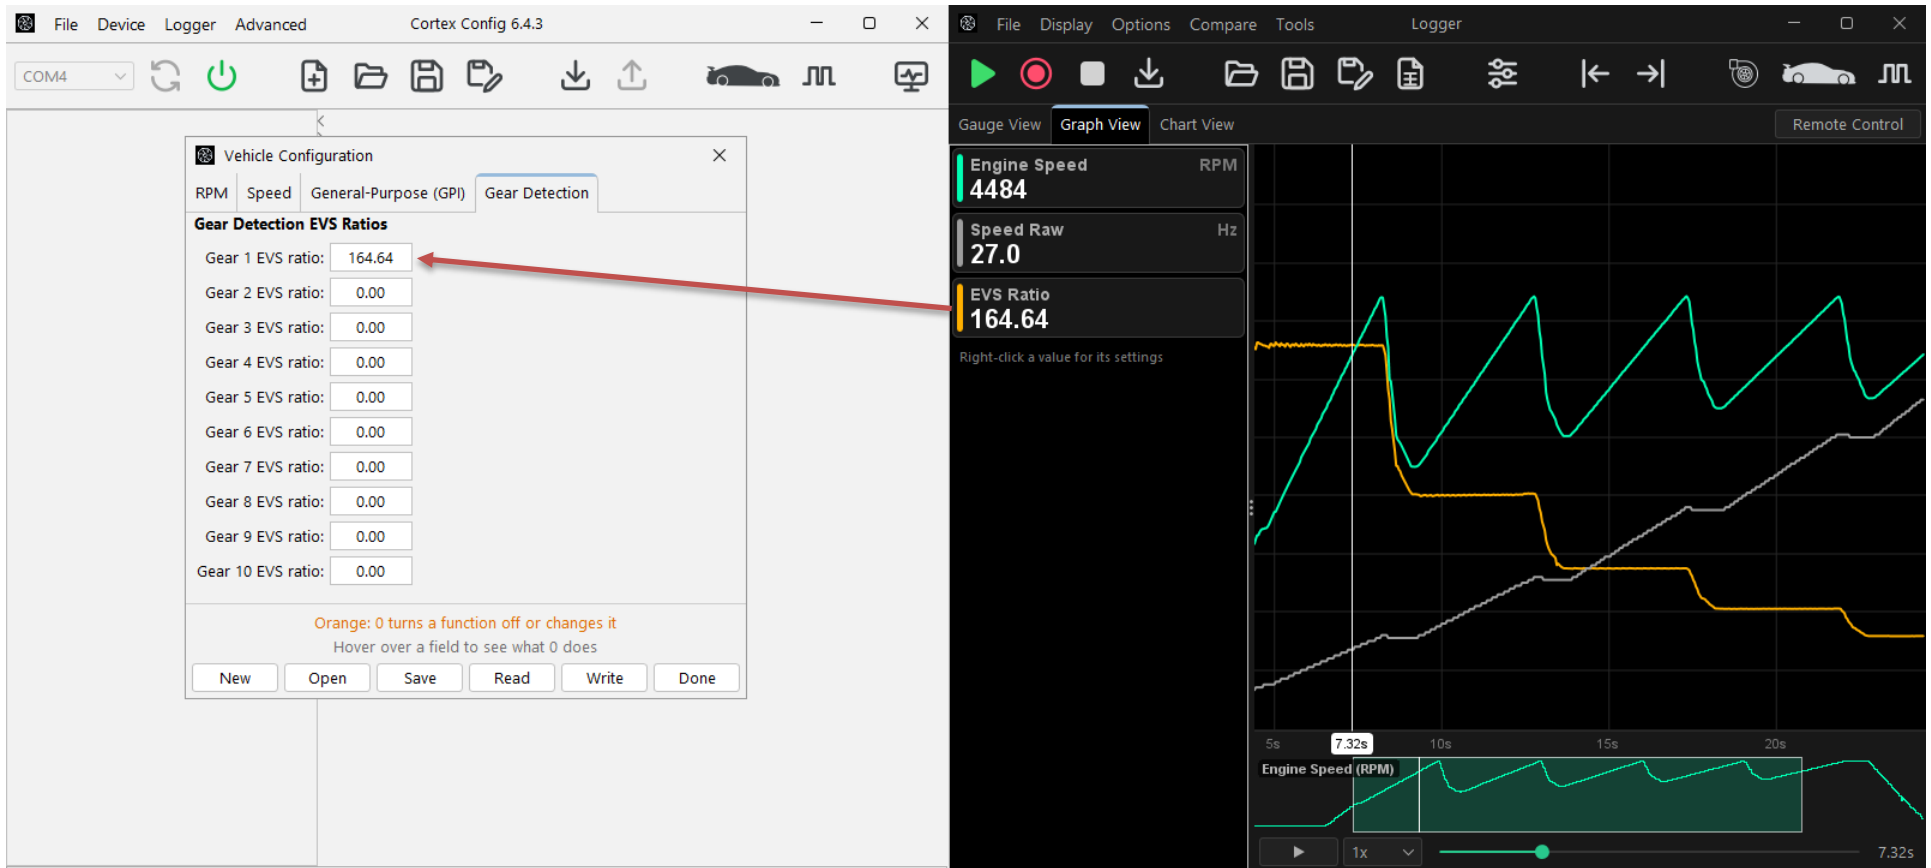


Continue scrolling through the log data to obtain the EVS ratio for every gear.


Gear 2 – 100.25

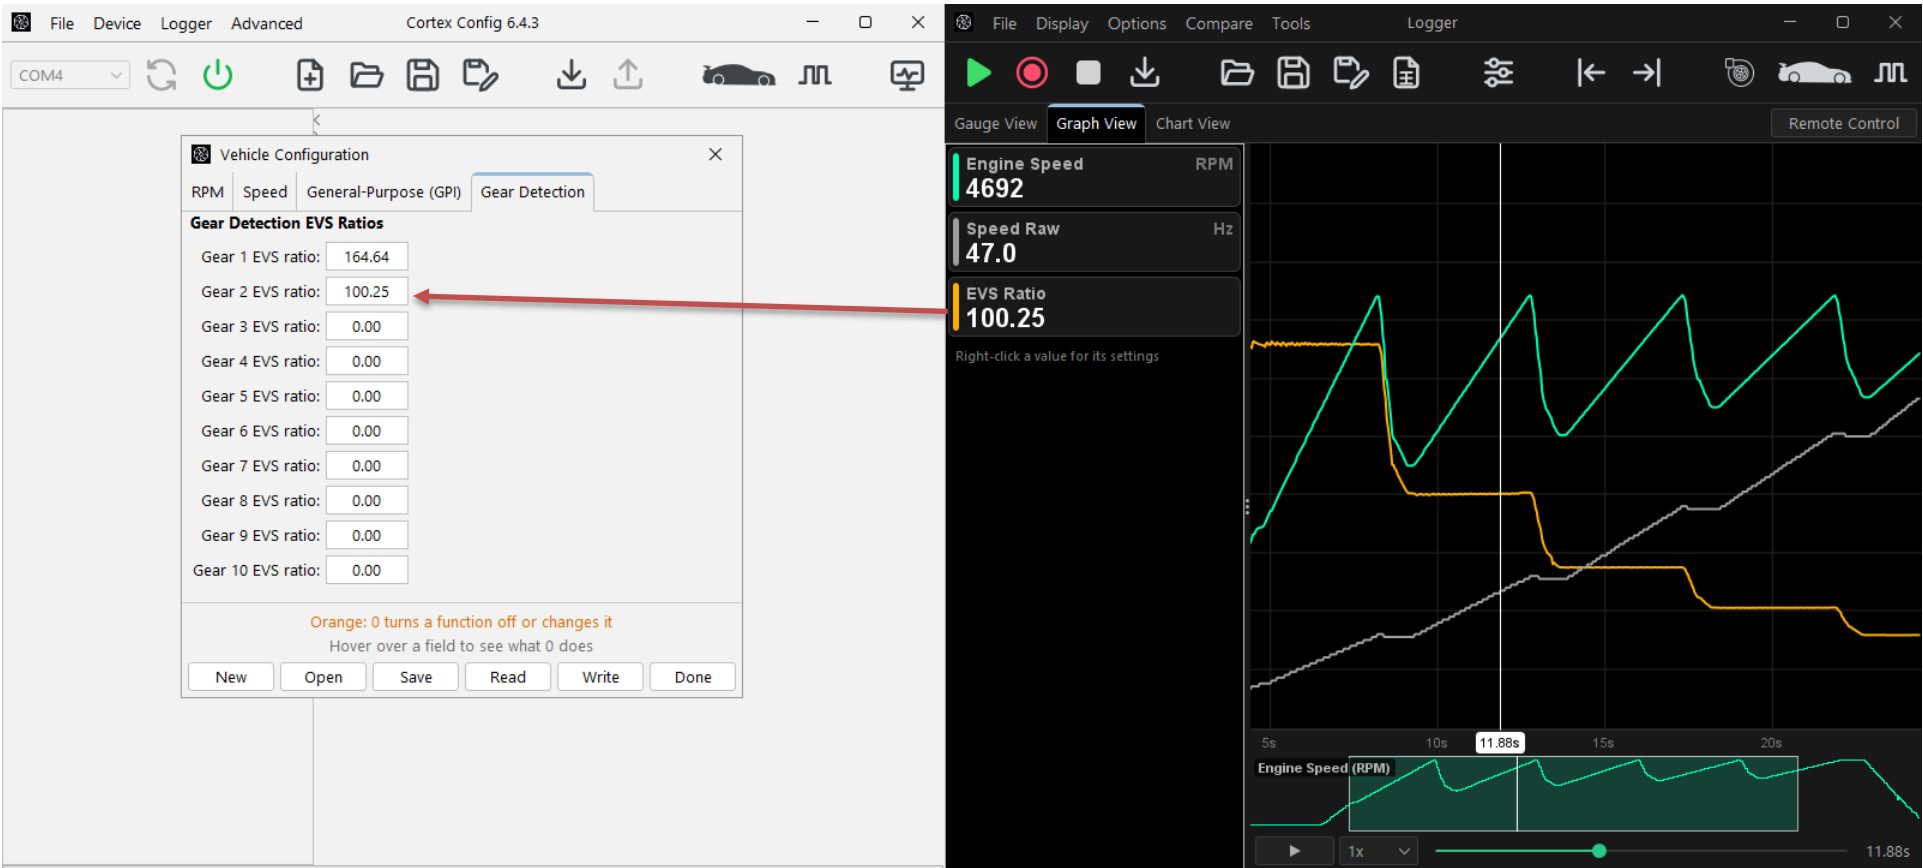


Gear 3 – 68.68

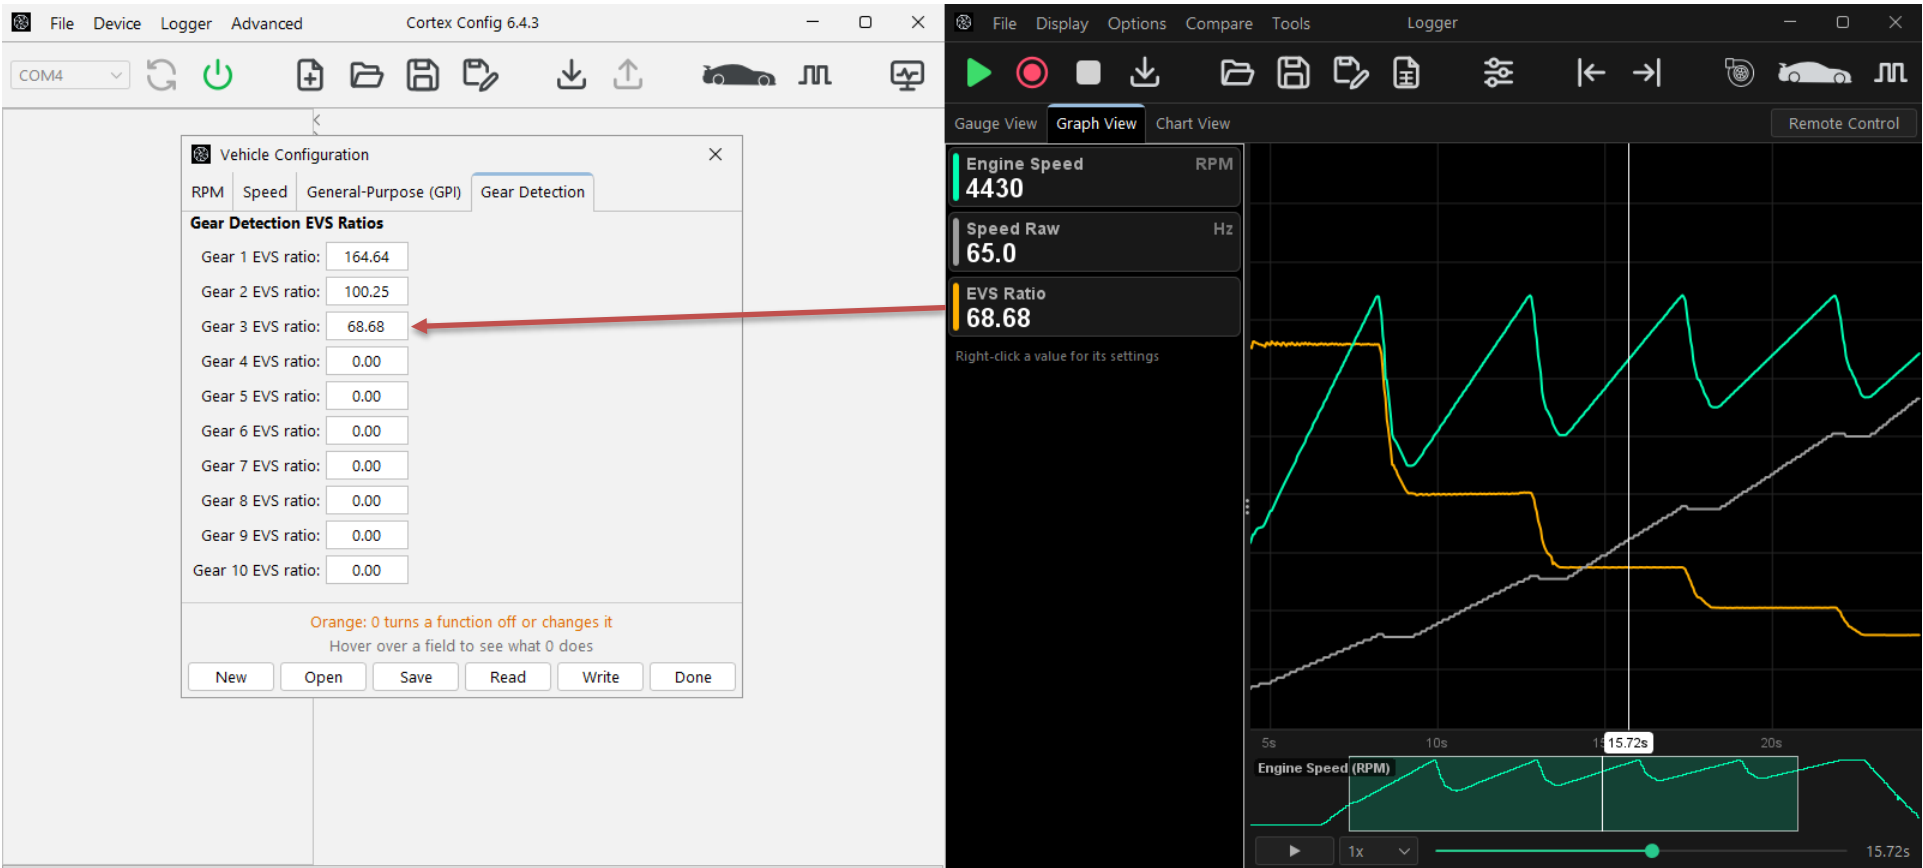


Gear 4 – 51.32

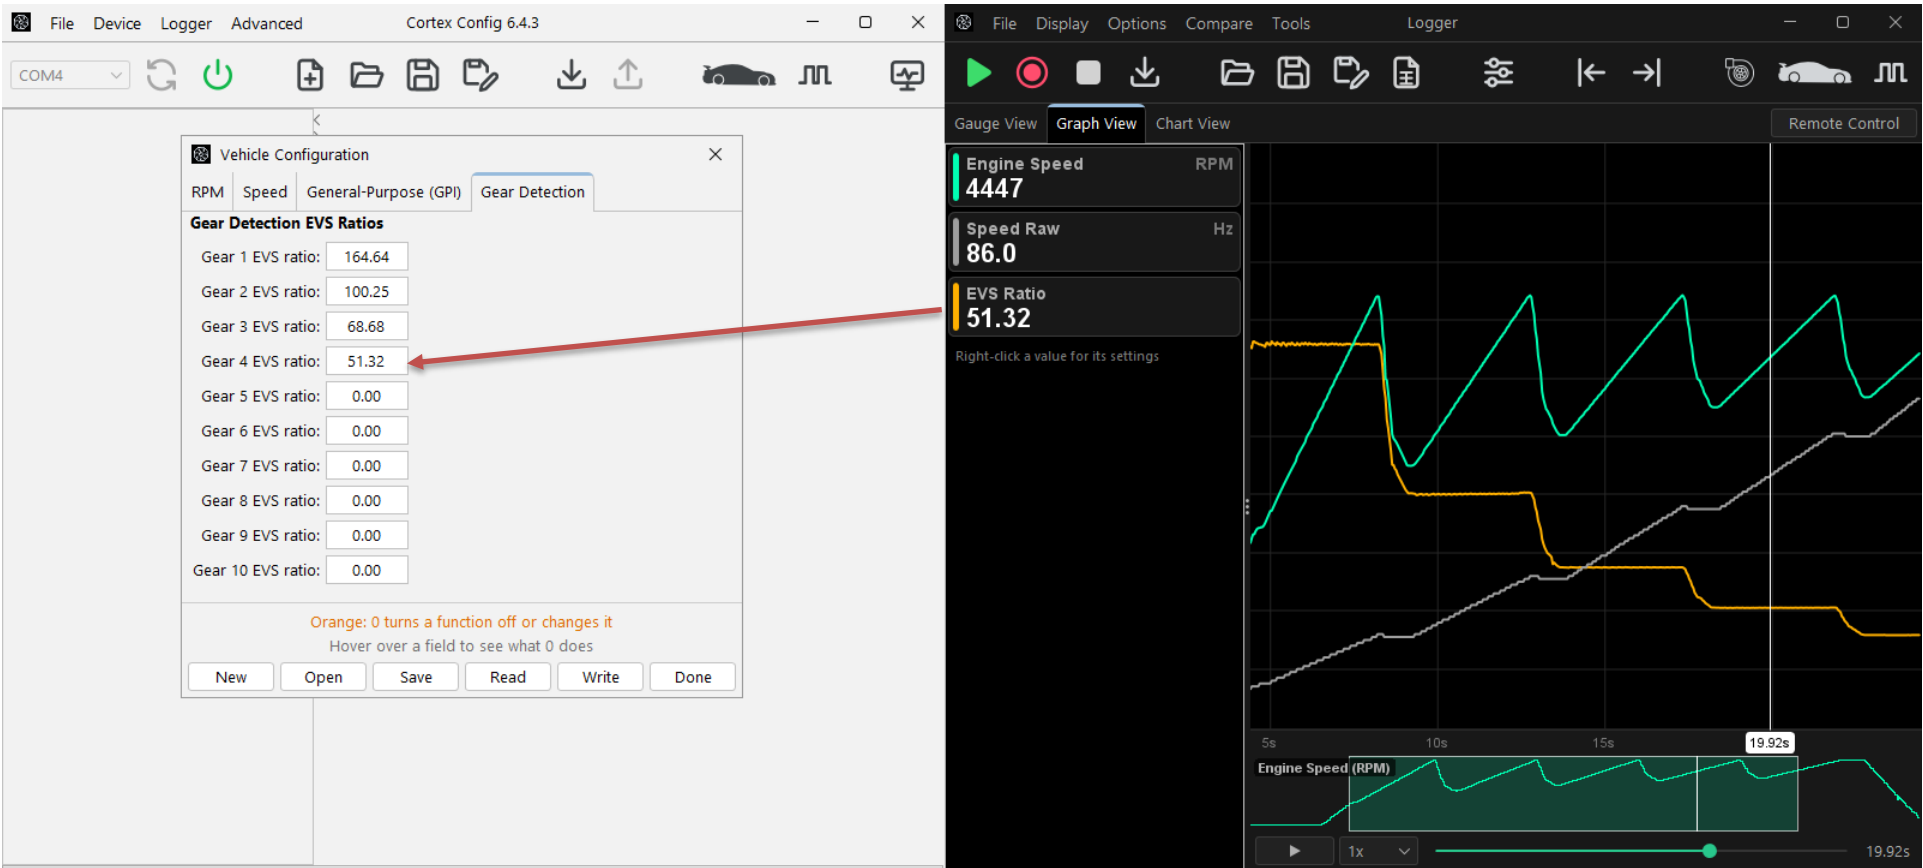

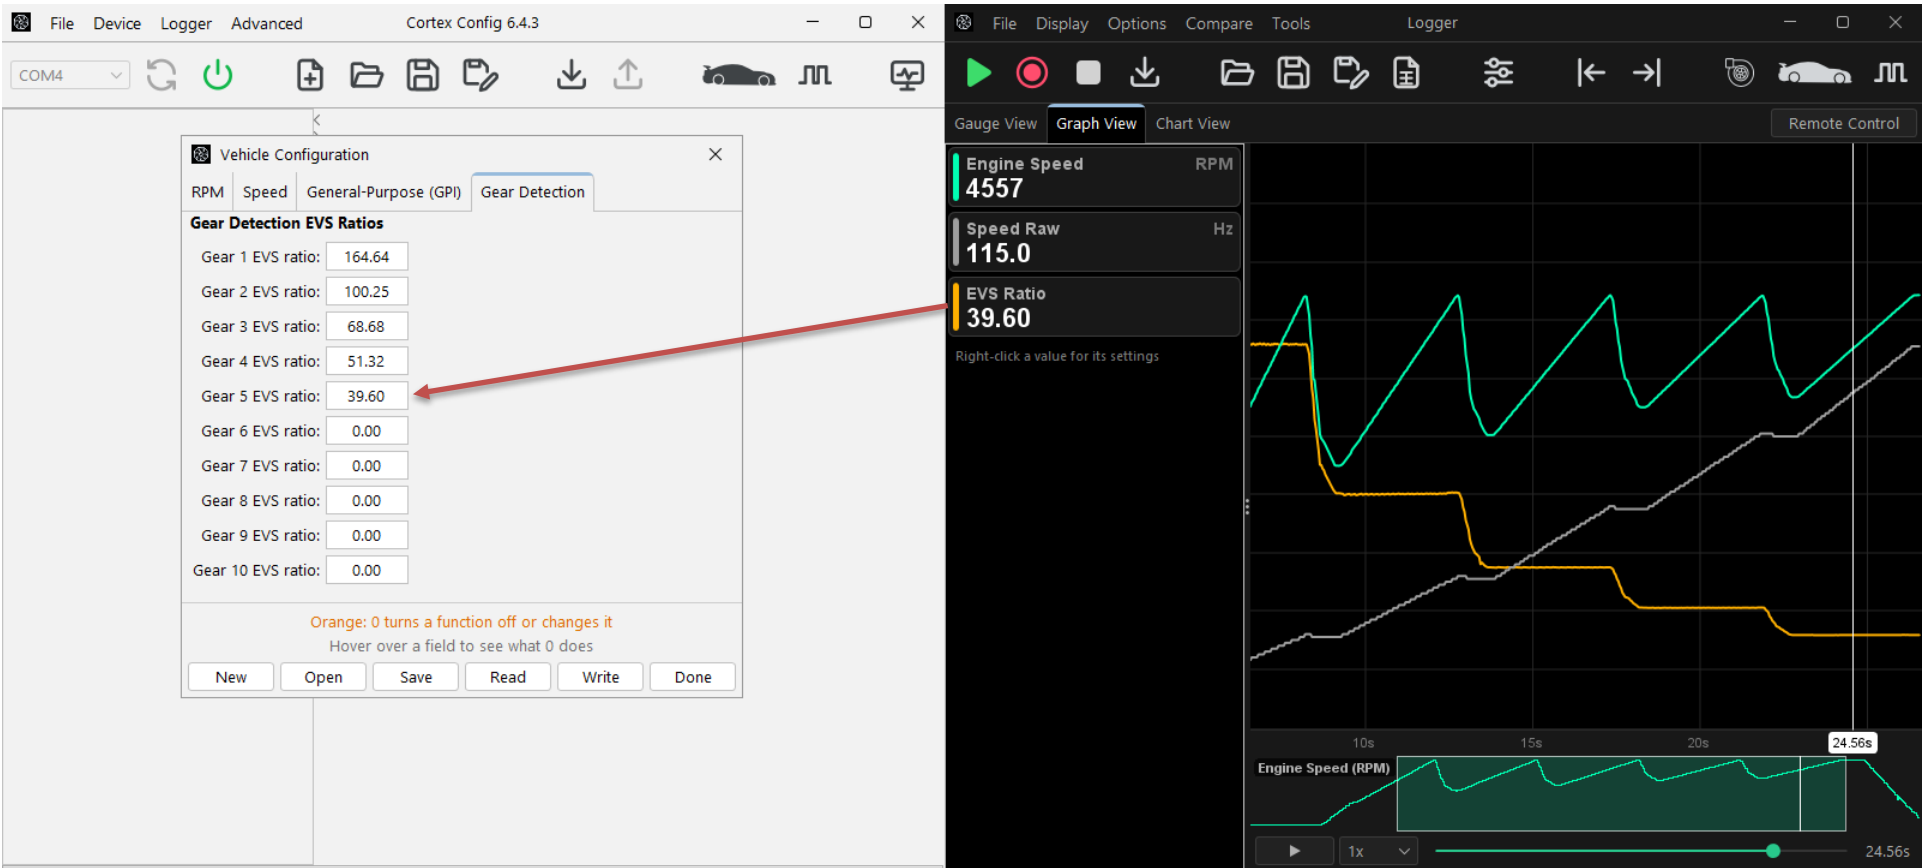


Write the new Vehicle Configuration settings to the controller and then use the logger to verify that the gear detected by the Cortex EBC matches the actual gear.

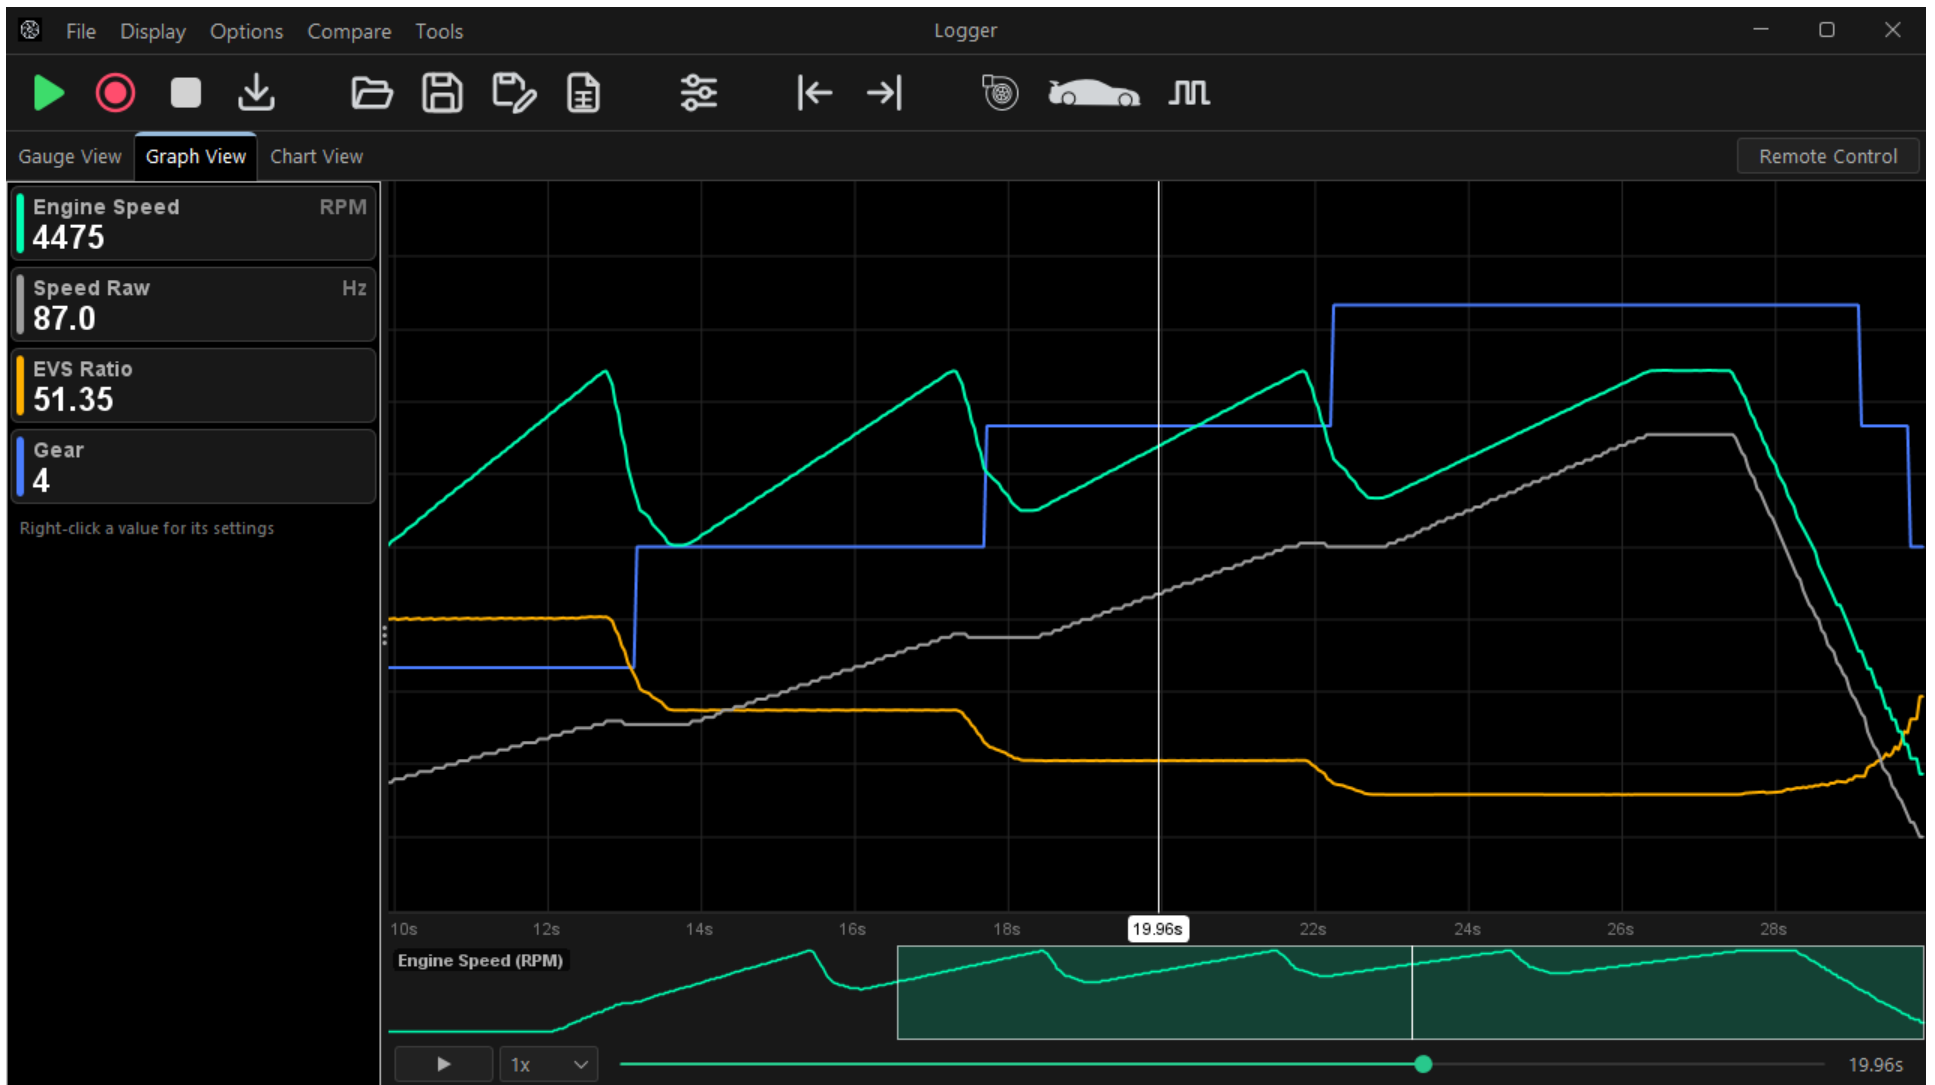


BOOST CONTROL

The Cortex EBC controls boost by rapidly pulsing a 3-Port or 4-Port boost control solenoid (BCS) to manipulate the pressure applied to one or more ports on your wastegate(s). The BCS is always pulsed at a constant frequency, but the duration of each pulse can be continuously modulated to control the overall amount of air that passes through the solenoid. This control method is commonly known as pulse width modulation (PWM).

The duty cycle of the PWM control signal is the percentage of time that the BCS will be powered during each on-off cycle. At 0% duty cycle, the BCS will be off for the entire cycle. At 50% duty cycle, the BCS will be on for half of the cycle and off for the other half. At 100% duty cycle, the BCS will be on for the entire cycle.

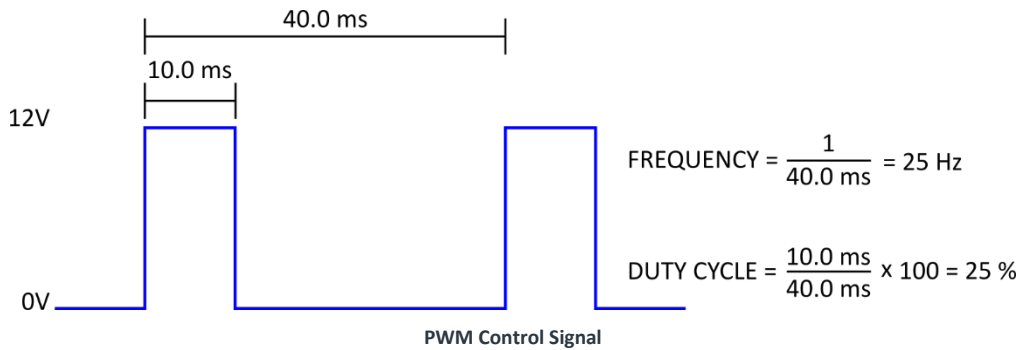

Setting boost with the Cortex EBC is an iterative process that involves adjusting various boost control parameters until the PWM duty cycle applied to the BCS generates the desired boost curve. Generally, increasing the BCS duty cycle results in the turbo producing more boost, as illustrated in the diagram below.

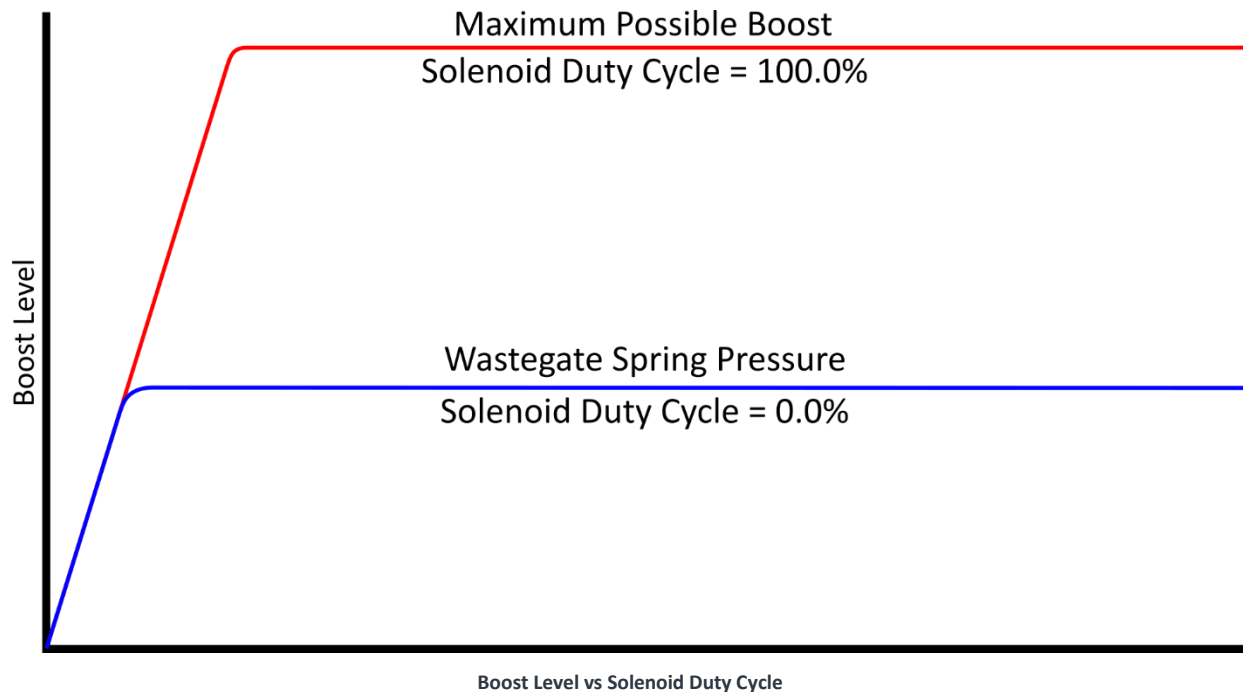

The boost level produced at a specific duty cycle depends on numerous factors, including wastegate spring pressure, gear, engine speed, exhaust manifold backpressure, and ambient weather conditions. In an ideal turbo system, applying a static duty cycle will result in a stable boost level from spool-up to redline. However, in most real-world setups, the duty cycle must be constantly adjusted throughout the powerband to obtain a stable boost curve.

BOOST CONTROL SETTINGS

The boost control settings for the Cortex EBC are stored within a boost configuration file. These files can only be modified using the Cortex Config software. For any changes to take effect, you must transfer the updated settings to the device by clicking the write button at the top of the software window.


Each boost configuration file contains 6 unique boost control profiles that can be selected on the fly using the buttons on the front of the Cortex EBC device. The settings in each profile are broken into 5 categories:

- [Configuration](#)
- [Open-Loop](#)
- [Closed-Loop](#)
- [Launch](#)
- [Fail-Safes](#)

CONFIGURATION

PROFILE CONFIGURATION

The profile configuration settings determine the boost control strategy that will be used when the corresponding profile is selected for boost control.

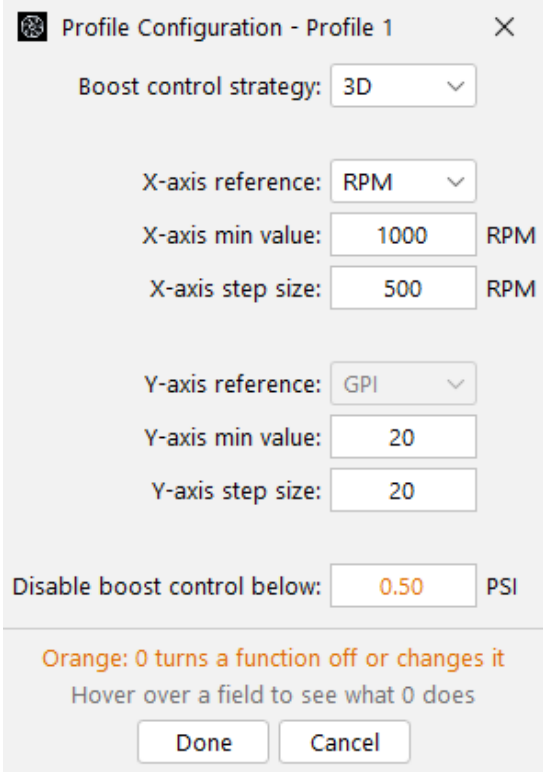

The screenshot shows a dialog box titled "Profile Configuration - Profile 1" with a close button (X) in the top right corner. The dialog contains the following settings:

- Boost control strategy:** A dropdown menu set to "3D".
- X-axis reference:** A dropdown menu set to "RPM".
- X-axis min value:** A text input field containing "1000" with "RPM" as a unit label.
- X-axis step size:** A text input field containing "500" with "RPM" as a unit label.
- Y-axis reference:** A dropdown menu set to "GPI".
- Y-axis min value:** A text input field containing "20".
- Y-axis step size:** A text input field containing "20".
- Disable boost control below:** A text input field containing "0.50" with "PSI" as a unit label.

Below the input fields, there is a note: "Orange: 0 turns a function off or changes it. Hover over a field to see what 0 does". At the bottom of the dialog are two buttons: "Done" and "Cancel".

Boost control strategy: Basic ▾

The **Boost control strategy** field sets the general method of boost control that will be used in the corresponding boost control profile.

Gear based boost control is possible with any control strategy except for **2D x 16** or **2D x 64** referenced to time.

- **Basic** – Boost control based on gear only.
- **2D x 16** – Boost control based on 16-cell 2D tables.
- **2D x 64** – Boost control based on 64-cell 2D tables.
- **3D** – Boost control based on 16x4 cell 3D tables.

X-axis reference: RPM ▾

The **X-axis reference** field sets the type of data that will be referenced by the x-axis of the boost control tables when using the 3D boost control strategy. Possible data types are RPM and Speed.

X-axis min value: 1000 RPM
X-axis step size: 500 RPM

The **X-axis min value** and **X-axis step size** fields set the control point scaling of the x-axis for 3D boost control tables. The first parameter sets the value of the initial control point, and the second parameter sets the spacing between all the subsequent control points.

NOTE: The first and last control points will continue to be used for boost control in situations that are outside of the axis bounds.

Y-axis reference: RPM ▾

The **Y-axis reference** field sets the type of data that will be referenced by the y-axis of the boost control tables when using the 2D or 3D boost control strategies. Possible data types for the 2D boost control strategies are RPM, Speed, GPI (General-Purpose Input), or Time. The 3D boost control strategy will always reference GPI data.

Y-axis min value: 1000 RPM
Y-axis step size: 500 RPM

The **Y-axis min value** and **Y-axis step size** fields set the control point scaling of the y-axis for 2D and 3D boost control tables. The first parameter sets the value of the initial control point, and the second parameter sets the spacing between all the subsequent control points.

NOTE: The first and last control points will continue to be used for boost control in situations that are outside of the axis bounds.

Disable boost control below: 0.50 PSI

The **Disable boost control below** field sets the boost threshold under which boost control will be constantly disabled. This is also the boost level that must be reached for the GPI boost control fail-safes to deactivate and reset. In most cases, this parameter should be set to a value between 0.10-0.50 PSI.

WARNING: This parameter should only be set to zero to diagnosis the operation of the boost control solenoid.

CONFIGURATION EXAMPLE – Basic Boost by Gear Strategy

One control point per gear

Profile Configuration - Profile 1

Boost control strategy: Basic

X-axis reference: RPM

X-axis min value: 1000 RPM

X-axis step size: 500 RPM

Y-axis reference: RPM

Y-axis min value: 1000 RPM

Y-axis step size: 500 RPM

Disable boost control below: 0.50 PSI

Orange: 0 turns a function off or changes it
Hover over a field to see what 0 does

Done Cancel

File Device Logger Advanced
Cortex Config 6.4.3

COM4

↺

⏻

+

📁

💾

📄

⬇️

⬆️

🚗

📈

📡

Boost Configuration File

- ▼ Profile 1 - Basic Strategy
 - > Configuration
 - > Fail-Safes
 - > Launch
 - > Open-Loop
 - 📊 Start Duty Cycle
 - 📋 Spool Boost Control
 - 📋 Gear Change Overboost
 - > Closed-Loop
- > Profile 2 - Basic Strategy
- > Profile 3 - Basic Strategy
- > Profile 4 - Basic Strategy
- > Profile 5 - Basic Strategy
- > Profile 6 - Basic Strategy

PROFILE: 1 | START DUTY CYCLE [%]

+

-

×

=

1.00

Copy

Paste

Interpolate

	Start Duty Cycle (%)
Scramble	0.0
Gear 10	0.0
Gear 9	0.0
Gear 8	0.0
Gear 7	0.0
Gear 6	0.0
Gear 5	0.0
Gear 4	0.0
Gear 3	0.0
Gear 2	0.0
Gear 1	0.0

Start Duty Cycle (%)

Cortex EBC User Manual 6.4.5 Rev A

SIRHC Labs LLC – 2026

77

CONFIGURATION EXAMPLE – 16-point Boost by RPM Strategy

1,000-8,500 RPM control range, 500 RPM resolution

Profile Configuration - Profile 1

Boost control strategy: 2D x 16

X-axis reference: RPM

X-axis min value: 1000 RPM

X-axis step size: 500 RPM

Y-axis reference: RPM


Y-axis min value: 1000 RPM

Y-axis step size: 500 RPM

Disable boost control below: 0.50 PSI

Orange: 0 turns a function off or changes it
Hover over a field to see what 0 does

Done Cancel

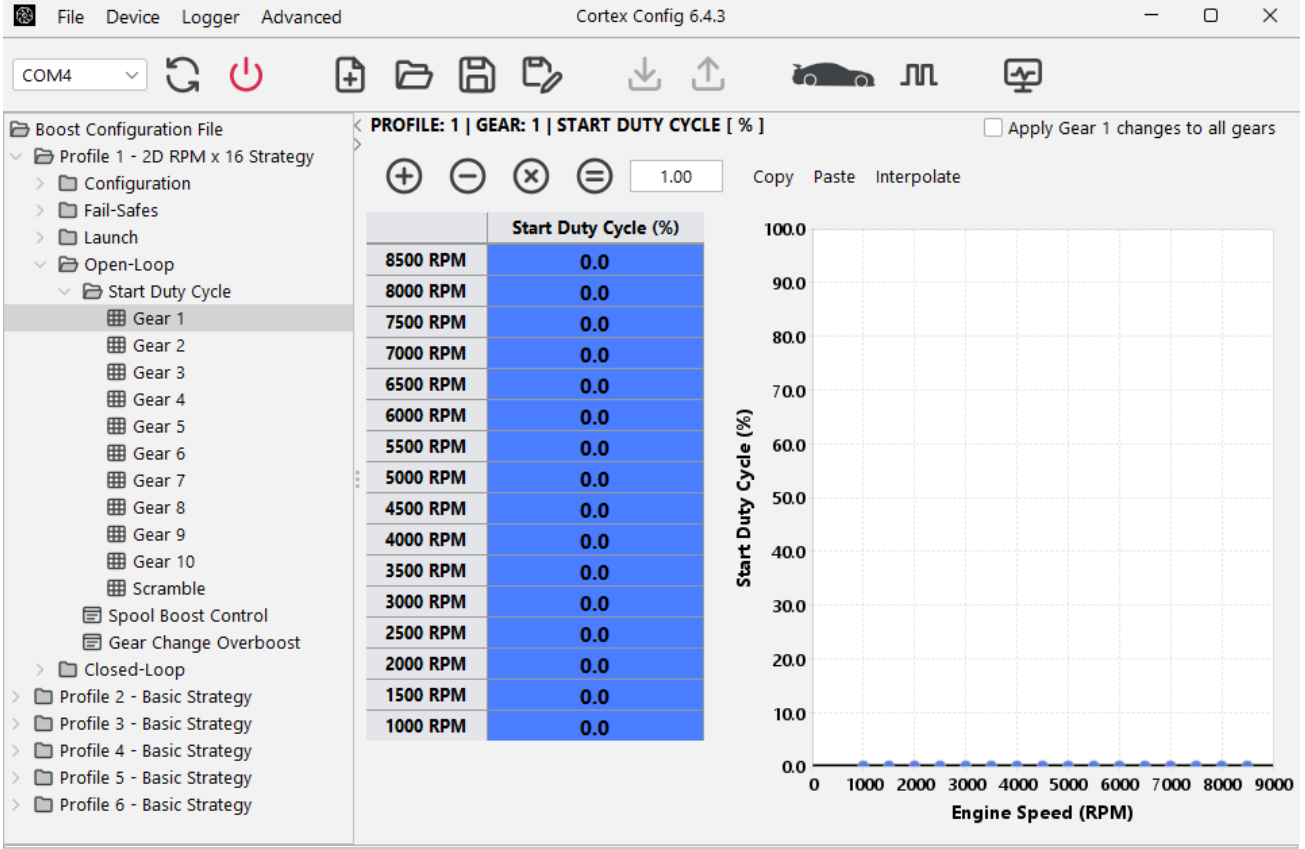

COM4

Boost Configuration File

- Profile 1 - 2D RPM x 16 Strategy
 - Configuration
 - Fail-Safes
 - Launch
 - Open-Loop
 - Start Duty Cycle
 - Gear 1
 - Gear 2
 - Gear 3
 - Gear 4
 - Gear 5
 - Gear 6
 - Gear 7
 - Gear 8
 - Gear 9
 - Gear 10
 - Scramble
 - Spool Boost Control
 - Gear Change Overboost
 - Closed-Loop
- Profile 2 - Basic Strategy
- Profile 3 - Basic Strategy
- Profile 4 - Basic Strategy
- Profile 5 - Basic Strategy
- Profile 6 - Basic Strategy

PROFILE: 1 | GEAR: 1 | START DUTY CYCLE [%]

1.00 Copy Paste Interpolate

Engine Speed (RPM)	Start Duty Cycle (%)
8500 RPM	0.0
8000 RPM	0.0
7500 RPM	0.0
7000 RPM	0.0
6500 RPM	0.0
6000 RPM	0.0
5500 RPM	0.0
5000 RPM	0.0
4500 RPM	0.0
4000 RPM	0.0
3500 RPM	0.0
3000 RPM	0.0
2500 RPM	0.0
2000 RPM	0.0
1500 RPM	0.0
1000 RPM	0.0

Start Duty Cycle (%)

Engine Speed (RPM)

CONFIGURATION EXAMPLE – 16-point Boost by Speed Strategy
0-150 MPH control range, 10 MPH resolution.

Profile Configuration - Profile 1

Boost control strategy: **2D x 16**

X-axis reference: **RPM**

X-axis min value: **1000** RPM

X-axis step size: **500** RPM

Y-axis reference: **Speed**

Y-axis min value: **0** MPH

Y-axis step size: **10** MPH

Disable boost control below: **0.50** PSI

Orange: 0 turns a function off or changes it
Hover over a field to see what 0 does

Done **Cancel**

PROFILE: 1 | GEAR: 1 | START DUTY CYCLE [%]

☐ Apply Gear 1 changes to all gears

1.00 Copy Paste Interpolate

Vehicle Speed (MPH)	Start Duty Cycle (%)
150 MPH	0.0
140 MPH	0.0
130 MPH	0.0
120 MPH	0.0
110 MPH	0.0
100 MPH	0.0
90 MPH	0.0
80 MPH	0.0
70 MPH	0.0
60 MPH	0.0
50 MPH	0.0
40 MPH	0.0
30 MPH	0.0
20 MPH	0.0
10 MPH	0.0
0 MPH	0.0

Start Duty Cycle (%)

Vehicle Speed (MPH)

CONFIGURATION EXAMPLE – 64-point Boost by Time Strategy

0.0-6.3 seconds control range, 100 millisecond resolution

Profile Configuration - Profile 1

Boost control strategy: **2D x 64**

X-axis reference: **RPM**

X-axis min value: **1000** RPM

X-axis step size: **500** RPM

Y-axis reference: **Time**

Y-axis min value: **0** ms

Y-axis step size: **100** ms

Disable boost control below: **0.50** PSI

Orange: 0 turns a function off or changes it
Hover over a field to see what 0 does

Done **Cancel**

The screenshot shows the Cortex Config 6.4.3 software interface. The left pane displays the 'Boost Configuration File' tree, with 'Profile 1 - 2D Time x 64 Strategy' selected. The right pane shows the 'PROFILE: 1 | PRIMARY | START DUTY CYCLE [%]' configuration. A table lists the 'Start Duty Cycle (%)' values for each time point from 4.5 s to 6.3 s, all set to 0.0. A graph on the right plots 'Start Duty Cycle (%)' against 'Time (s)', showing a constant value of 0.0 across the entire time range.

Time (s)	Start Duty Cycle (%)
6.3 s	0.0
6.2 s	0.0
6.1 s	0.0
6.0 s	0.0
5.9 s	0.0
5.8 s	0.0
5.7 s	0.0
5.6 s	0.0
5.5 s	0.0
5.4 s	0.0
5.3 s	0.0
5.2 s	0.0
5.1 s	0.0
5.0 s	0.0
4.9 s	0.0
4.8 s	0.0
4.7 s	0.0
4.6 s	0.0
4.5 s	0.0

CONFIGURATION EXAMPLE – 3D RPM + Ethanol Content Strategy

RPM: 1,000-8,500 RPM control range, 500 RPM resolution

Ethanol Content: 55-85% control range, 10% resolution

Profile Configuration - Profile 1

Boost control strategy: **3D**

X-axis reference: **RPM**

X-axis min value: **1000** RPM

X-axis step size: **500** RPM

Y-axis reference: **GPI**

Y-axis min value: **55**

Y-axis step size: **10**

Disable boost control below: **0.50** PSI

Orange: 0 turns a function off or changes it
Hover over a field to see what 0 does

Done **Cancel**

File Device Logger Advanced
Cortex Config 6.4.3

COM4
⏮ ⏪ ⏩ ⏭ ⏮ ⏪ ⏩ ⏭ ⏮ ⏪ ⏩ ⏭ ⏮ ⏪ ⏩ ⏭

Boost Configuration File

- Profile 1 - 3D RPM + GPI Strategy
 - Configuration
 - Fail-Safes
 - Launch
 - Open-Loop
 - Start Duty Cycle
 - Gear 1**
 - Gear 2
 - Gear 3
 - Gear 4
 - Gear 5
 - Gear 6
 - Gear 7
 - Gear 8
 - Gear 9
 - Gear 10
 - Scramble
 - Spool Boost Control
 - Gear Change Overboost
- Closed-Loop
- Profile 2 - Basic Strategy
- Profile 3 - Basic Strategy
- Profile 4 - Basic Strategy
- Profile 5 - Basic Strategy
- Profile 6 - Basic Strategy

PROFILE: 1 | GEAR: 1 | START DUTY CYCLE [%]

☐ Apply Gear 1 changes to all gears

⊕ ⊖ ⊗ ⊛
1.00
Copy Paste Interpolate

	Engine Speed (RPM)															
	1000	1500	2000	2500	3000	3500	4000	4500	5000	5500	6000	6500	7000	7500	8000	8500
85	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
75	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
65	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0
55	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0	0.0

Cortex EBC User Manual 6.4.5 Rev A

SIRHC Labs LLC – 2026

81


OPEN-LOOP

Open-loop boost control is a method where you specify the exact duty cycle the controller should apply to the boost control solenoid (e.g., 60% duty cycle at 5,500 RPM in 3rd gear). With this approach, the controller does not make additional adjustments to the duty cycle to reach a specific target boost level. In many cases, this method can deliver excellent boost control, and closed-loop control is not necessary.

START DUTY CYCLE

The start duty cycle is the most critical boost control parameter, as it determines the duty cycle applied to the boost control solenoid in most situations. Depending on the chosen boost control strategy, the start duty cycle can be uniquely set at 16 points in total, 64 points in total, 1 point per gear, 16 points per gear, or 64 points per gear.

Using the start duty cycle tables is mandatory in all cases. You must adjust the start duty cycle tables to bring your boost level close to your target before enabling the closed-loop control.

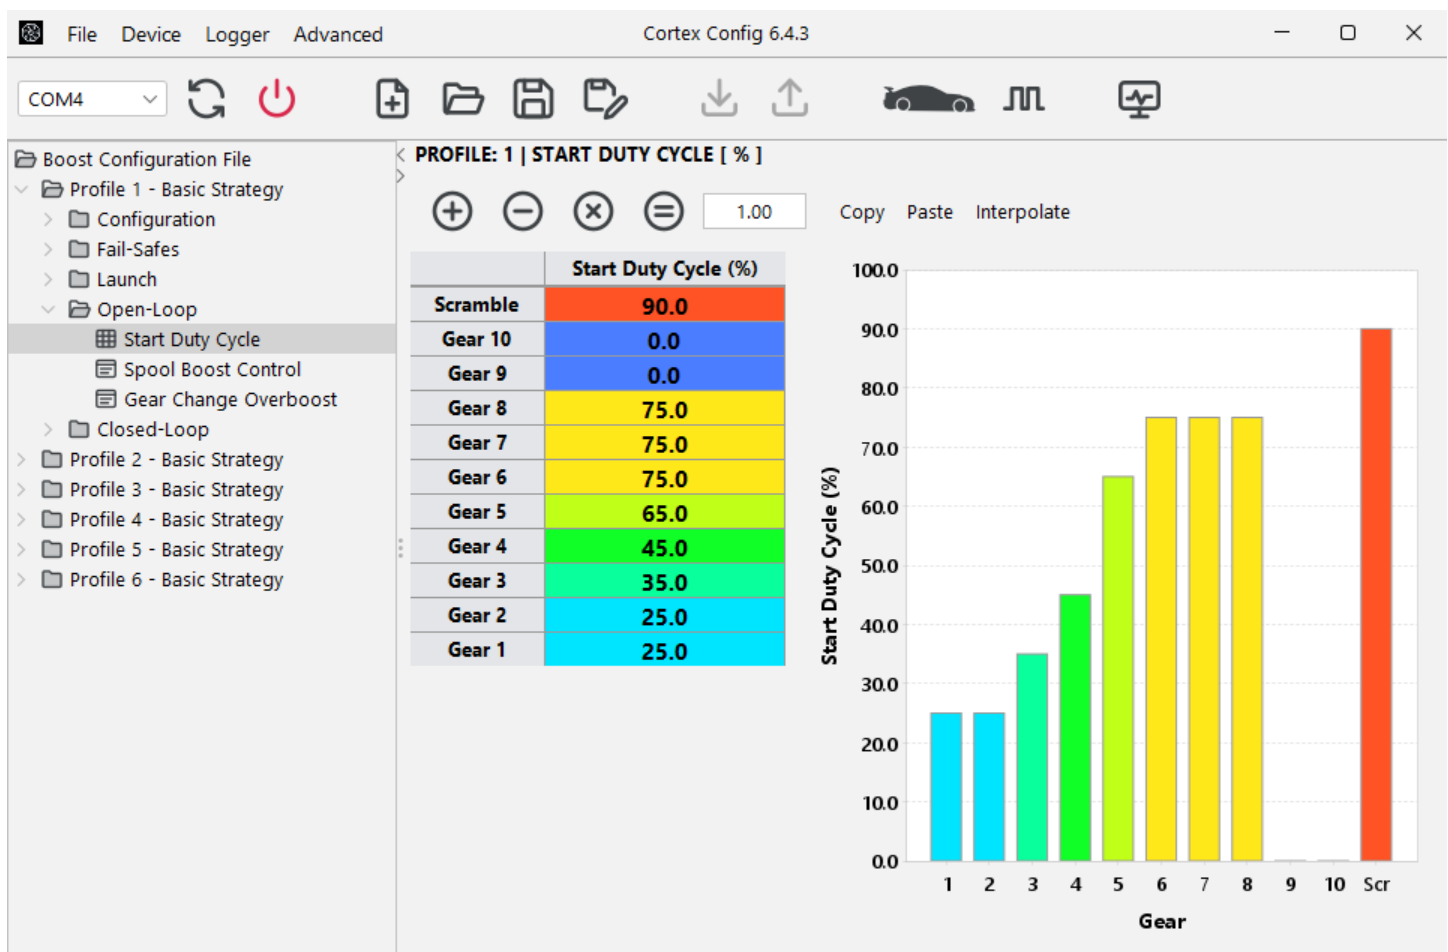

When using the basic boost control strategy, you can only set the start duty cycle at one point per gear. In many cases, applying a static duty cycle in each gear will not produce a flat boost curve from turbo spool-up to redline. Instead, the boost level may increase (creep) or decrease (taper) as engine speed rises. Small amounts of boost creep or taper can typically be corrected using the closed-loop boost control function. However, significant boost creep or taper can only be addressed by switching to an RPM or vehicle-speed-based control strategy. These strategies allow the start duty cycle to be set at multiple points across the powerband, helping to stabilize the boost curve.

General Procedure for Adjusting Start Duty Cycle:

- 1. Begin with a Start Duty Cycle of 20%**

There is typically no significant boost increase below this level.

- 2. Gradually Increase the Start Duty Cycle**

Increase the start duty cycle in small increments until the peak boost reaches your desired level. Initially, limit adjustments to increments of 5% or less. Once you gain familiarity with how your turbo system responds to different duty cycle levels, you can make larger adjustments as needed.

OVERBOOST WARNING: Excessive boost pressure can lead to catastrophic engine damage. Always make sure the overboost fail-safe parameters are set to an appropriate level before you attempt to increase boost above spring pressure.

4-PORT BCS WARNING: Extra care should be taken when making duty cycle adjustments if you are using a 4-port BCS. Because of the way these solenoids apply pressure to the wastegate, boost control can become extremely sensitive to changes in duty cycle. At higher duty cycle levels, it is not uncommon to see a 1-2 PSI change in boost pressure from a 1% change in duty cycle.

SPOOL BOOST CONTROL

The spool boost control function is designed to reduce the time required to reach full boost. When building boost, wastegate(s) may begin to crack open several PSI before full boost is achieved. This allows some exhaust gas to escape through the wastegate instead of driving the turbocharger, increasing the time needed to reach full boost. The spool boost control function can be used to address this by temporarily applying a high static duty cycle to the boost control solenoid to prevent the wastegate(s) from opening prematurely.

Typically, the spool boost control function activates when manifold pressure transitions from vacuum to boost. It remains active until boost either exceeds the specified threshold or drops back to 0 PSI. However, its behavior can vary depending on the parameters being used.

Results from the spool boost control function depend on the specific application. Some turbo systems may experience a significant improvement in spool time, while others may see minimal improvement or encounter unacceptable boost spikes. If a substantial reduction in spool time is not observed, it is recommended to leave this function disabled.

 Spool Boost Control - Profile 1 ✕

GEAR 1

GEAR 2

GEAR 3

GEAR 4

GEAR 5

GEAR 6

GEAR 7

GEAR 8

GEAR 9

GEAR 10

SCRAMBLE

☐ Apply Gear 1 changes to all gears

Gear 1

Lock duty cycle at:

0.0

%

Activate until boost is greater than:

0.0

PSI

Reactivate if boost falls below:

0.0

PSI

Do not activate if engine speed is greater than:

0

RPM

Do not activate if throttle is less than:

0.0

% Open

Disable reactivation for:

0

ms

Lock duty cycle at: %

The **Lock duty cycle at** field sets the constant duty cycle that will be used while the spool boost control is activated. In general, this field should be set to a very high value (100%) to ensure the wastegate valve is forced closed. If this field is set to zero it will cause the controller to continue using the start duty cycle tables, but the closed-loop boost control will be disabled until the spool boost control is deactivated.

Activate until boost is greater than: PSI

The **Activate until boost is greater than** field sets the boost threshold under which the spool boost control will be activated. The spool boost control gets one chance to activate at the start of each pull, as boost rises above the **Disable boost control below** level. Once activated, it stays active until boost reaches this threshold. Setting this threshold to zero will disable the spool boost control function in the corresponding gear.

Reactivate if boost falls below: PSI

The **Reactivate if boost falls below** field sets the level boost must drop to before the spool boost control can activate again. After the spool boost control has ended, it cannot activate again until boost has stayed at or below this level for the time set in the **Disable reactivation for** field. This parameter should be used if boost does not drop to 0.0 PSI during a gear change, but you would like the spool control logic to reactivate. If this threshold is set to zero, boost must drop below the **Disable boost control below** level instead.

Do not activate if engine speed is greater than: RPM

The **Do not activate if engine speed is greater than** field sets the RPM threshold above which the spool boost control will not activate. Engine speed is only checked at the moment the spool boost control would activate. If RPM is above the threshold at that moment, the spool boost control is skipped for that pull. Once the spool boost control has activated, it stays active even if RPM rises above the threshold. If this threshold is set to zero it will be ignored by the spool boost control activation logic.

Do not activate if throttle is less than: % Open

The **Do not activate if throttle is less than** field sets the throttle position threshold below which the spool boost control will not activate. Throttle position is only checked at the moment the spool boost control would activate. If the throttle is below the threshold at that moment, the spool boost control is skipped for that pull, and opening the throttle further will not activate it. Once the spool boost control has activated, it stays active even if the throttle drops below the threshold. This parameter can be used to substantially increase drivability at low throttle angles on vehicles that see a lot of street use. If this threshold is set to zero it will be ignored by the spool boost control activation logic.

NOTE: A throttle position signal must be connected to the general-purpose input, with its input mode set to Analog Sensor, to use this threshold.

Disable reactivation for: ms

The **Disable reactivation for** field sets the amount of time boost must stay at or below the reactivation level before the spool boost control can activate again. The reactivation level is the **Reactivate if boost falls below** threshold, or the **Disable boost control below** level if that threshold is set to zero. A shorter dip in boost will not reactivate the spool boost control. This parameter can prevent the overshoot that can occur if a high duty cycle is applied in transient boost conditions (immediately respooling after a high RPM shift). If this field is set to zero, the spool boost control can reactivate as soon as boost drops to the reactivation level.

CONFIGURATION EXAMPLE:

The example settings below will lock duty cycle at 100% until boost reaches 12.0 PSI in 1st gear.

 **Spool Boost Control - Profile 1** ✕

GEAR 1

GEAR 2

GEAR 3

GEAR 4

GEAR 5

GEAR 6

GEAR 7

GEAR 8

GEAR 9

GEAR 10

SCRAMBLE

☐ Apply Gear 1 changes to all gears

Gear 1

Lock duty cycle at:

100.0

%

Activate until boost is greater than:

12.0

PSI

Reactivate if boost falls below:

0.0

PSI

Do not activate if engine speed is greater than:

0

RPM

Do not activate if throttle is less than:

0.0

% Open

Disable reactivation for:

0

ms

Blue: 0 = setting ignored

Orange: 0 turns a function off or changes it

Hover over a field to see what 0 does

Done

Cancel

GEAR CHANGE OVERBOOST CONTROL

Vehicles with dual-clutch transmissions (DCT) may experience significant boost spikes during gear shifts. The gear change overboost control function helps mitigate these spikes by predicting when a gear change is about to occur and temporarily overriding normal boost control. When activated, this function locks the duty cycle at a static value for a set duration, helping to stabilize boost levels during the gear change.

 Gear Change Overboost Control - Profile 1

GEAR 1

GEAR 2

GEAR 3

GEAR 4

GEAR 5

GEAR 6

GEAR 7

GEAR 8

GEAR 9

☐ Apply Gear 1 changes to all gears

Gear 1

Lock duty cycle at: 0.0 %

For a duration of: 0 ms

Enable if engine speed is greater than: 0 RPM

Activate if engine speed drops by: 0 RPM

Orange: 0 turns a function off or changes it

Hover over a field to see what 0 does

Done

Cancel

<div>Lock duty cycle at: 0.0 %</div> <p>The Lock duty cycle at field sets the duty cycle that will be used while the gear change overboost control is activated.</p>
<div>For a duration of: 0 ms</div> <p>The For a duration of field sets the amount of time that the gear change overboost control will be activated. Setting this threshold to zero will disable the gear change overboost control function in the corresponding gear.</p>
<div>Enable if engine speed is greater than: 0 RPM</div> <p>The Enable if RPM is greater than field sets the RPM threshold over which the gear change overboost control can be activated. Setting this threshold to zero will disable the gear change overboost control function in the corresponding gear.</p>
<div>Activate if engine speed drops by: 0 RPM</div> <p>The Activate if engine speed drops by field sets the amount RPM must drop by (in a single data sample) before the gear change overboost control will activate. If this field is set to zero the gear change overboost control will activate as soon as RPM reaches the Enable if engine speed is greater than threshold, and will activate again each time its duration ends for as long as RPM stays above that threshold.</p>

WARNING: Before attempting to use the closed-loop boost control settings, you should have a solid understanding of the material provided in this section.

Closed-loop boost control is a method where the controller uses feedback from the turbo system to determine the appropriate solenoid duty cycle needed to achieve the desired boost level. The controller continuously monitors intake manifold pressure and compares it to the target boost level. If there is a discrepancy, the controller adjusts the solenoid duty cycle to bring the manifold pressure in line with the target.

This method can enhance the controller's responsiveness and reduce boost fluctuations caused by changing environmental or driving conditions. This is accomplished by continuously making small adjustments on top of the baseline values set in the open-loop start duty cycle tables. While closed-loop control can theoretically reach a target boost level independently, relying solely on it is typically inefficient. Pneumatic boost control is a complex, variable process, and a closed-loop algorithm alone cannot reliably predict and control a turbo system's behavior.

Creating a baseline with the open-loop start duty cycle tables is essential for effective boost control. These tables should contribute most of the duty cycle applied to the BCS. If the closed-loop adjustments frequently exceed 5-10% to reach the target boost level, it indicates that the start duty cycle tables should be revised.

The feedback variable used in closed-loop boost control is known as "boost error." Boost error represents the difference between the target boost (the desired pressure for the turbo to produce) and the actual boost (the pressure currently being produced by the turbo). When the actual boost matches the target boost, the boost error is zero. If the actual boost is lower than the target boost, the boost error is positive. If the actual boost exceeds the target boost, the boost error is negative.


$$\text{Boost Error} = \text{Target Boost} - \text{Actual Boost}$$

CONDITION	BOOST ERROR
Boost is below target	$\text{Boost Error} > 0$
Boost matches target	$\text{Boost Error} = 0$
Boost is above target	$\text{Boost Error} < 0$

The closed-loop boost control function can employ up to three distinct feedback control algorithms, each contributing separately to the overall closed-loop duty cycle adjustment. When the closed-loop control function is active, the final duty cycle applied to the boost control solenoid (BCS) is determined using the following equation:

$$\text{Solenoid Duty Cycle} = (\text{Open-Loop Start Duty Cycle}) + (\text{Closed-Loop Duty Cycle Adjustment})$$

The closed-loop boost control function operates using a PID (Proportional-Integral-Derivative) control system, which combines three distinct feedback algorithms to generate a final control signal. Proportional control focuses on the instantaneous boost error at any given moment. Integral control considers the cumulative boost error over time, while derivative control responds to the rate of change of the boost error. Each algorithm outputs a duty cycle adjustment that can be positive or negative.

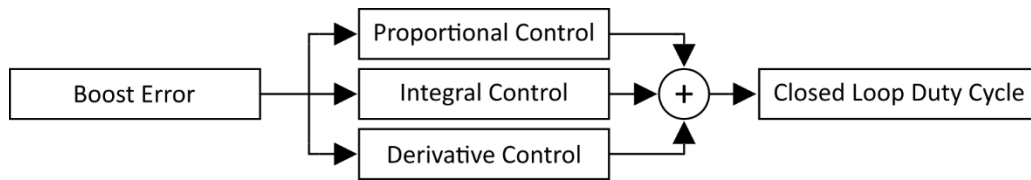

The behavior of each PID feedback algorithm is controlled by three key parameters:

- The first parameter, known as gain, determines how aggressively the algorithm adjusts duty cycle.
- The second parameter specifies the boost error threshold that must be reached before the algorithm becomes active.
- The third parameter limits the maximum duty cycle that the algorithm can contribute, both positively and negatively.

Additionally, two global parameters are used to restrict the total combined duty cycle contribution from all three feedback algorithms.

Closed-loop calculations are executed at the end of each on-off cycle of the boost control solenoid. For instance, if the solenoid pulses at 25 Hz, these calculations are performed 25 times per second.

PROPORTIONAL CONTROL ALGORITHM

The proportional control algorithm is the most straightforward of the feedback algorithms. Its output depends solely on the proportional gain, denoted as K_p , and the instantaneous boost error at the moment the closed-loop calculations are executed. The proportional duty cycle is determined using the following equation:

$$\text{Proportional Duty Cycle} = (\text{Instantaneous Boost Error}) \times K_p$$

When the actual boost is lower than the target boost, the proportional duty cycle will have a positive value to increase the boost level. Conversely, if the actual boost exceeds the target boost, the proportional duty cycle will be negative to reduce the boost level. If the actual boost matches the target boost, the proportional duty cycle will be zero.

CONDITION	DIRECT CONTROL OUTPUT
Boost is below target	Positive (+)
Boost matches target	Zero
Boost is above target	Negative (-)

The proportional duty cycle is directly linked to the magnitude of the boost error at the time of calculation. Larger boost errors will produce more significant duty cycle adjustments, while smaller errors will result in more modest adjustments.

TARGET BOOST	ACTUAL BOOST	BOOST ERROR	K_p	PROPORTIONAL DUTY CYCLE
10.0 PSI	2.0 PSI	8.0 PSI	2.0	$8.0 \times 2.0 = 16.0\%$
10.0 PSI	6.0 PSI	4.0 PSI	2.0	$4.0 \times 2.0 = 8.0\%$
10.0 PSI	10.0 PSI	0.0 PSI	2.0	$0.0 \times 2.0 = 0.0\%$
10.0 PSI	14.0 PSI	-4.0 PSI	2.0	$-4.0 \times 2.0 = -8.0\%$
10.0 PSI	18.0 PSI	-8.0 PSI	2.0	$-8.0 \times 2.0 = -16.0\%$

INTEGRAL CONTROL ALGORITHM

The integral control algorithm typically has the greatest impact on shaping the boost curve and, in many scenarios, it may be the only closed-loop algorithm necessary. Unlike the proportional control algorithm, which focuses solely on the current boost error, the integral control algorithm accounts for both the current boost error and the cumulative boost error from previous closed-loop calculations.

The output of the integral control algorithm is influenced by the integral gain parameter, K_I , and the total accumulation of boost error from prior calculations. The integral duty cycle is reset whenever the boost level drops to 0.0 PSI or when a gear change is detected. The integral duty cycle is calculated using the following equation (the Σ symbol means summation):

$$\text{Integral Duty Cycle} = \Sigma \left(\text{Instantaneous Boost Error} \times \frac{K_I}{\text{Solenoid Frequency}} \right)$$

If the actual boost is lower than the target boost, the integral duty cycle will increase to raise the boost level. Conversely, if the actual boost is higher than the target, the integral duty cycle will decrease to lower the boost. When the actual boost matches the target, the integral duty cycle remains steady, maintaining the current boost level.

For a simple illustration, assume a scenario where the boost error stays constant at 1.0 PSI, and the K_I value is set to 10.0. In this case, the integral duty cycle will accumulate to 10.0% after one second and continue to rise to 20.0% after two seconds. Similarly, if the boost error were -1.0 PSI, the integral duty cycle would decrease to -10.0% after one second and -20.0% after two seconds. While such scenarios are unlikely in real-world applications, they provide a clear understanding of how the integral control algorithm functions.

DERIVATIVE CONTROL ALGORITHM

The derivative control algorithm serves a different purpose compared to the proportional and integral algorithms. Rather than directly reducing boost error, it aims to limit the rate at which the boost error changes over time. This approach helps to smooth out rapid fluctuations in boost pressure. The output of the derivative control algorithm is determined by the derivative gain level, K_D , and the change in boost error measured since the last closed-loop calculation. The derivative duty cycle is calculated using the following equation:


$$\text{Derivative Duty Cycle} = \frac{[(\text{Instantaneous Boost Error}) - (\text{Previous Boost Error})] \times \text{Solenoid Frequency} \times K_D}{10}$$

The derivative control algorithm functions as a predictor of future boost errors and is particularly influential during transient boost conditions, such as when the turbocharger respools immediately after a gear change. Unlike the initial spooling from low RPM, turbochargers can achieve full boost much faster after a shift. In these scenarios, the derivative control algorithm helps manage this rapid boost climb by reducing the solenoid duty cycle, minimizing the risk of a boost spike.

CONDITION	DERIVATIVE DUTY CYCLE
Boost error is negative and boost is moving toward the target over time.	Positive (+)
Boost error is negative and boost is moving away from the target over time.	Negative (-)
Boost is constant.	Zero
Boost error is positive and boost is moving toward the target over time.	Negative (-)
Boost error is positive and boost is moving away from the target over time.	Positive (+)

TARGET BOOST

The closed-loop target boost tables define the desired boost level that the controller aims to achieve. Each open-loop start duty cycle setting has a corresponding closed-loop target boost value.

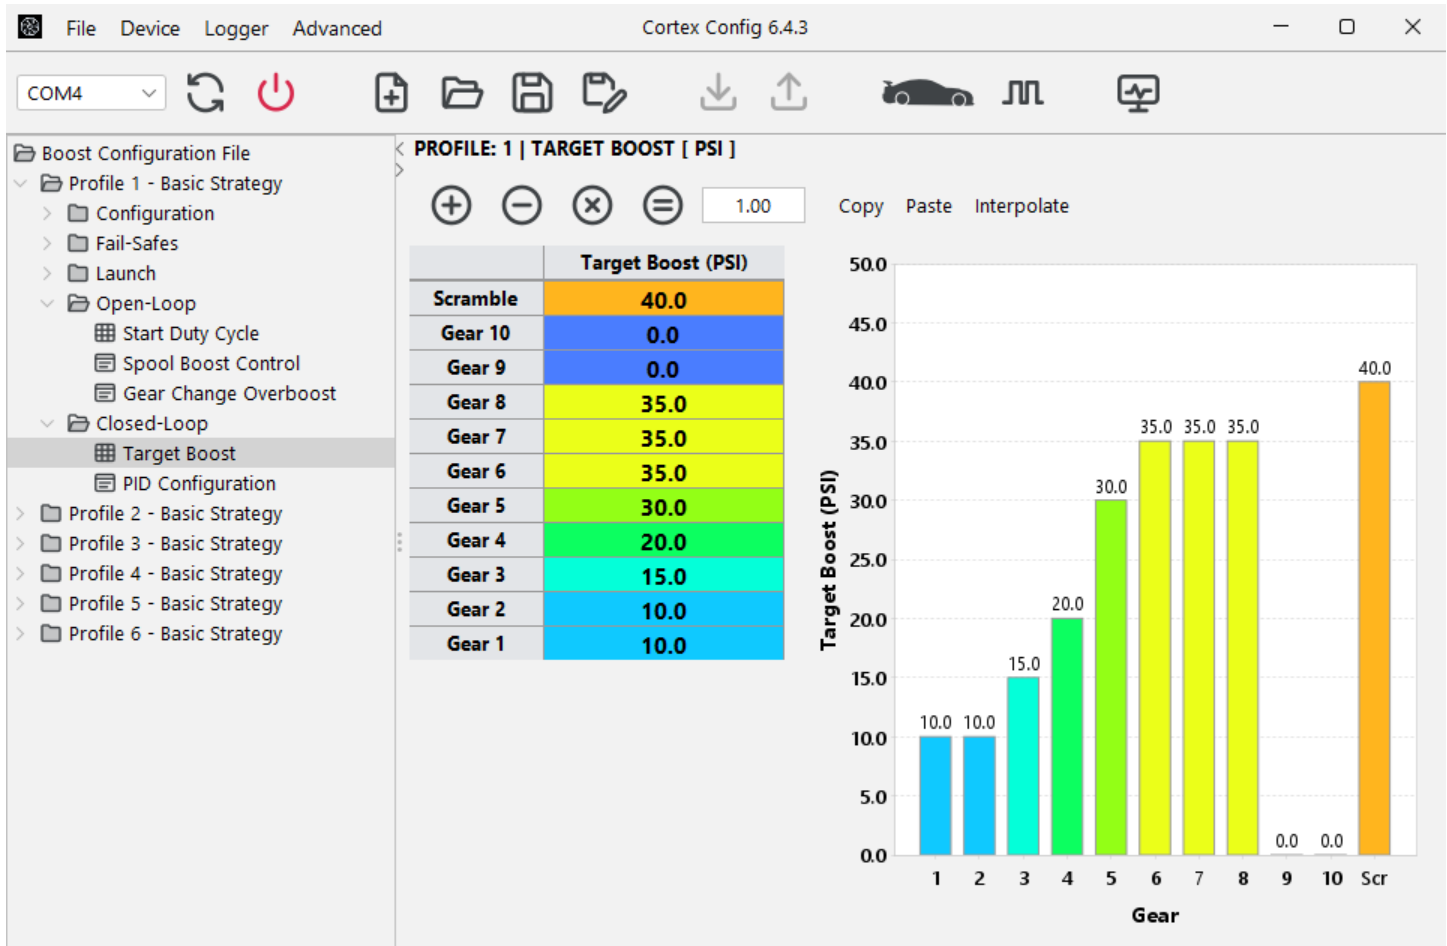

PID CONFIGURATION

The PID configuration parameters are used to configure the general behavior of the three closed-loop control algorithms.

PID Configuration - Profile 1

GEAR 1

GEAR 2

GEAR 3

GEAR 4

GEAR 5

GEAR 6

GEAR 7

GEAR 8

GEAR 9

GEAR 10

SCRAMBLE

☐ Apply Gear 1 changes to all gears

Gear 1

Proportional Control Algorithm

Activate if boost error is less than: PSI

Feedback gain:

Max duty cycle adjustment: %

Integral Control Algorithm

Activate if boost error is less than: PSI

Feedback gain:

Max duty cycle adjustment: %

Derivative Control Algorithm

Activate if boost error is less than: PSI

Feedback gain:

Max duty cycle adjustment: %

Combined Control Limits

Max (+) combined adjustment: %

Max (-) combined adjustment: %

Orange: 0 turns a function off or changes it

Hover over a field to see what 0 does

Done

Cancel

Activate if boost error is less than: PSI

The **Activate if boost error is less than** field sets the boost error threshold under which the corresponding control algorithm will be activated. Boost error is defined as target boost minus actual boost.

For example, if target boost is set to 18.0 PSI and the **Activate if boost error is less than** parameter is set to 2.0 PSI then the corresponding control algorithm will be disabled until boost reaches 16.0 PSI.

Setting this parameter to zero will allow the corresponding control algorithm to activate as soon as boost is greater than 0.0 PSI.

Feedback gain:

The **Feedback gain** field sets the aggressiveness of the duty cycle adjustments made by the corresponding control algorithm. Setting this parameter to zero will disable the corresponding closed-loop boost control algorithm.

Max duty cycle adjustment: %

The **Max duty cycle adjustment** field sets the maximum duty cycle contribution (+/-) of the corresponding control algorithm. Setting this parameter to zero will disable the corresponding closed-loop boost control algorithm.

Max (+) combined adjustment: %
Max (-) combined adjustment: %

The **Max (+) combined adjustment** and **Max (-) combined adjustment** fields set the maximum combined duty cycle contribution from all three control algorithms. Separate limits are provided for positive and negative duty cycle adjustments. Setting the (+) parameter to zero will prevent the closed-loop boost control from making positive duty cycle adjustments. Setting the (-) parameter to zero will prevent the closed-loop boost control from making negative duty cycle adjustments. Setting both parameters to zero will completely disable the closed-loop boost control.

Cortex EBC User Manual 6.4.5 Rev A

SIRHC Labs LLC – 2026

92

CONFIGURATION EXAMPLE – Recommended initial settings for 3-Port BCS

PID Configuration - Profile 1

GEAR 1 GEAR 2 GEAR 3 GEAR 4 GEAR 5 GEAR 6 GEAR 7 GEAR 8 GEAR 9 GEAR 10 SCRAMBLE

☐ Apply Gear 1 changes to all gears

Gear 1

Proportional Control Algorithm
 Activate if boost error is less than: 2.0 PSI
 Feedback gain: 1.0
 Max duty cycle adjustment: 5.0 %

Integral Control Algorithm
 Activate if boost error is less than: 2.0 PSI
 Feedback gain: 5.0
 Max duty cycle adjustment: 10.0 %

Derivative Control Algorithm
 Activate if boost error is less than: 5.0 PSI
 Feedback gain: 2.0
 Max duty cycle adjustment: 10.0 %

Combined Control Limits
 Max (+) combined adjustment: 10.0 %
 Max (-) combined adjustment: 10.0 %

Orange: 0 turns a function off or changes it
 Hover over a field to see what 0 does

Done Cancel

CONFIGURATION EXAMPLE – Recommended initial settings for 4-Port BCS

PID Configuration - Profile 1

GEAR 1 GEAR 2 GEAR 3 GEAR 4 GEAR 5 GEAR 6 GEAR 7 GEAR 8 GEAR 9 GEAR 10 SCRAMBLE

☐ Apply Gear 1 changes to all gears

Gear 1

Proportional Control Algorithm
 Activate if boost error is less than: 2.0 PSI
 Feedback gain: 0.5
 Max duty cycle adjustment: 2.0 %

Integral Control Algorithm
 Activate if boost error is less than: 2.0 PSI
 Feedback gain: 5.0
 Max duty cycle adjustment: 5.0 %

Derivative Control Algorithm
 Activate if boost error is less than: 5.0 PSI
 Feedback gain: 2.0
 Max duty cycle adjustment: 5.0 %

Combined Control Limits
 Max (+) combined adjustment: 5.0 %
 Max (-) combined adjustment: 5.0 %


Orange: 0 turns a function off or changes it
 Hover over a field to see what 0 does

Done Cancel

LAUNCH

The launch boost control function temporarily overrides normal boost control while the vehicle is staged for a launch. This function can be activated based on specific sensor inputs, such as vehicle speed, RPM, or throttle position, or through an external button connected to the Cortex EBC wiring harness.

For the launch boost control function to significantly impact pre-launch boost levels, the vehicle must be equipped with a 2-step rev limiter. In many cases, achieving substantial boost levels before launch also requires adjustments to engine timing and fueling through the ECU/ECM/PCM (anti-lag settings).

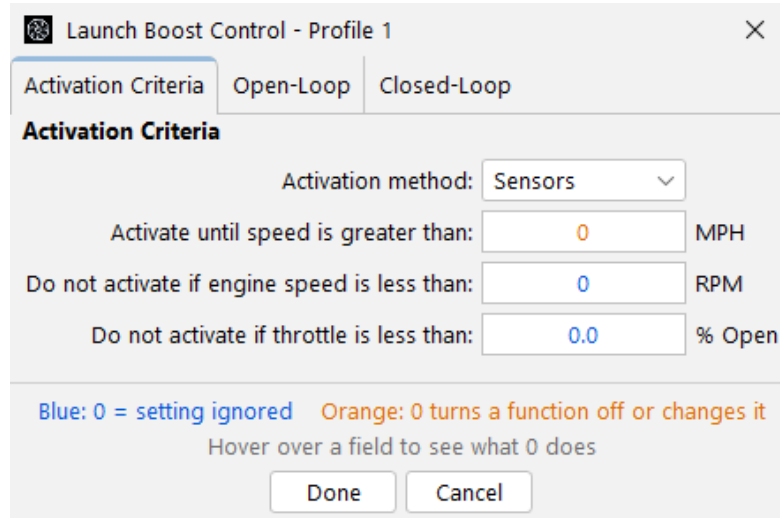

Launch Boost Control - Profile 1

Activation Criteria | Open-Loop | Closed-Loop

Activation Criteria

Activation method: Sensors


Activate until speed is greater than: 0 MPH

Do not activate if engine speed is less than: 0 RPM

Do not activate if throttle is less than: 0.0 % Open

Blue: 0 = setting ignored Orange: 0 turns a function off or changes it
Hover over a field to see what 0 does

Done Cancel

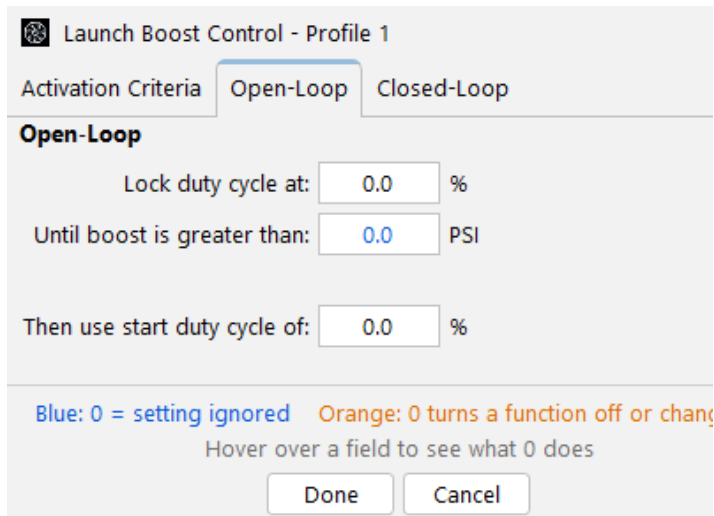

Launch Boost Control - Profile 1

Activation Criteria | Open-Loop | Closed-Loop

Open-Loop


Lock duty cycle at: 0.0 %

Until boost is greater than: 0.0 PSI

Then use start duty cycle of: 0.0 %

Blue: 0 = setting ignored Orange: 0 turns a function off or changes it
Hover over a field to see what 0 does

Done Cancel

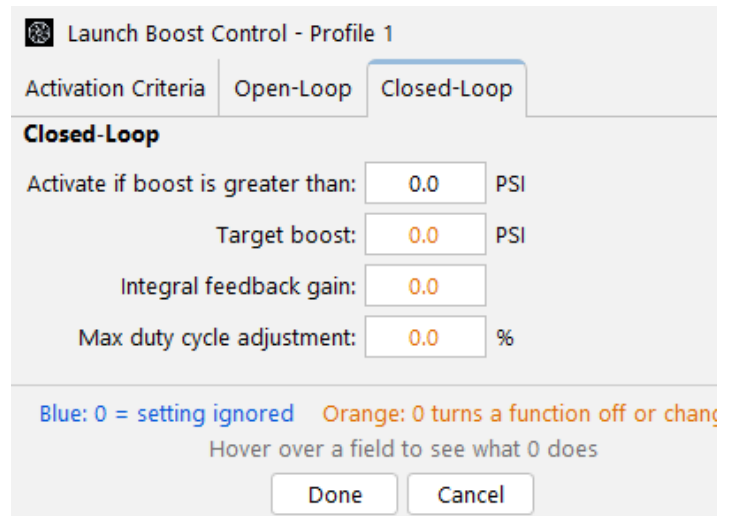

Launch Boost Control - Profile 1

Activation Criteria | Open-Loop | Closed-Loop

Closed-Loop

Activate if boost is greater than: 0.0 PSI

Target boost: 0.0 PSI

Integral feedback gain: 0.0

Max duty cycle adjustment: 0.0 %

Blue: 0 = setting ignored Orange: 0 turns a function off or changes it
Hover over a field to see what 0 does

Done Cancel

Activation method:

The **Activation method** field determines whether launch boost control will be activated based on sensor readings (MPH, RPM, TPS) or activated based on a button press.

- **Sensors** – Launch boost control will be activated until vehicle speed reaches a specified MPH. Additional RPM and/or TPS activation criteria can be optionally used. The speed input must be properly calibrated to provide accurate MPH readings when using this activation method.
- **Button** – Launch boost control will be activated when the transbrake button is pressed.

Activate until speed is greater than: MPH

The **Activate until speed is greater than** field sets the MPH threshold under which the launch boost control will be activated. Setting the threshold to zero will disable the launch boost control function.

NOTE: The speed input must be properly calibrated to provide accurate MPH readings when using this parameter.

Do not activate if engine speed is less than: RPM

The **Do not activate if engine speed is less than** field sets the RPM threshold over which the launch boost control can activate. If this threshold is set to zero it will be ignored by the launch boost control activation logic.

Do not activate if throttle is less than: % Open

The **Do not activate if throttle is less than** field sets the throttle position threshold over which the launch boost control can activate. If this threshold is set to zero it will be ignored by the launch boost control activation logic. A throttle position signal must be connected to the general-purpose input, with its input mode set to Analog Sensor, to use this threshold.

Launch Boost Control - Profile 1

Activation Criteria Open-Loop Closed-Loop

Open-Loop

Lock duty cycle at: 0.0 %

Until boost is greater than: 0.0 PSI

Then use start duty cycle of: 0.0 %

Blue: 0 = setting ignored Orange: 0 turns a function off or changes it
Hover over a field to see what 0 does

Done Cancel

Lock duty cycle at: 0.0 %

Until boost is greater than: 0.0 PSI

The **Lock duty cycle at** and **Until boost is greater than** fields are used to configure the initial boost control stage.

Lock duty cycle at – Sets the constant duty cycle that will be used while the initial boost control stage is enabled (typically 100%).

Until boost is greater than – Sets the threshold above which the initial boost control stage will be disabled and the primary boost control stage will be enabled. Set to a value that is a few PSI below the final target boost level. Setting this threshold to zero will cause the initial boost control stage to be skipped.

Then use start duty cycle of: 0.0 %

The **Then use start duty cycle of** field sets the start duty cycle value that will be used while the primary boost control stage is enabled. Using the process of trial and error, this parameter should be set to the value that gets you as close to target boost as possible without any additional closed-loop adjustments.

 Launch Boost Control - Profile 1
 ✕

Activation Criteria
 Open-Loop
 Closed-Loop

Closed-Loop

Activate if boost is greater than: PSI

Target boost: PSI

Integral feedback gain:

Max duty cycle adjustment: %

Blue: 0 = setting ignored Orange: 0 turns a function off or changes it
 Hover over a field to see what 0 does

Done
 Cancel

Activate if boost is greater than: PSI

The **Activate if boost is greater than** field sets the boost threshold over which the closed-loop control algorithm will be activated in the primary boost control stage.

Target boost: PSI

The **Target boost** field sets the boost level that the closed-loop control algorithm will try to achieve and maintain while the launch boost control function is activated. Setting this field to zero will disable the closed-loop control.

Integral feedback gain:

The **Integral feedback gain** field sets the aggressiveness of the duty cycle adjustments made by the closed-loop control algorithm. Setting this field to zero will disable the closed-loop control.

Max duty cycle adjustment: %

The **Max duty cycle adjustment** field sets the maximum duty cycle contribution (+/-) of the closed-loop control algorithm. Setting this field to zero will disable the closed-loop control.

Launch Boost Control - Profile 1

Activation Criteria

Open-Loop

Closed-Loop

Open-Loop

Lock duty cycle at:

100.0

%

Until boost is greater than:

8.0

PSI

Then use start duty cycle of:

45.0

%

Blue: 0 = setting ignored

Orange: 0 turns a function off or changes it

Hover over a field to see what 0 does

Done

Cancel

OPEN-LOOP CONFIGURATION EXAMPLE:

When the launch boost control function is activated, the duty cycle is set to 100% until the boost reaches 8.0 PSI. Once this threshold is reached, the duty cycle drops to 45% and stays at that level unless the closed-loop control is activated.

Launch Boost Control - Profile 1

Activation Criteria

Open-Loop

Closed-Loop

Closed-Loop

Activate if boost is greater than:

9.0

PSI

Target boost:

10.0

PSI

Integral feedback gain:

8.0

Max duty cycle adjustment:

5.0

%

Blue: 0 = setting ignored

Orange: 0 turns a function off or changes it

Hover over a field to see what 0 does

Done

Cancel

CLOSED-LOOP CONFIGURATION EXAMPLE:

The closed-loop control function activates when the boost reaches 9.0 PSI. At this point, the algorithm targets 10.0 PSI and can adjust the duty cycle by up to 5% in either direction. Based on the open-loop settings above, this allows the duty cycle to range between 40% and 50% to maintain the 10.0 PSI target.

FAIL-SAFES

The Cortex EBC includes three distinct fail-safe functions designed to disable boost control and help protect the engine from potential damage. These fail-safes can be triggered by excessive boost levels or abnormal readings from a sensor connected to the general-purpose input (GPI). When a fail-safe condition is detected, the system will immediately set the solenoid duty cycle to 0.0% to disable boost control. Additionally, the 7-segment LED display will flash, and the controller's internal audio buzzer will emit a continuous beep.

OVERBOOST

The overboost fail-safe is designed to disable boost control when an excessive boost condition occurs. This fail-safe activates whenever the boost pressure exceeds the specified activation threshold. It remains active until the boost pressure drops back below the threshold.

The screenshot shows a software window titled "Overboost Fail-Safe - Profile 1" with a close button (X) in the top right corner. Below the title bar is a horizontal row of tabs labeled "GEAR 1", "GEAR 2", "GEAR 3", "GEAR 4", "GEAR 5", "GEAR 6", "GEAR 7", "GEAR 8", "GEAR 9", "GEAR 10", and "SCRAMBLE". The "GEAR 1" tab is currently selected. To the right of the tabs is a checkbox labeled "Apply Gear 1 changes to all gears". Below the tabs, the text "Activate if boost is greater than:" is followed by a text input field containing "0.0" and the unit "PSI". Below this input field is a message: "Orange: 0 turns a function off or changes it" and "Hover over a field to see what 0 does". At the bottom of the window are two buttons: "Done" and "Cancel".

Activate if boost is greater than: 0.0 PSI

The **Activate if boost is greater than** field sets the boost threshold over which the overboost fail-safe will activate and disable boost control. Setting this threshold to zero will disable the overboost fail-safe in the corresponding gear.


WARNING: It is possible for boost to continue to spike by several PSI after the overboost fail-safe activates if boost is climbing rapidly when the activation threshold is reached.

GPI GENERAL

The GPI general fail-safe can be used to disable boost control based on readings from an analog or digital sensor that is connected to the general-purpose input. Possible applications include air-fuel ratio, fuel pressure, turbo speed, water/methanol pressure or flow, and ethanol content.

The GPI general fail-safe can be configured to activate if the sensor output is below a specified value, above a specified value, or outside a specified range of values (below value 1 or above value 2). A delay period can be added to prevent unwanted fail-safe activation from erroneous readings. This fail-safe will remain activated until the throttle is closed and boost drops back to 0 PSI.

NOTE: The general-purpose input must be properly configured to obtain accurate readings from your sensor for this fail-safe to function as expected. See [this section](#) to learn more about configuring the general-purpose input.

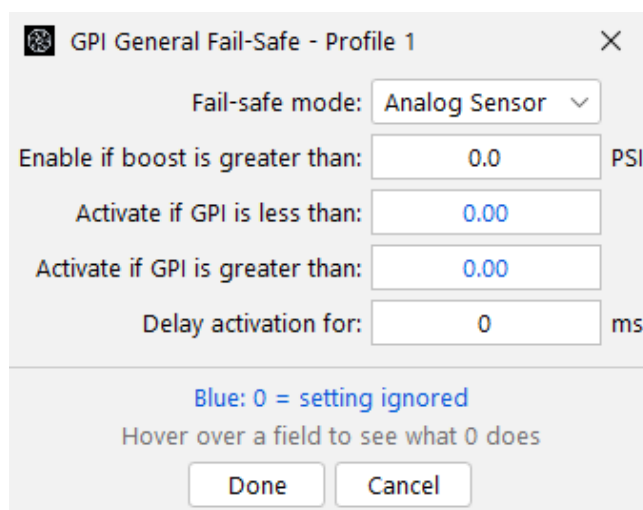

The screenshot shows a configuration window titled "GPI General Fail-Safe - Profile 1" with a close button (X) in the top right corner. The window contains the following settings:

- Fail-safe mode:** A dropdown menu set to "Analog Sensor".
- Enable if boost is greater than:** A text input field containing "0.0" followed by the unit "PSI".
- Activate if GPI is less than:** A text input field containing "0.00" in blue text.
- Activate if GPI is greater than:** A text input field containing "0.00" in blue text.
- Delay activation for:** A text input field containing "0" followed by the unit "ms".

Below the input fields, there is a note in blue text: "Blue: 0 = setting ignored". Below this note is the instruction: "Hover over a field to see what 0 does". At the bottom of the window are two buttons: "Done" and "Cancel".

Fail-safe mode:

The **Fail-safe mode** field sets the operating mode for the GPI general fail-safe.

- **Disabled** – fail-safe is not used
- **Analog Sensor** – fail-safe is used with analog sensor
- **Digital Sensor** – fail-safe is used with digital sensor

NOTE: The mode selected here must match the **Input mode** of the general-purpose input in the Vehicle Configuration window (Analog Sensor or Digital Sensor). If they do not match, the fail-safe will never activate.

Enable if boost is greater than: PSI

The **Enable if boost is greater than** field sets the boost threshold over which the GPI general fail-safe can be activated. The fail-safe will be able to activate at any time the engine is in boost if the threshold is left at 0.0 PSI.

Activate if GPI is less than:
Activate if GPI is greater than:

The **Activate if GPI is less than** and **Activate if GPI is greater than** fields set the sensor output thresholds under and/or over which the fail-safe will activate and disable boost control. If a threshold is set to zero it will be ignored by the fail-safe activation logic. Threshold resolution is 0.01 for analog sensors and 1 for digital sensors.

NOTE: These fields should be set to the actual sensor value that is calculated by the Cortex EBC (not the raw volts or Hz value).

Delay activation for: ms

The **Delay activation for** field sets the number of milliseconds that the sensor readings must be continuously out of the acceptable range before the GPI general fail-safe will activate. The use of this parameter is completely optional, but it is recommended for most applications. A delay of 100 ms is sufficient in most cases.


<div data-bbox="121 115 730 598"> <div>  GPI General Fail-Safe - Profile 1 ✕ </div> <div> <div>Fail-safe mode: Analog Sensor ▾</div> <div> Enable if boost is greater than: 5.0 PSI </div> <div> Activate if GPI is less than: 0.00 </div> <div> Activate if GPI is greater than: 12.00 </div> <div> Delay activation for: 200 ms </div> <div> Blue: 0 = setting ignored Hover over a field to see what 0 does </div> <div> <div>Done</div> <div>Cancel</div> </div> </div> </div>	<p>AIR-FUEL RATIO (AFR) FAIL-SAFE EXAMPLE</p> <p>Activate fail-safe if boost is greater than 5.0 PSI and AFR is leaner than 12.0 for 200 milliseconds.</p>
--	--

<div data-bbox="121 688 730 1171"> <div>  GPI General Fail-Safe - Profile 1 ✕ </div> <div> <div>Fail-safe mode: Digital Sensor ▾</div> <div> Enable if boost is greater than: 5.0 PSI </div> <div> Activate if GPI is less than: 85 </div> <div> Activate if GPI is greater than: 0 </div> <div> Delay activation for: 200 ms </div> <div> Blue: 0 = setting ignored Hover over a field to see what 0 does </div> <div> <div>Done</div> <div>Cancel</div> </div> </div> </div>	<p>ETHANOL CONTENT FAIL-SAFE EXAMPLE</p> <p>Activate fail-safe if boost is greater than 5.0 PSI and ethanol content is less than 85% for 200 milliseconds.</p>
--	--

<div data-bbox="121 1268 730 1751"> <div>  GPI General Fail-Safe - Profile 1 ✕ </div> <div> <div>Fail-safe mode: Analog Sensor ▾</div> <div> Enable if boost is greater than: 5.0 PSI </div> <div> Activate if GPI is less than: 100.00 </div> <div> Activate if GPI is greater than: 220.00 </div> <div> Delay activation for: 200 ms </div> <div> Blue: 0 = setting ignored Hover over a field to see what 0 does </div> <div> <div>Done</div> <div>Cancel</div> </div> </div> </div>	<p>WATER/METHANOL PRESSURE FAIL-SAFE EXAMPLE</p> <p>Activate fail-safe if boost is greater than 5.0 PSI and water/methanol pressure is less than 100 PSI for 200 milliseconds or greater than 220 PSI for 200 milliseconds.</p>
---	---

GPI WATER/METHANOL

The GPI water/methanol fail-safe offers advanced protection against water/methanol injection (WMI) system failures by allowing users to define acceptable operational ranges for the system. These ranges can be configured at up to 11 different points, based on the WMI pump or solenoid duty cycle. If system pressure or flow deviates from these acceptable ranges, the fail-safe will activate, disabling boost control to protect the engine. This fail-safe can engage at any boost level above 0 PSI and will remain active until the throttle is closed and boost pressure returns to 0 PSI

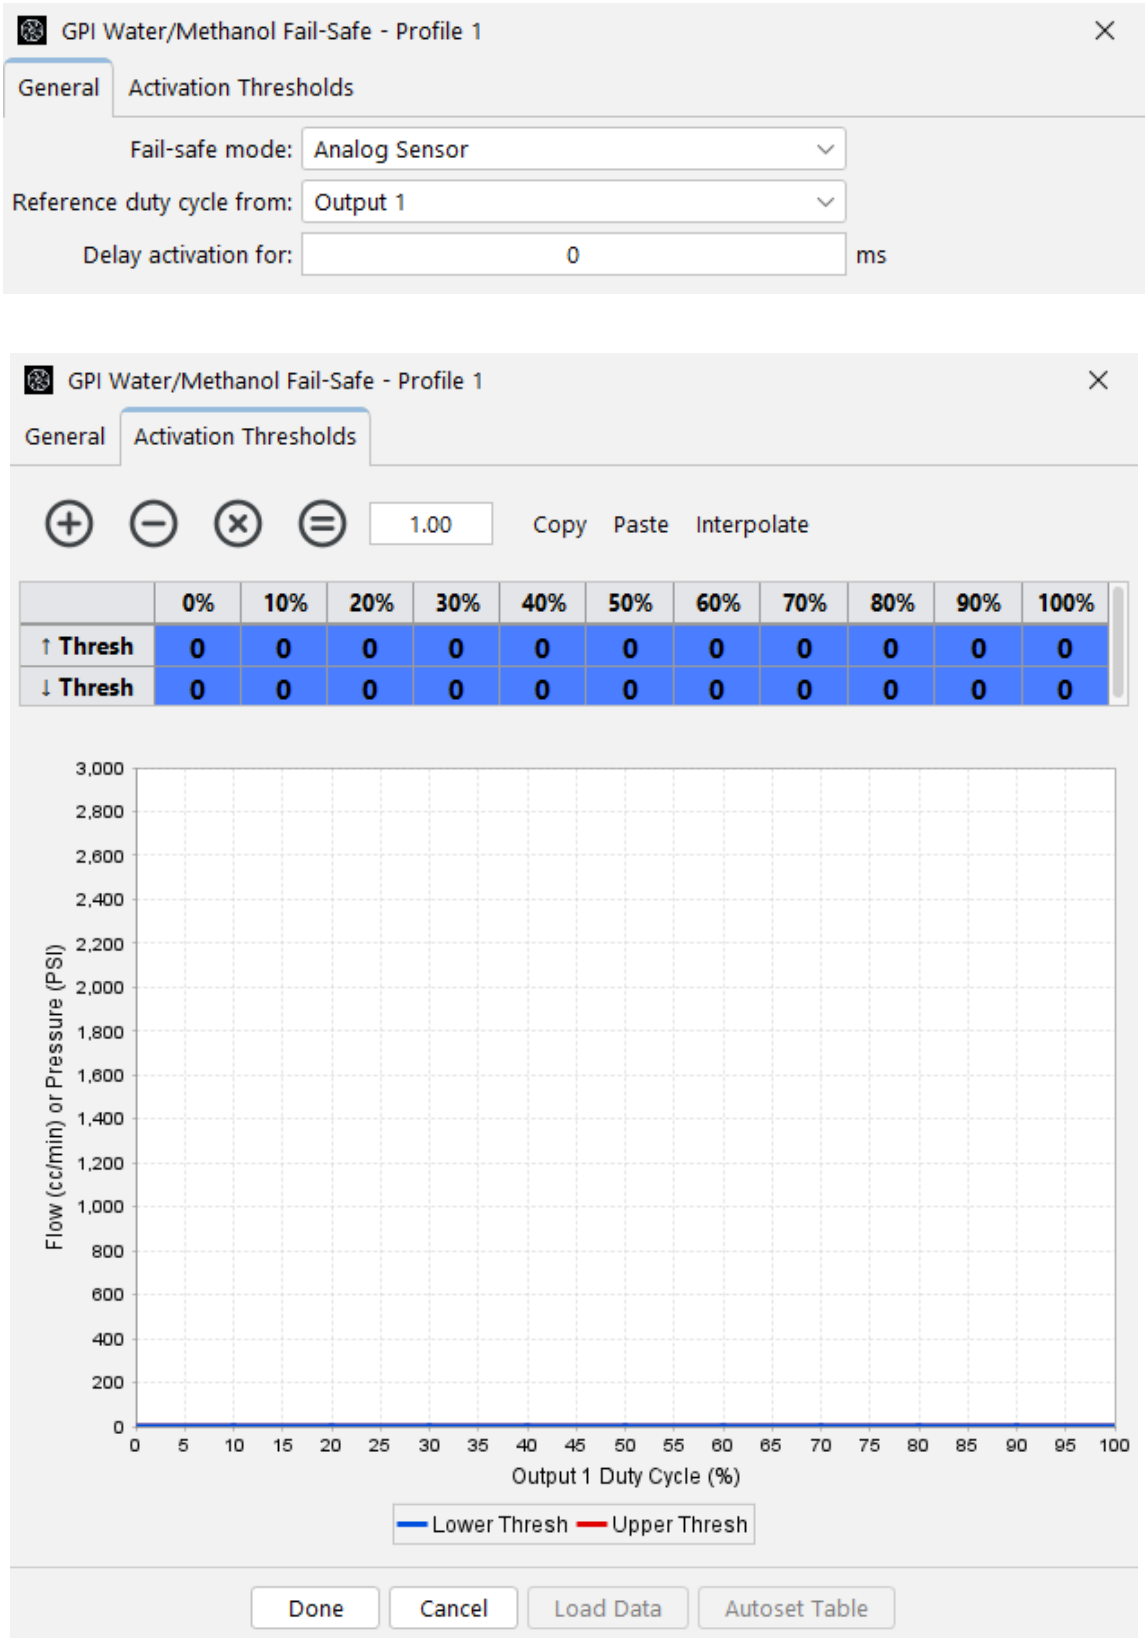

Fail-safe mode: Disabled

The **Fail-safe mode** field sets the operational mode for the GPI water/methanol fail-safe.

- **Disabled** – fail-safe is not used
- **Analog Sensor** – fail-safe is used with analog sensor (pressure)
- **Digital Sensor** – fail-safe is used with digital sensor (flow)

NOTE: The mode selected here must match the **Input mode** of the general-purpose input in the Vehicle Configuration window (Analog Sensor or Digital Sensor). If they do not match, the fail-safe will never activate.

Reference duty cycle from: Output 1

The **Reference duty cycle from** field sets the auxiliary output that the fail-safe will reference duty cycle from. Set to match the Cortex EBC output (1 or 2) that provides PWM control to your WMI pump or high-speed WMI solenoid.

Delay activation for: 0 ms

The **Delay activation for** field sets the number of milliseconds that the WMI pressure or flow readings must be continuously out of the acceptable range before the GPI water/methanol fail-safe will activate. The use of this parameter is completely optional, but it is recommended for most applications. A delay of 100 ms is sufficient in most cases.

	0%	10%	20%	30%	40%	50%	60%	70%	80%	90%	100%
↑ Thresh	0	0	0	0	0	0	0	0	0	0	0
↓ Thresh	0	0	0	0	0	0	0	0	0	0	0

The table in the Activation Thresholds tab of the GPI Water/Methanol Configuration window is used to set the upper and lower thresholds for acceptable pressure/flow.

ADDITIONAL NOTES FOR BOOST BY RPM

A boost by RPM control strategy is typically used to reduce boost fluctuations caused by increasing engine speeds, to reduce boost at high engine speeds because of fuel system limitations, or to reduce boost (and therefore torque) at low engine speeds to prevent engine damage. Boost by RPM is most effective when it is set on a gear-by-gear basis (boost-by-RPM per gear).

General open-loop tuning procedure to flatten boost curve:

1. Set all cells in the start duty cycle table to 20%.
2. Gradually increase the start duty cycle uniformly across all table cells until the peak boost level matches your target boost level.
3. Increase the start duty cycle specifically in the cells where the actual boost is still below the target boost level.
4. Continue adjusting the start duty cycle in the relevant cells until you achieve a flat boost curve. As you progress, the number of cells requiring modifications should decrease, indicating you're on the right track.

ADDITIONAL NOTES FOR BOOST BY SPEED

In most cases, gear detection should be disabled when using a speed-based boost control strategy. This is because each gear only covers a limited range of speeds, meaning only a small portion of the table cells are used in each gear. Disabling gear detection causes the controller to default to the 1st gear settings, allowing you to use a single start duty cycle and target boost table instead of dividing adjustments across multiple small table segments.

To disable gear detection, set all EVS ratio values in the vehicle configuration file to zero.

ADDITIONAL NOTES FOR BOOST BY TIME

The gear detection will be automatically disabled when using a time-based boost control strategy.

The launch boost control function must be used to activate the time-based control sequence.

The controller will continue to use the final start duty cycle and target boost table cells once the end of the time-based sequence has been reached. However, the boost control solenoid will automatically be disabled after 20 seconds.

ADDITIONAL NOTES FOR COMPRESSED AIR BOOST CONTROL

When using compressed air for boost control, the maximum boost level is determined by the setting of your air regulator. For instance, if the regulator is set to 20 PSI, you can put 20 PSI of pressure "on the dome" at 100% duty cycle. Ideally, this would result in a boost level 20 PSI higher than the spring pressure. In practice, however, the actual boost level will be lower than this.

AUXILIARY OUTPUTS

The Cortex EBC provides two programmable outputs capable of controlling various devices using either basic on/off operation or progressive PWM control. The outputs can be activated based on boost pressure, engine speed, vehicle speed, general-purpose input, and gear. The outputs can be configured to activate if a parameter is above a specified value, below a specified value, or within a specified range of values (above value 1 and below value 2). If multiple parameters are included in the activation criteria, then all parameters must be within their valid activation ranges for the output to activate.

Two optional time limitations can be used to limit the amount of time that an output can be activated. The first limiter defines the maximum continuous activation time once the criteria are met. For instance, this can deliver a 1-second pulse for an air shifter. The second limiter sets the cumulative activation time within a defined interval, which is useful for devices like intercooler or radiator sprayers—e.g., limiting spray to 1 minute within a 5-minute window.

Additionally, each output includes an alternative function mode for specific applications. The alternate mode for output 1 enables transbrake bump control. For output 2, the alternate mode links it to output 1, causing output 2 to activate at 100% duty cycle (fully on) whenever the output 1 duty cycle is greater than zero.

See [this section](#) for information on auxiliary output wiring.

See [this section](#) to learn how to enable the auxiliary outputs.

PRIMARY OUTPUT ACTIVATION CRITERIA

Boost Activation Boost activation logic mode: <input type="text" value="Enabled"/> Activate if boost is greater than or equal to: <input type="text" value="0.0"/> PSI Deactivate if boost is greater than or equal to: <input type="text" value="0.0"/> PSI	RPM Activation RPM activation logic mode: <input type="text" value="Enabled"/> Activate if RPM is greater than or equal to: <input type="text" value="0"/> RPM Deactivate if RPM is greater than or equal to: <input type="text" value="0"/> RPM
GPI Activation GPI activation logic mode: <input type="text" value="Analog"/> Activate if GPI is greater than or equal to: <input type="text" value="0.00"/> Deactivate if GPI is greater than or equal to: <input type="text" value="0.00"/>	MPH Activation MPH activation logic mode: <input type="text" value="Enabled"/> Activate if MPH is greater than or equal to: <input type="text" value="0"/> MPH Deactivate if MPH is greater than or equal to: <input type="text" value="0"/> MPH

Boost activation logic mode:

The **Boost activation logic mode** field is used to determine if boost information is included in the activation logic for the corresponding output.

- **Disabled** – Do not include boost in output activation logic.

Enabled – Include boost in output activation logic.

NOTE: If all four activation logic modes (boost, RPM, GPI and MPH) are set to Disabled, the output will never activate.

Activate if boost is greater than or equal to:	<input type="text" value="0.0"/>	PSI
Deactivate if boost is greater than or equal to:	<input type="text" value="0.0"/>	PSI

The **Activate if boost is greater than or equal to** and **Deactivate if boost is greater than or equal to** fields set the boost thresholds over and/or under which the corresponding output can be activated. If the **Deactivate if boost is greater than or equal to** threshold is set to zero it will be ignored by the output activation logic. If both thresholds are set to zero it will allow the output to activate at any boost level.

RPM activation logic mode:

The **RPM activation logic mode** field is used to determine if engine speed information is included in the activation logic for the corresponding output.

- **Disabled** – Do not include engine speed in output activation logic.

Enabled – Include engine speed in output activation logic.

NOTE: If all four activation logic modes (boost, RPM, GPI and MPH) are set to Disabled, the output will never activate.

Activate if RPM is greater than or equal to:	<input type="text" value="0"/>	RPM
Deactivate if RPM is greater than or equal to:	<input type="text" value="0"/>	RPM

The **Activate if RPM is greater than or equal to** and **Deactivate if RPM is greater than or equal to** fields set the RPM thresholds over and/or under which the corresponding output can be activated. If the **Deactivate if RPM is greater than or equal to** threshold is set to zero it will be ignored by the output activation logic. If both thresholds are set to zero it will allow the output to activate at any engine speed.

GPI activation logic mode: Disabled ▾

The **GPI activation logic mode** field is used to determine if general-purpose input (GPI) information is included in the activation logic for the corresponding output.

- **Disabled** – Do not include GPI in output activation logic.
- **Analog** – Include GPI information from analog sensor in output activation logic.

Digital – Include GPI information from digital sensor in output activation logic.

NOTE: The mode selected here must match the **Input mode** of the general-purpose input in the Vehicle Configuration window (Analog Sensor or Digital Sensor). If they do not match, GPI is left out of the output activation logic. If all four activation logic modes (boost, RPM, GPI and MPH) are set to Disabled, the output will never activate.

Activate if GPI is greater than or equal to:	0.00
Deactivate if GPI is greater than or equal to:	0.00

The **Activate if GPI is greater than or equal to** and **Deactivate if GPI is greater than or equal to** fields set the GPI thresholds over and/or under which the corresponding output can be activated. If the **Deactivate if GPI is greater than or equal to** threshold is set to zero it will be ignored by the output activation logic. If both thresholds are set to zero it will allow the output to activate at any sensor level. Threshold resolution is 0.01 for analog sensors and 1 for digital sensors.

NOTE: These fields should be set to the actual sensor value that is calculated by the Cortex EBC (not the raw volts or Hz value).

MPH activation logic mode: Disabled ▾

The **MPH activation logic mode** field is used to determine if speed information is included in the activation logic for the corresponding output.

- **Disabled** – Do not include speed in output activation logic.

Enabled – Include speed in output activation logic.

NOTE: If all four activation logic modes (boost, RPM, GPI and MPH) are set to Disabled, the output will never activate.

Activate if MPH is greater than or equal to:	0	MPH
Deactivate if MPH is greater than or equal to:	0	MPH

The **Activate if MPH is greater than or equal to** and **Deactivate if MPH is greater than or equal to** fields set the MPH thresholds over and/or under which the corresponding output can be activated. If the **Deactivate if MPH is greater than or equal to** threshold is set to zero it will be ignored by the output activation logic. If both thresholds are set to zero it will allow the output to activate at any speed.

Gear Activation

Activate in gear 1: ☐

Activate in gear 2: ☐

Activate in gear 3: ☐

Activate in gear 4: ☐

Activate in gear 5: ☐

Activate in gear 6: ☐

Activate in gear 7: ☐

Activate in gear 8: ☐

Activate in gear 9: ☐

Activate in gear 10: ☐

Activate in scramble: ☐

Activation Time Limits

Time activation limit mode: Both

Limit single activation time to: 0 s

Limit total activation time to: 0 s

Reset total activation count every: 0 min

Activate in gear 1: ☐

The **Activate in gear X** field is used to determine which gears the corresponding output can activate in.

- Unselected** – Output cannot activate in the corresponding gear.
- Selected** – Output can activate in the corresponding gear.

NOTE: If the gear detection is not configured the **Activate in gear 1** box must still be checked or the output will never activate.

Time activation limit mode: Disabled

The **Time activation limit mode** field sets the operating mode for the time-based activation limit function.

- Disabled** – No limit on the amount of time that the corresponding output can be activated.
- Single** – Limit the duration of a single activation on the corresponding output.
- Total** – Limit the total amount of time that the corresponding output can be activated during a specified number of minutes.
- Both** – Limit both the single activation time and total activation time on the corresponding output.

Limit single activation time to: 0 s

The **Limit single activation time to** field sets the total number of seconds that a single output activation event can last for. If the single activation time limit is utilized, then setting this parameter to zero will completely disable the corresponding output.

Limit total activation time to: 0 s

Reset total activation count every: 0 min

The **Limit total activation time to** and **Reset total activation count every** fields determine the limits on the total amount of time the output can be activated for. The **Limit total activation time to** parameter sets the maximum number of seconds that the output can be activated for. This count will be paused while the output is not activated and resumed whenever the output is activated. The **Reset total activation count every** period begins when the output first activates. When that number of minutes has passed, the count is reset to zero and a new period begins the next time the output activates. If the total activation time limit is utilized, then setting either of these parameters to zero will completely disable the corresponding output.

Output 1 Alternate Function

Transbrake bump control mode:

Interrupt transbrake for: ms

Transbrake bump control mode:

The **Transbrake bump control mode** field sets the operating mode for the transbrake bump control function available on output 1.

- **Disabled** – Transbrake bump control is disabled and output 1 will operate normally.
- **Enabled** – Transbrake bump control is enabled and output 1 will function as a bump box.

Interrupt transbrake for: ms

The **Interrupt transbrake for** field sets the number of milliseconds that the transbrake will be interrupted for each time the bump button is pressed. Setting this parameter to zero will prevent the transbrake bump control function from operating.

NOTE: Most solenoids will require a minimum interrupt time of 5-20 milliseconds before they will begin to release.

Output 2 Alternate Function

Output 1 follower mode:

Output 1 follower mode:

The **Output 1 follower mode** field sets the operating mode for the output 1 follower function available on output 2.

- **Disabled** – Output 1 follower is disabled and output 2 will operate normally.
- **Enabled** – Output 1 follower is enabled and output 2 will be set to 100% duty cycle whenever output 1 is activated.

PWM CONFIGURATION

Global PWM Configuration

PWM frequency: Hz

PWM frequency: Hz

The **PWM frequency** field sets the frequency for the PWM signal produced on both outputs. This parameter should be set to an appropriate frequency for the devices being controlled by the outputs. To utilize progressive control on both outputs the devices connected to the outputs must be able to operate at the same PWM frequency.

Output 1 PWM Configuration

Output control strategy: 2D Linear Ramp ▾

2D ramp reference: RPM ▾

Initial duty cycle: 0 %

Final duty cycle: 0 %

Ramp duty cycle at: 0 %

Per: 0

X-axis reference: RPM ▾

X-axis min value: 0

X-axis step size: 0

Y-axis reference: RPM ▾

Y-axis min value: 0

Y-axis step size: 0

Output control strategy: On/Off ▾

The **Output control strategy** field sets the general method of progressive control that will be used by the corresponding output.

- **On/Off** – Progressive control is disabled. The output will simply turn on and off based on the activation criteria.
- **2D Linear Ramp** – Progressive control is enabled. When the activation criteria are met the output duty cycle will be linearly ramped between two control points.
- **3D Table** – Progressive control is enabled. When the activation criteria are met the output duty cycle will be determined by a 16 x 24 cell 3D table.

2D ramp reference: RPM ▾

The **2D ramp reference** field sets the type of data that will be referenced for progressive control by the 2D Linear Ramp control strategy. Possible data types are RPM, Speed, GPI (General-Purpose Input), Boost, or Time.

NOTE: If the **2D ramp reference** is set to RPM, Speed, GPI, or Boost this parameter must also be included in the activation criteria for the corresponding output.

Initial duty cycle: 0 %

Final duty cycle: 0 %

The **Initial duty cycle** and **Final duty cycle** field sets the minimum and maximum duty cycles that can be generated on the corresponding output by the 2D Linear Ramp control strategy. Both increasing and decreasing ramps are supported. If the duty cycle ramp is referenced to RPM, speed, GPI, or boost then the **Initial duty cycle** will be applied at the activation threshold for the referenced parameter.

Ramp duty cycle at: 0 %

Per: 0

The **Ramp duty cycle at** and **Per** fields set the rate at which duty cycle will be ramped up or down by the 2D Linear Ramp control strategy. For example, if the duty cycle is referenced to boost, and the **Ramp duty cycle at** and **Per** parameters are both set to 1, then the output duty cycle will be change at a rate of 1% per 1 PSI change in boost.

X-axis reference: RPM



The ***X-axis reference*** field sets the type of data that will be referenced by the x-axis of the 3D output control tables. Possible data types are RPM, Speed, GPI (General-Purpose Input), and Boost.

X-axis min value:

1000

X-axis step size:

500

The ***X-axis min value*** and ***X-axis step size*** fields determine the scaling of the 16 control points on the x-axis of the 3D output control tables. The first parameter sets the value of the initial control point, and the second parameter sets the spacing between all the subsequent control points. The first and last control points will continue to be used for output control in situations that are outside of the axis bounds.

Y-axis reference: Boost



The ***Y-axis reference*** field sets the type of data that will be referenced by the y-axis of the 3D output control tables. Possible data types are RPM, Speed, GPI (General-Purpose Input), and Boost.

Y-axis min value:

0.5

Y-axis step size:

0.5

The ***Y-axis min value*** and ***Y-axis step size*** fields determine the scaling of the 24 control points on the y-axis of the 3D output control tables. The first parameter sets the value of the initial control point, and the second parameter sets the spacing between all the subsequent control points. The first and last control points will continue to be used for output control in situations that are outside of the axis bounds.

SUPPORT

For technical support, warranty assistance, or questions about the Cortex EBC not covered in this manual, contact SIRHC Labs at info@sirhclabs.com or visit sirhclabs.com.